

Trainings ▾

Preparatory Steps


- Remove the rocker lever cover. Refer to Procedure 003-011 (/qs3/pubsys2/xml/en/procedures/18/18-003-011-tr.html).
- Remove the rocker lever assembly. Refer to Procedure 003-009 (/qs3/pubsys2/xml/en/procedures/18/18-003-009-tr.html).



Remove

Mark the push rods, so they can be installed in their original position.


Remove the push rods and crossheads.

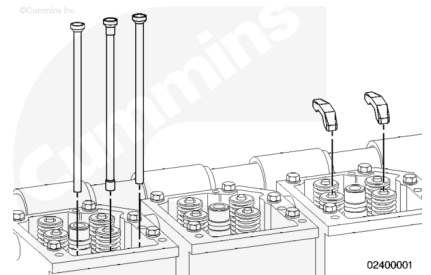

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

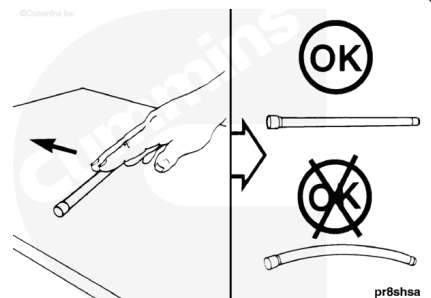

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the push rods with solvent and dry with compressed air.

Inspect the push rod for bends by rolling it across a level surface.


Do **not** try to straighten a bent push rod.

If the push rod is bent, it **must** be replaced.

Inspect both ends of the push rods for wear or damage.

Replace both the rocker lever adjusting screw and push rod if the socket surface in the push rod or on the adjusting screw is damaged.

The cam follower assembly **must** be replaced if the push rod is worn or damaged in the area where it contacts the socket.

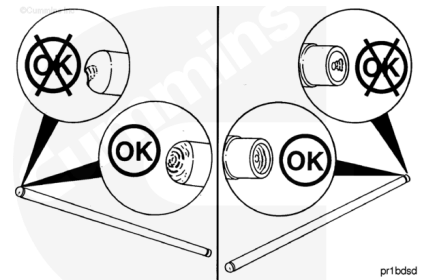

Install


The injector push rods are thinner in the middle. The valve push rods are the same thickness for both the intake and exhaust.

Lubricate the sockets in the cam followers with clean engine oil.

Install the push rods.

Make sure the push rods are seated correctly in the cam followers.

Install the crossheads.

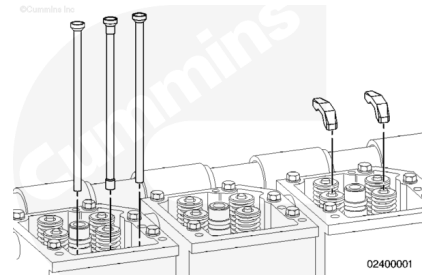

Finishing Steps

- Install the rocker lever assembly. Refer to Procedure 003-009 (</qs3/pubsys2/xml/en/procedures/18/18-003-009-tr.html>).

- Adjust the overhead. Refer to Procedure 003-006 (/qs3/pubsys2/xml/en/procedures/18/18-003-006-tr.html) or Refer to Procedure 003-007 (/qs3/pubsys2/xml/en/procedures/18/18-003-007-tr.html).
- Install the rocker lever cover. Refer to Procedure 003-011 (/qs3/pubsys2/xml/en/procedures/18/18-003-011-tr.html).

