


Fault Code: 145

Coolant Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 145 PID(P): P110 SPN: 110 FMI: 4 Lamp: Yellow SRT: 00-356	Coolant Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source	Possible white smoke. No engine protection for coolant temperature. Centinel system may be disabled.

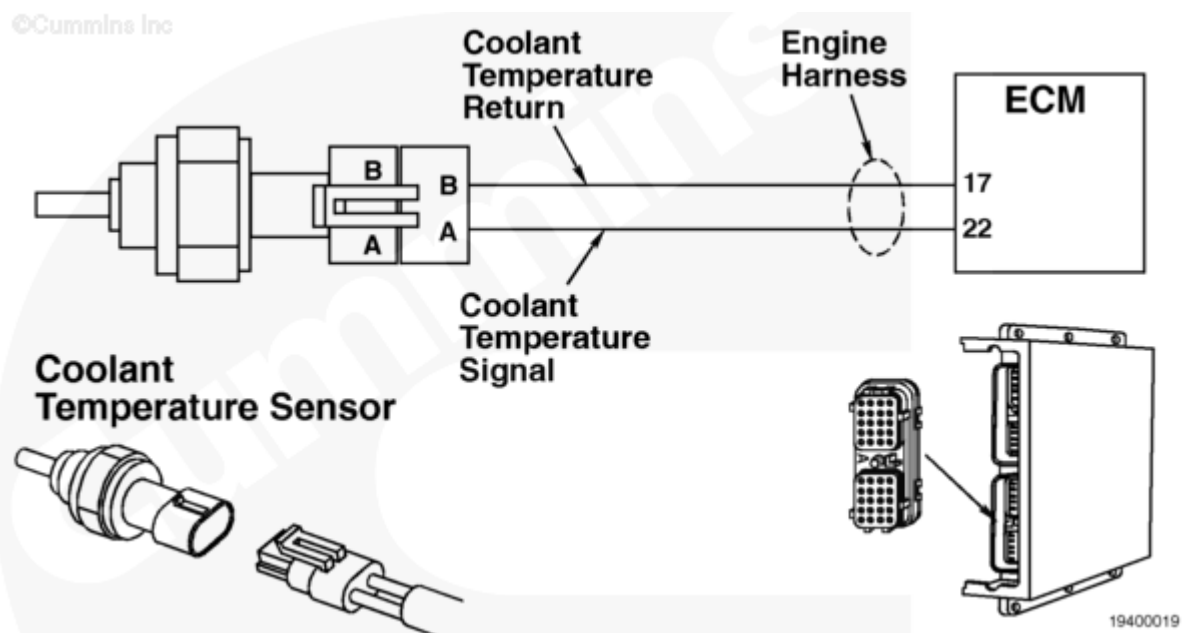

Coolant Temperature Sensor Circuit

Circuit Description

The engine coolant temperature sensor is used by the electronic control module (ECM) to monitor the temperature of the engine coolant. The engine coolant temperature is used by the ECM for the engine protection system, timing, and fueling control.

Component Location

The coolant temperature sensor is located on the side of the thermostat housing on most applications. Refer to Section E for a detailed component location view.

Shoptalk

All temperature sensors:

Temperature (°C)	Temperature (°F)	Resistance (ohms)
0	32	30k to 36k
25	77	9k to 11k
50	122	3k to 4k
75	167	1350 to 1500
100	212	600 to 675

The resistance of the sensor varies with temperature. The reading that you observe will compare to the table is the sensor is functioning properly.

Fault Code 145 can be caused by the following:

- Open voltage line
- Signal line shorted to ground
- Shorted sensor.

Refer to Troubleshooting Fault Code t05-145 (</qs3/pubsys2/xml/en/procedures/19/19-t05-145.html>)

Last Modified: 19-Aug-2010
