


Trainings ▾

Install

Make sure there is a new o-ring (3) on the end cap of the new element (4).

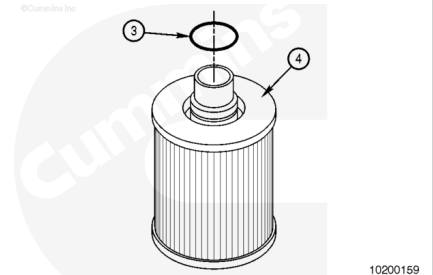

Install a new o-ring (5) onto the bottom of the head assembly (6), as needed.

Install the new element pushing the end cap into the hole in the bottom of the head assembly (6).

Install the canister on the bottom of the head assembly.

Align the latches.

Hook the four latches and snap closed.

