


Trainings ▾

Remove

Automotive with CM875, CM870 and CM570

Loosen the V-Band clamp between the EGR cooler and the EGR valve. When removing the V-Band clamp, do **not** damage the EGR connection tube.

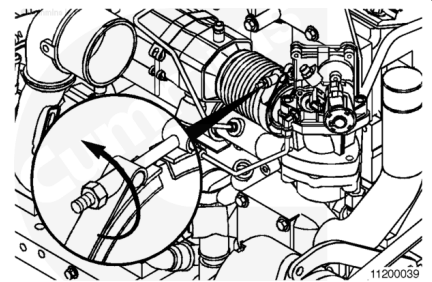


⚠ CAUTION ⚠

The straps on the EGR cooler are not serviceable. Adjusting or removing the straps can damage the EGR cooler.

Remove the five capscrews that attach the EGR cooler to the intake manifold.

Remove the EGR cooler assembly from the engine.


Use protective caps from the ISM Clean Care Kit, Part Number 4919404, to cover open connection points on both the EGR cooler and EGR plumbing.

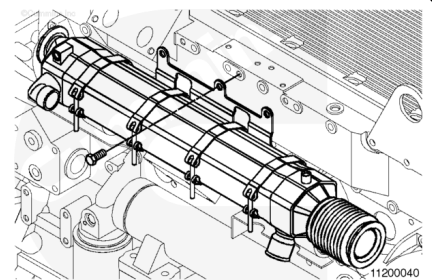

Automotive with CM876

Loosen the V-Band clamp between the EGR cooler and the exhaust manifold.


To prevent damage to the EGR cooler bellows, place the V-Band clamp over the exhaust manifold flange.

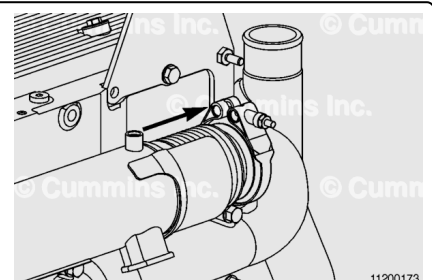

Remove the five capscrews that attach the EGR cooler to the intake manifold.

Remove the EGR cooler assembly from the engine.

Use protective caps from the ISM Clean Care Kit, Part Number 4919404, to cover open connection points on both the EGR cooler and EGR plumbing.

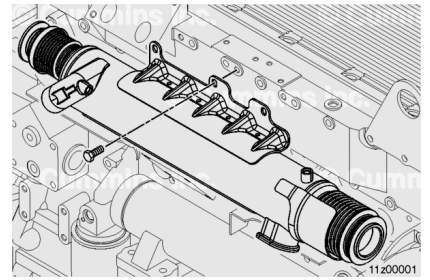

Last Modified: 16-Nov-2016
