


Trainings ▾


Remove

Remove capscrews 1 and 2 and install two guide pins, Part Number 3376697.

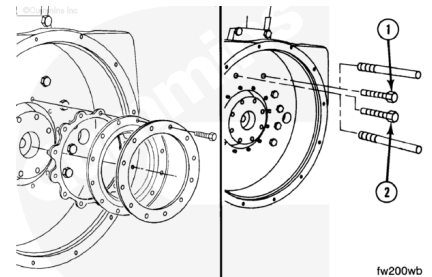

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

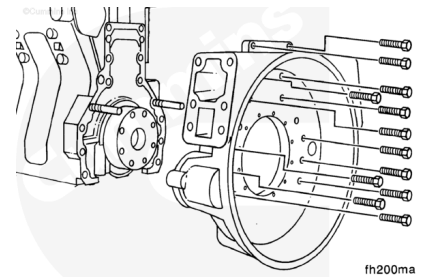

Remove the remaining capscrews.

Use a rubber hammer to loosen the flywheel housing.

Do **not** damage the rear of the oil pan gasket when removing the flywheel housing.

Remove the flywheel housing.