

Trainings ▾


Install

Front Gear Train

Bosch®; and Stanadyne Rotary Pumps

Install the tail support bracket finger-tight before final tightening.


Note : Tighten bracket to block before tightening the bracket to the pump.

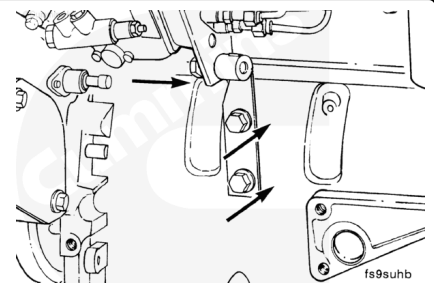

10 mm

Tighten capscrew and bracket to the injection pump (2) first; then the capscrews to the bracket and block (1).


Torque Value: 24 n•m [18 ft-lb]

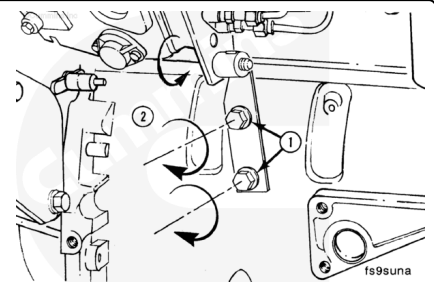

In-line Fuel Injection Pumps

Install the tail support bracket finger-tight before final tightening.


Note : Tighten bracket to block before tightening the bracket to the pump.

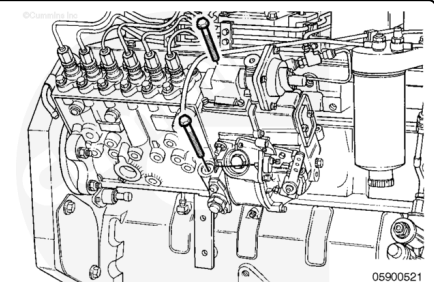

10 mm

Tighten bracket to the block (1) first; then to the injection pump (2).

Torque Value: 24 n•m [18 ft-lb]

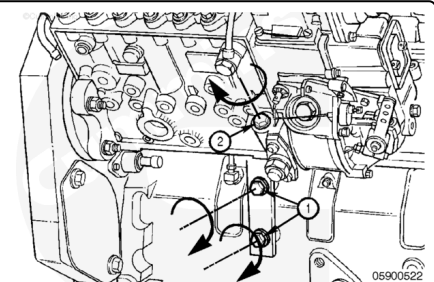

Four-Cylinder

Install the tail support bracket finger-tight before final tightening.


Note : Tighten bracket to block before tightening the bracket to the pump.

Tighten the capscrews (2) which mount the support bracket assembly to the engine block.

Tighten the capscrews (1) which mount support bracket assembly to fuel pump.

Torque Value: 24 n•m [18 ft-lb]


Note : Not all four cylinder engines are equipped with this style bracket. If the engine is equipped with a two piece bracket, install the bolts as depicted.

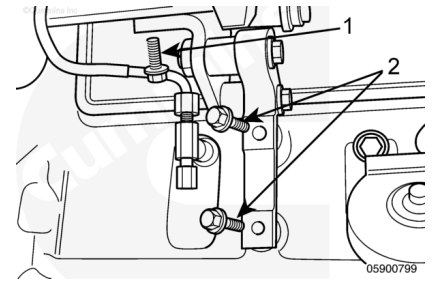

Rear Gear Train

Install the tail support bracket finger-tight before final tightening.

Note : Tighten bracket to block before tightening the bracket to the pump.

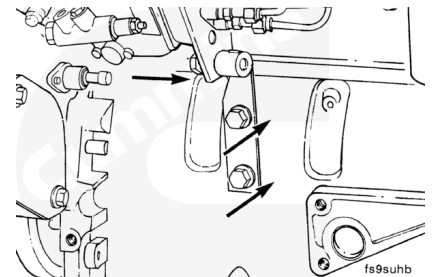

10 mm

Tighten capscrew and bracket to the injection pump (2) first; then the capscrews to the bracket and block (1).

Torque Value: 24 n•m [18 ft-lb]

