


Trainings ▾

Assemble

Apply threadlocker, Part Number 3375068, or equivalent, to the filter adapter threads that are engaging the fuel filter head **only**.

Install dual filter adapter, if equipped.

Torque Value: 60 n•m [44 ft-lb]

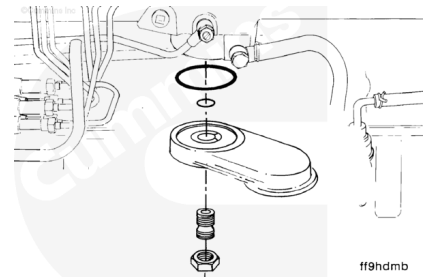


Install

Front Gear Train

Install the fuel filter head.

Tighten the two retaining capscrews.

Torque Value: 24 n•m [18 ft-lb]

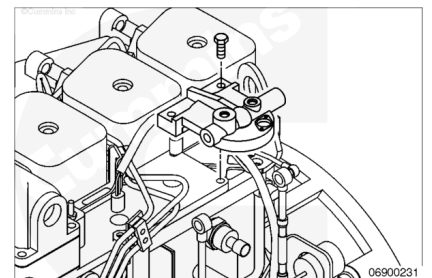

Rear Gear Train

Install the fuel filter head bracket on the engine. Finger tighten the two M10 capscrews to the head and the remaining M8 capscrews into the cylinder block.

Tighten the fuel filter head bracket capscrews.

Torque Value:


M8

1. 23 n•m [17 ft-lb]

Torque Value:

M10

1. 45 n•m [33 ft-lb]

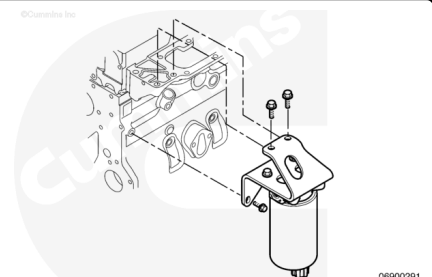

Last Modified: 29-Jan-2015
