


Trainings ▾

Calibrate

Note : This procedure must begin with the oil pan drained. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/40/40-007-037.html>).

Install the dipstick in the dipstick tube housing.

Use clean lubricating engine oil to fill the oil pan to the specified "low" oil level. Refer to Procedure 018-017 (</qs3/pubsys2/xml/en/procedures/40/40-018-017-tr.html>) (Lubricating Oil System - Specifications) in Section V for the correct engine oil capacity.

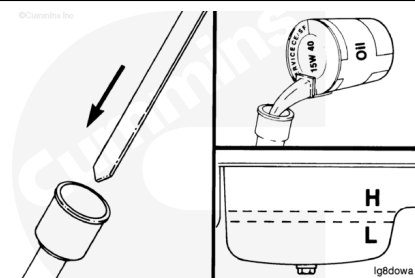


⚠ CAUTION ⚠

Use care when marking the dipstick, or the dipstick will break if the scribe mark is too deep.


Remove the dipstick and scribe a mark across the stick at the oil level. Label the mark with an "L" to indicate the "low" oil level.

Note : If a new blank dipstick is being used, cut the dipstick off approximately 38 mm [1.5 in] below the "low" oil level mark.

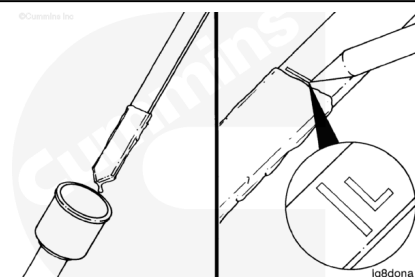


Wipe off the dipstick, and install it in the dipstick tube housing.

Fill the oil pan to the specified "high" oil level. Refer to Procedure 018-017 (</qs3/pubsys2/xml/en/procedures/40/40-018-017-tr.html>) (Lubricating Oil System - Specifications) in Section V for the correct engine oil capacity.

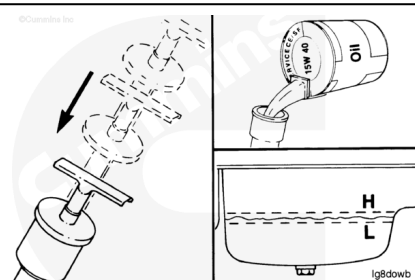

Remove the dipstick, and scribe a mark across the stick at the oil level. Label the mark with an "H" to indicate the "high" oil level.

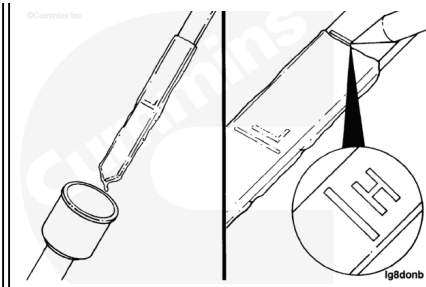

Last Modified: 24-Apr-2006