


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries.

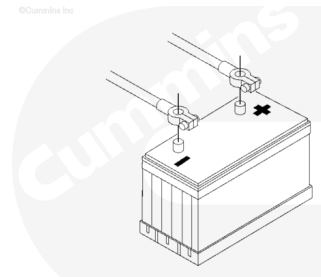

13900050

⚠ WARNING ⚠

Coolant is toxic. Keep away from pets and children. If not reused, dispose of in accordance with local environmental regulations.

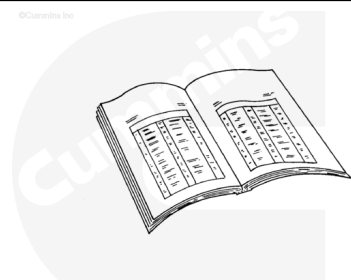

ck800wa


⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the temperature is below 50°C [122°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.


- Drain the coolant. Refer to Procedure 008-018 (Cooling System) in Section 8.
(</qs3/pubsys2/xml/en/procedures/40/40-008-018-tr.html>)

Remove

Disconnect the temperature sensor wiring.

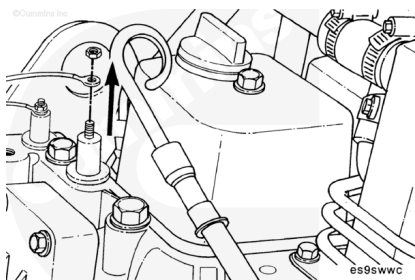


Remove the temperature sensor.

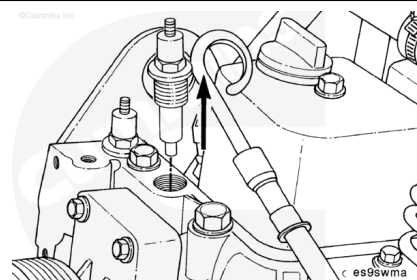

Inspect for Reuse

Check for continuity. The sensor will have continuity **only** when coolant temperature is reached.

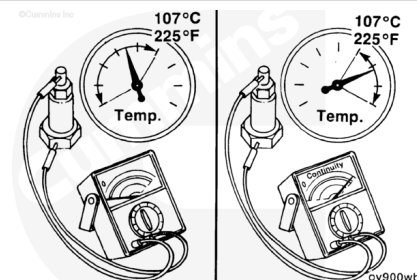

Measurements


	celsius	fahrenheit
Sensor:	107	225

Install

Apply liquid Teflon sealant to the threads when installing the temperature sensor.

Reconnect the wiring.


(Installed into Cast Iron)	50 n.m	[37 ft-lb]
(Installed into Aluminum)	30 n.m	[22 ft-lb]

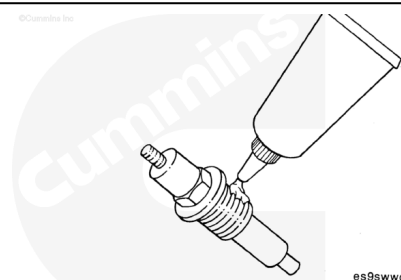

Finishing Steps

- Fill coolant to proper level. Refer to Procedure 008-018 (Cooling System) in Section 8.
(/qs3/pubsys2/xml/en/procedures/40/40-008-018-tr.html)

©Cummins Inc.

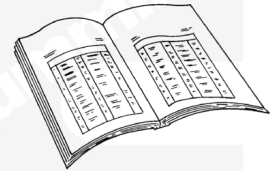


ck800wa

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

©Cummins Inc.

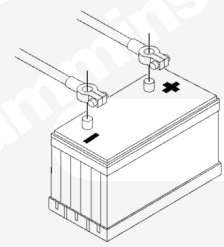

13900050

- Connect the batteries
- Operate the engine and check for leaks.