


Trainings ▾

Install

Brick Type

Install new gaskets and the intake manifold heater.

Install the four capscrews and the single black (ground) heater lead.

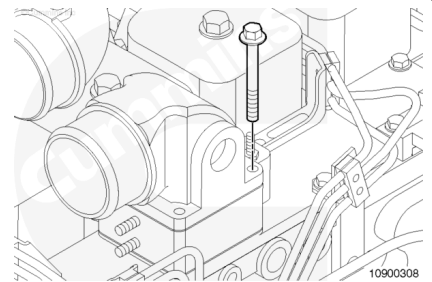

Cylindrical Type

Fit the air intake manifold air heater into the intake manifold.

Rotate the cold starting aid to align the electrical supply terminal with the machined hole in the top of the air intake manifold.

Install the electrical supply terminal (3), isolater/spacer (4) and washer (1) into air intake manifold heater element through the air intake manifold hole.

Tighten electrical supply terminal into the cold starting aid.

Torque Value: 8 n•m [71 in-lb]

Install the retaining capscrew (2) and tighten.

Torque Value: 8 n•m [71 in-lb]

