


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

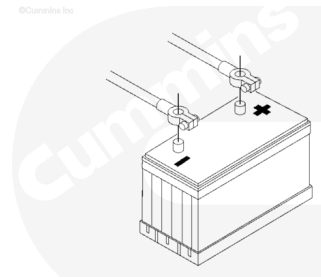

13900050

- Remove the drive belt. Refer to the Procedure 008-002 (</qs3/pubsys2/xml/en/procedures/40/40-008-002-tr.html>).

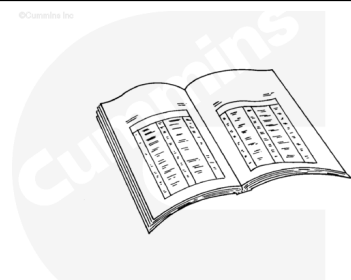


ck800wa

Remove

Hold the shaft or pulley to prevent turning.

Remove the alternator pulley.

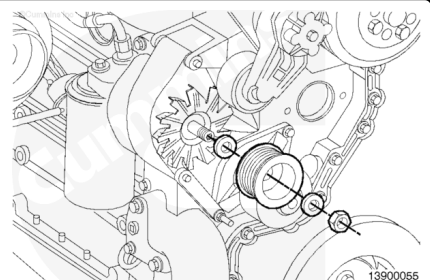


13900055

Install

Install the alternator pulley, mounting fastener, and any washers/spacers.

Hold the shaft or pulley to prevent turning.


Tighten the alternator pulley mounting fastener.

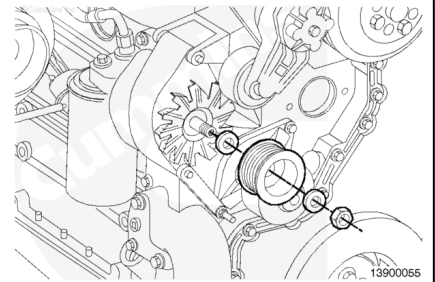

Bosch® K1	70 n.m	[52 ft-lb]
Bosch® NCB1	65 n.m	[48 ft-lb]
Bosch® NCB2	65 n.m	[48 ft-lb]
Delco 11 SI	95 n.m	[70 ft-lb]
Delco 20 SI	102 n.m	[75 ft-lb]
Delco 24 SI	102 n.m	[75 ft-lb]
Delco 33 SI	102 n.m	[75 ft-lb]


Finishing Steps

- Install the drive belt. Refer to Procedure 008-002 (</qs3/pubsys2/xml/en/procedures/40/40-008-002-tr.html>).

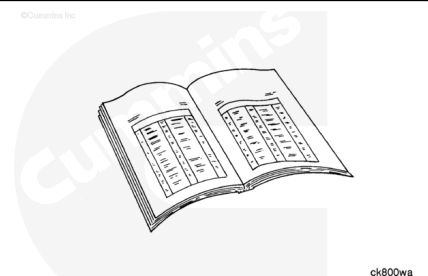

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

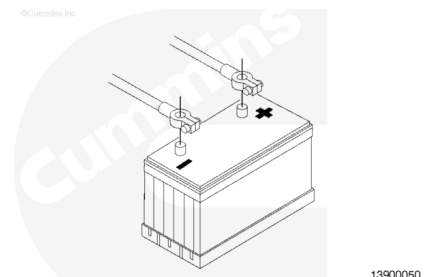

- Connect the batteries.

