

Trainings ▾


Install

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

⚠ CAUTION ⚠

Do not use gasket cement on the oil pan gaskets. Gasket cement will prevent the gasket from sealing properly.

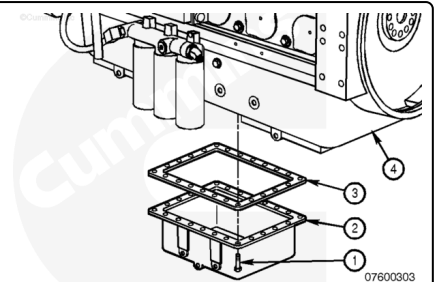

Single oil pans and cover plates are mounted with 24 capscrews and double oil pans are mounted with 38 capscrews.

Position the oil pan (2) and gaskets (3) on the oil adapter (4) with capscrews.

Tighten the capscrews in the pattern as shown.

Torque Value: 36 n•m [26.5 ft-lb]

Install and tighten the drain plug(s).

Torque Value: 47 n•m [35 ft-lb]

