


Trainings ▾

Install

⚠ WARNING ⚠

The QSV81G and QSV91G engines can weigh as much as 11,000 kg [24,200 lbs]. Use a properly rated hoist and engine lifting fixture, Part Number 3163264, to lift the engine. Rigging and lifting must be done by trained, experienced personnel.

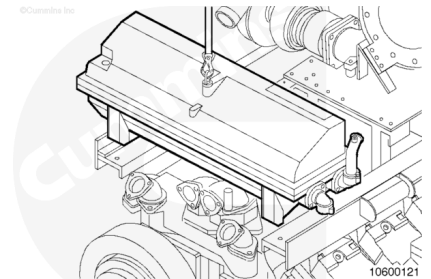


Install the lifting eye to the top of the intercoolers.

Make sure the hoses from the intercooler to the high-pressure turbochargers are aligned during installation.

Position the intercooler on the frame.

⚠ CAUTION ⚠


The intercooler air hoses contain glass fibers. Installing a hose without first moving the intercooler, and/or forcing the hose into position will damage the glass fibers and cause premature failure.

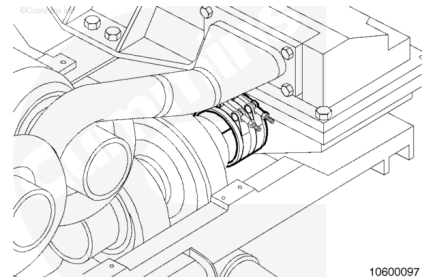

Install the intake hoses and two clamps each on the four high-pressure turbochargers.

⚠ CAUTION ⚠

Do not overtighten the clamps. Overtightening the clamps will damage the hose and cause premature failure.

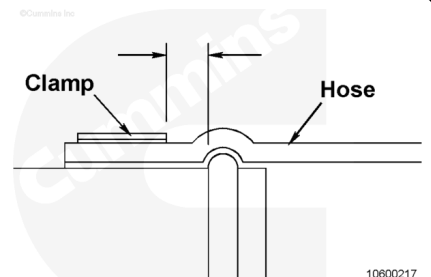


The clamps **must** be positioned so that the edge of the clamp is between 3 mm [0.125 in] and 6 mm [0.250 in] from the inner edge of the bead. Clamps **must not** overhang the edge of the hose.

Torque Value: 9 n•m [80 in-lb]

Install the intercooler lifting eye from the intercooler housing.


Install the lifting eye mounting capscrews onto the two-stage frame.

Torque Value: 210 n•m [155 ft-lb]

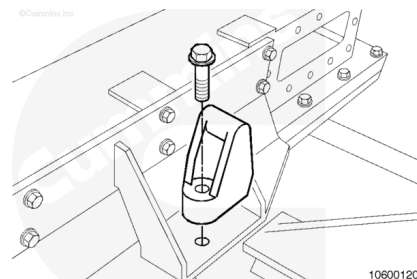

Install the intercooler mounting capscrews at each of the four supports.

Torque Value: 210 n•m [155 ft-lb]

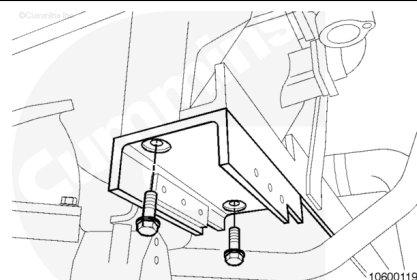


Position new o-rings on the coolant supply and return piping.

Install the coolant supply and return piping into the intercoolers.

Install and tighten the flange capscrews if removed.


Torque Value: 45 n•m [33 ft-lb]

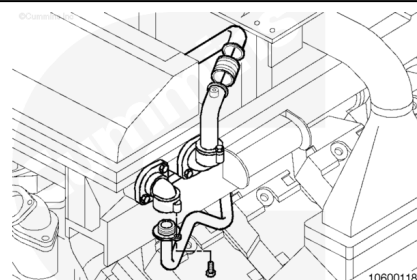

Install the LTA thermostat housing coolant supply lines.

Tighten the capscrews.


Torque Value: 54 n•m [40 ft-lb]

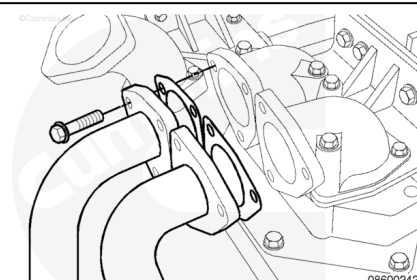

Install the four intercooler intake crossovers with 12 capscrews at each crossover.


Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

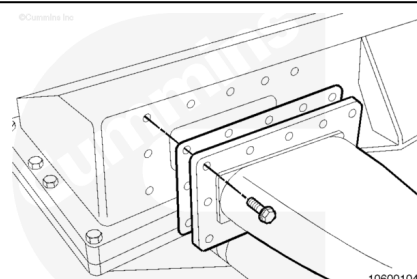

Install the hoses and clamps on the four intercooler intake crossovers and the low-pressure turbochargers.

Torque Value: 9 n•m [80 in-lb]

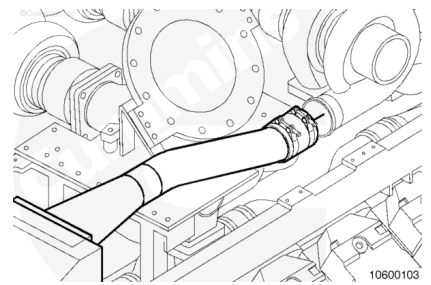

Last Modified: 13-Jun-2019
