


Trainings ▾

Remove

Note : The dash relay can be mounted underneath the dashboard with screws, or it can be secured with nylon tie wrap or other similar material.


Turn the keyswitch to the OFF position.

Remove the screws from the dash relay mounting tabs, or remove the nylon ties or any other material used to secure the relay under the dashboard.

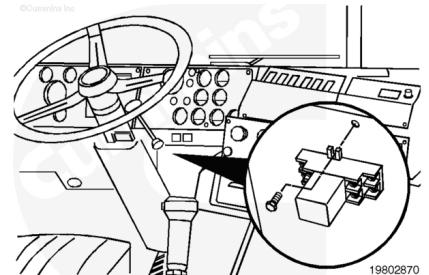

Carefully pull the dash relay out from under the dashboard and disconnect the datalink wires from the relay.

Remove the dash relay.

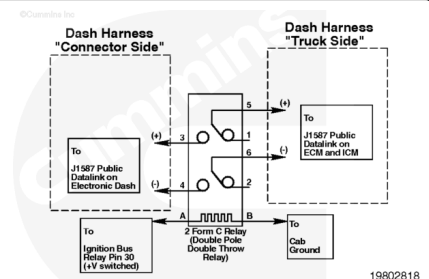


Install

Turn the keyswitch to the OFF position.


Connect the datalink wires to the dash relay.

Shown is a wiring diagram for the connections.

Note : The terminal numbers shown are terminal numbers for the relay itself, not for the relay base into which the relay is plugged.

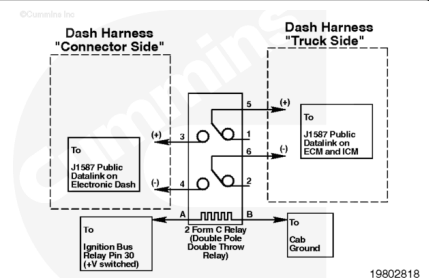

Install screws into the dash relay mounting tabs securing the dash relay under the dashboard (or secure the relay under the dashboard using nylon ties or other similar material).

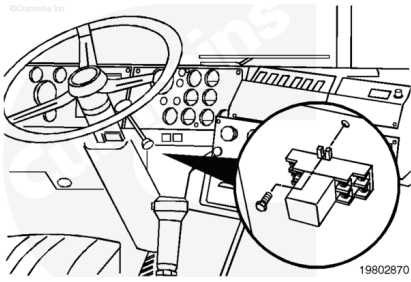

Last Modified: 12-Jun-2003
