

Trainings ▾

General Information

The RS232 public datalink circuit is used for INPOWER™ to communicate with the ECM. The RS485 public datalink can be used to communicate information electronically with other electronic devices, such as switch gears and external paralleling controllers.



The datalink is powered through and uses a 9-pin Deutsch connector. The wiring positions follow:

Position A - data set ready

Position B - receive

Position C - transmit

Position D - data terminal ready


Position E - ground

Position F - carrier detect

Position G - request to send

Position H - clear to send

Position J - ring indicator.

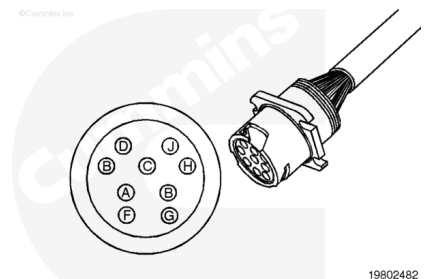


Resistance Check

Remove the extension harness connector from the ECM 05 connector.

Use test lead, Part Number 3822758, on the ECM connector; and use test lead, Part Number 3824812, on the 9-pin Deutsch connector.

Turn the Run/Stop switch to the Stop position.

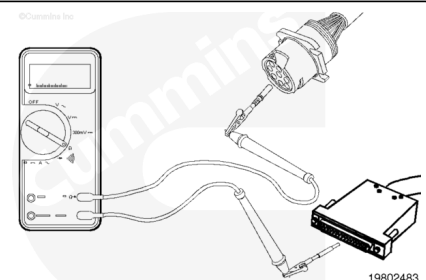


Measure the resistance from the data set ready wire by measuring the resistance from pin A of the 9-pin Deutsch connector to the corresponding pins on the ECM connector.

If the circuit is **not** closed, repair or replace the engine harness.

Refer to Procedure 019-043

(/qs3/pubsys2/xml/en/procedures/01/01-019-043.html).

Do the above for every pin in the 9-pin Deutsch.

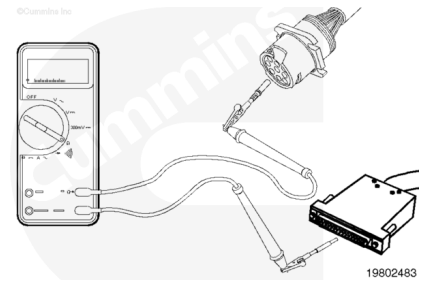

Check for Short Circuit to Ground

Remove the engine harness connector from the ECM 05 connector.

Use test lead, Part Number 3824811, for the 9-pin Deutsch connector.


Measure the resistance from the data set ready wire by measuring the resistance from pin A of the 9-pin Deutsch connector to the engine block. The multimeter **must** show an open circuit (100k ohms or more).

If the circuit is **not** open, repair or replace the engine harness.

Refer to Procedure 019-043

(/qs3/pubsys2/xml/en/procedures/01/01-019-043.html).

Do this for every pin in the 9-pin Deutsch, except ground.

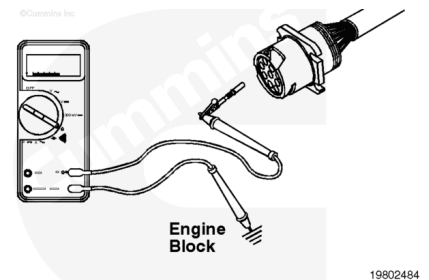


Check for Short Circuit from Pin to Pin

Deutsch Connector

Remove the extension harness connector from the ECM 05 connector.

Use test lead, Part Number 3824811, for the 9-pin Deutsch connector. Measure the resistance from the carrier detect pin to all other pins in the connector. The multimeter **must** show an open circuit (100k ohms or more).

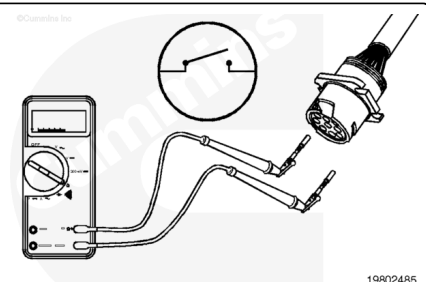

If the circuit is **not** open, repair or replace the engine harness.

Refer to Procedure 019-043

(/qs3/pubsys2/xml/en/procedures/01/01-019-043.html).

Follow the above instructions for every pin in the 9-pin Deutsch connector.

Last Modified: 05-Dec-2002
