

Fault Code: 1326


Starter Backup Disconnect

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1326 PID(P): SPN: FMI: Lamp: Warning SRT:	The starter backup disconnect has failed.	No action is taken by the ECM. Possible damage can occur to the starter.

©Cummins Inc

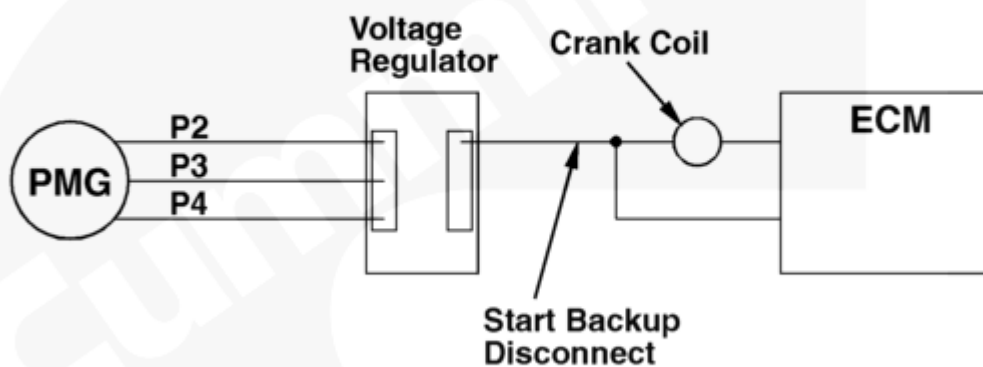

19802801

Starter Circuit

Circuit Description

The generator set starter has two disconnects: The starter main disconnect and a backup. This fault code is used by the ECM to inform the operator that the backup starter disconnect has failed, engine speed is above 950 rpm, and backup start disconnect is still connected. Therefore, if the main starter disconnect fails, damage can possibly occur to the starter.

Component Location

Refer to Section E for location of the starter backup disconnect

Shoptalk

Where the main starter disconnect gets commanded by the engine speed sensor, the backup starter disconnect gets commanded by the PMG excitation voltage sent to the voltage regulator. This excitation voltage occurs once the engine has started and the alternator rotor is turning. The backup starter disconnect activates once the PMG voltage is 105 VAC or higher.

The possible failure modes are open circuit, short to ground, and failed voltage regulator.

Refer to Troubleshooting Fault Code t05-1326 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1326.html>)

Last Modified: 29-Jul-2010
