


Fault Code: 1419

Fuel Rail Driver Diagnostic

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1419 PID(P): SPN: FMI: Lamp: Warning SRT:	Fuel rail driver diagnostic has detected an error.	No action is taken by the ECM. Possible loss of performance.

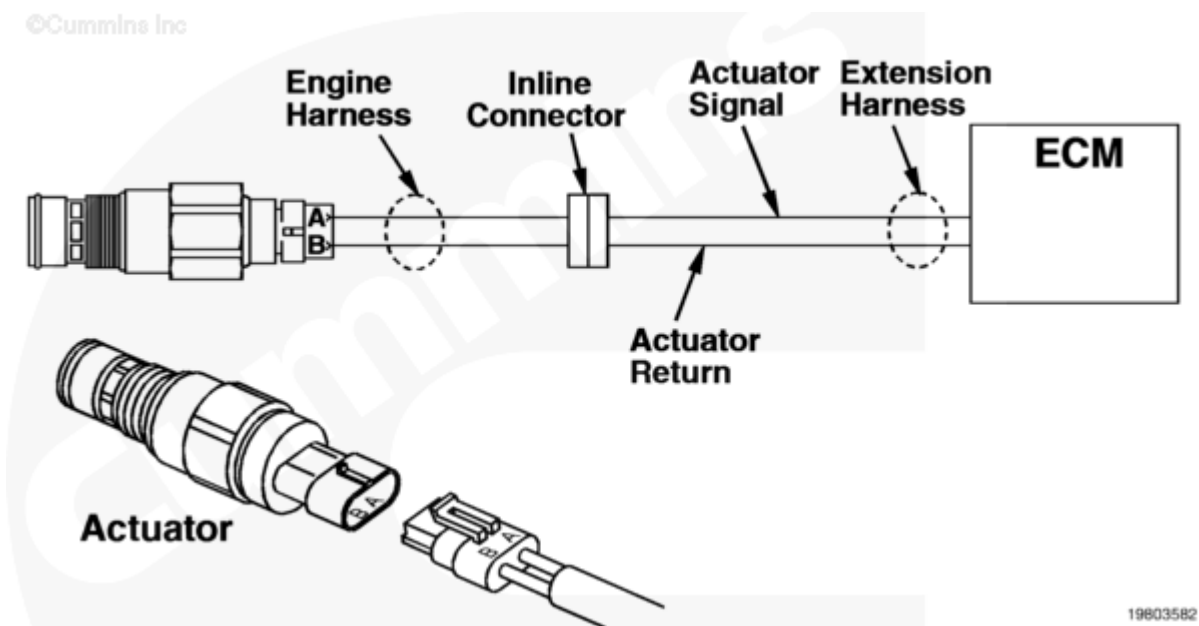

Fuel Rail Actuator Circuit

Circuit Description

The ECM checks the fuel rail actuator drivers to sustain correct operation. The fuel rail actuators are actuated by the electronic control module (ECM) to control fuel metering. Each fuel actuator is connected to the ECM by a supply and a return wire. An electrical pulse is sent to the fuel actuator from the ECM on the supply wire and returns to the ECM on the return wire. Each

solenoid valve is normally closed, and it is **only** opened by an electrical pulse from the ECM during metering. The ECM monitors the voltage, no voltage will trip Fault Code 1419, and can be caused by shorts, opens, or a failed fuel rail actuator driver in the ECM.

Component Location

The fuel rail drivers are contained in the ECM.

Shoptalk

The possible failure modes are open circuit, short to ground, high actuator resistance, and loss of boost voltage inside the ECM.

Refer to Troubleshooting Fault Code t05-1419 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1419.html>)

Last Modified: 29-Jul-2010
