



Fault Code: 1477

Crank Relay Contact Driver Diagnostic



Overview

Codes	Reason	Effect
Fault Code: 1477 PID(P): SPN: FMI: Lamp: Warning SRT:	Crank relay contact diagnostic has detected and error.	ECM will possibly not be able to crank the engine.

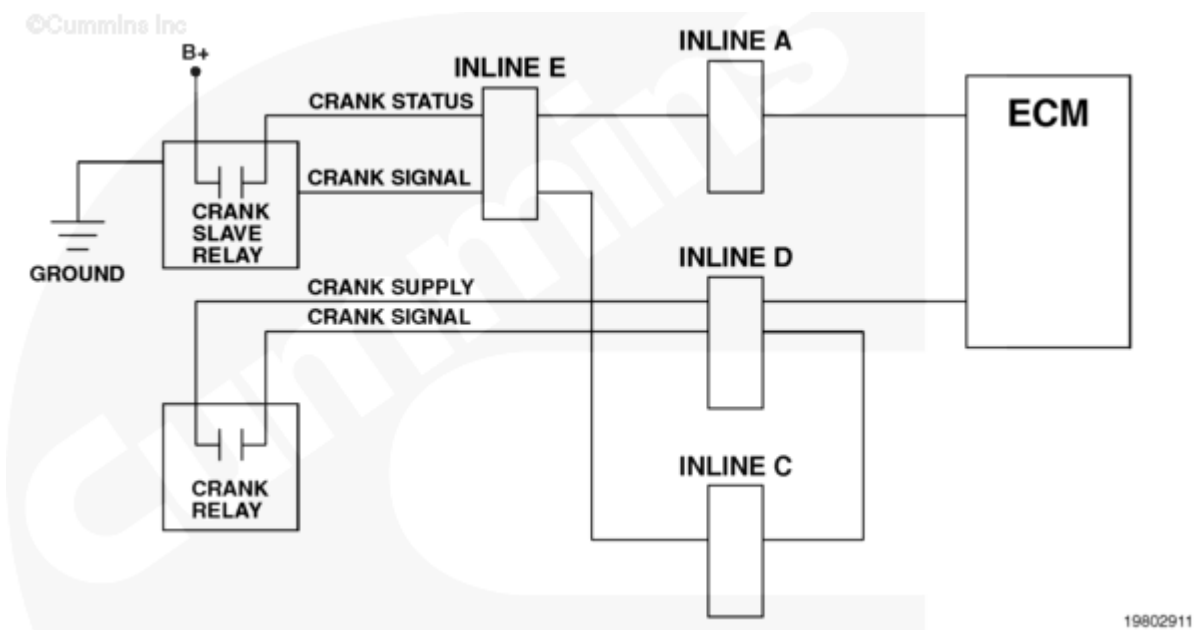

Crank Relay Contact Circuit

Circuit Description

The engine control module (ECM) checks the crank relay contact to make certain it is operating correctly. The ECM uses the fault code to inform the operator that the generator set is commanding “cranking,” but the feedback from the crank relay contact is **not** confirming.

Component Location

Reference Section E for location of the crank relay contact and the ECM.

Shoptalk

The possible failure modes are open circuit, short to ground, bad crank relay, bad crank slave relay, and loss of supply voltage inside the ECM.

If the engine will crank, the problem is with the crank status circuit.

If the engine will not crank, the problem is with the crank supply circuit, the crank signal circuit, a bad crank relay, or bad crank slave relay.

If the 20 amp fuse (battery side of Inline E) blows when attempting to crank, check the diode on the crank slave coil circuit for proper installation and operation.

Refer to Troubleshooting Fault Code t05-1477. (</qs3/pubsys2/xml/en/procedures/01/01-t05-1477.html>)

Last Modified: 08-May-2012
