


Fault Code: 1489

Shutdown LED Driver Diagnostic

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1489 PID(P): SPN: FMI: Lamp: Warning SRT:	Switch panel shutdown LED driver diagnostic has detected an error.	The shutdown LED will not function correctly. No action is taken by the ECM. No loss of performance.

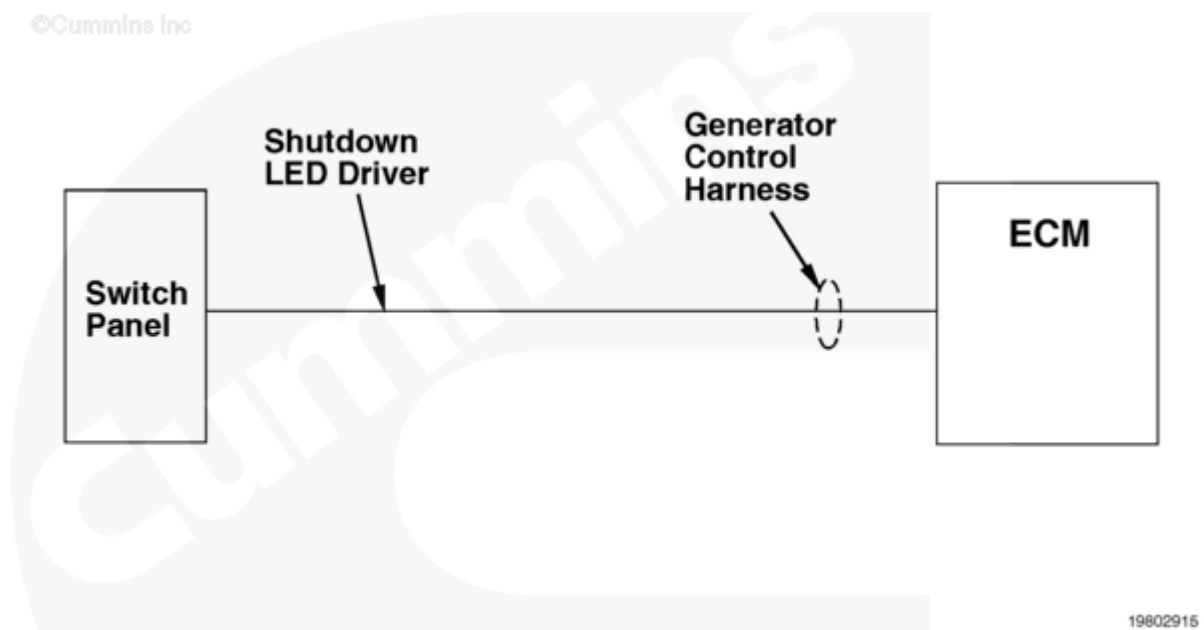

Shutdown LED Driver Circuit

Circuit Description

The ECM checks the shutdown LED driver to be sure of correct operation. The ECM uses the shutdown lamp to inform the operator that a critical fault has occurred with the generator set.

The ECM monitors the voltage (no voltage drop will trip Fault Code 1489) and can be caused by shorts, opens, bad bulbs, or a failed shutdown LED driver in the ECM.

Component Location

Refer to Section E for location of the switch panel and the shutdown lamp.

Shoptalk

The possible failure modes are open circuit, short to ground, burned-out bulb, and loss of supply.

Proper diagnostic lamp operation can be verified by checking to see that the lamps briefly light when the ECM is powered up.

Refer to Troubleshooting Fault Code t05-1489 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1489.html>)

Last Modified: 29-Jul-2010
