


Fault Code: 1499

Remote Start LED Driver Diagnostic

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1499 PID(P): SPN: FMI: Lamp: Warning SRT:	Switch panel Remote Start LED driver diagnostic has detected an error.	The Remote Start LED will not function correctly. No action taken by ECM. No loss of performance.

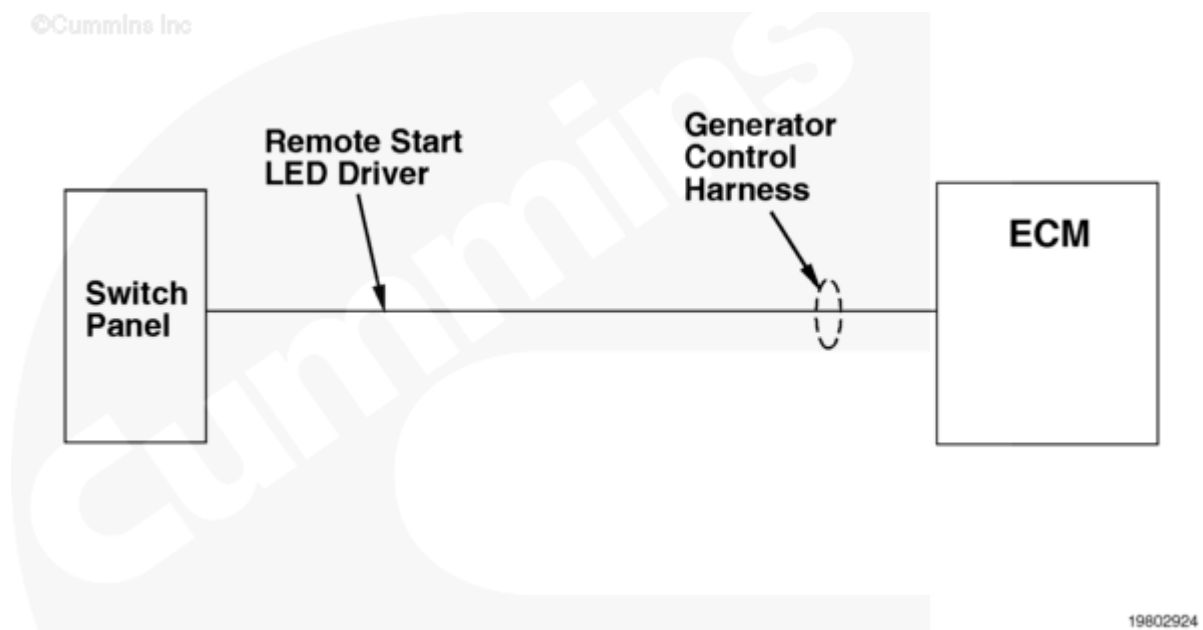

Remote Start LED Driver Circuit

Circuit Description

The ECM checks the Remote Start LED driver to ensure correct operation. The ECM uses the Remote Start lamp to inform the operator if the generator set is in Remote Start mode. The ECM monitors the voltage (no voltage drop will trip Fault Code 1499) caused by short circuits, open circuits, bad LED, or failed Remote Start LED driver in the ECM.

Component Location

Refer to section E for location of the switch panel and Remote Start lamp.

Shoptalk

Possible failure modes are open circuits, short to ground, burned - out LED, and loss of supply voltage inside the ECM.

Proper diagnostic lamp operation can be verified by checking to see that the lamps briefly light when the ECM is powered up.

Refer to Troubleshooting Fault Code t05-1499 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1499.html>)

Last Modified: 29-Jul-2010
