


Fault Code: 222

Barometric Pressure Sensor Circuit - Shorted Low

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 222 PID(P): SPN: FMI: Lamp: Warning SRT:	Barometric pressure sensor is shorted low.	No engine protection for barometric pressure. Possible loss of performance.

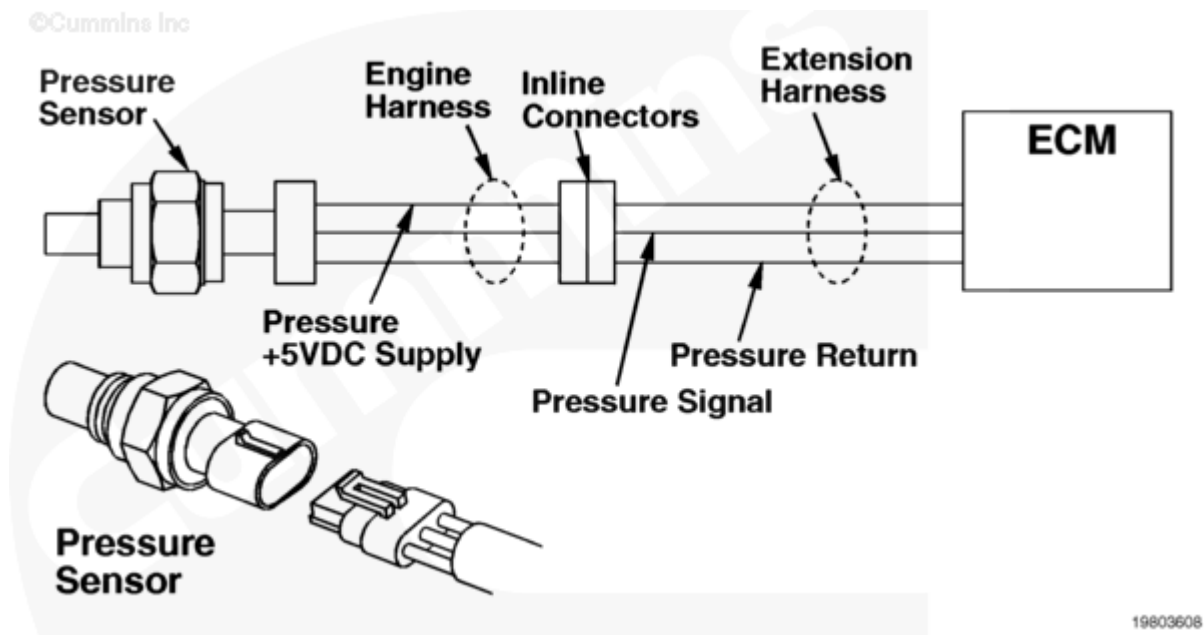

Barometric Pressure Sensor Circuit

Circuit Description

The barometric pressure sensor provides the barometric air pressure signal to the electronic control module (ECM). The ECM uses the barometric pressure sensor to adjust fueling based on the altitude.

Component Location

Refer to the Engine Diagrams. 100-002 (</qs3/pubsys2/xml/en/procedures/01/01-100-002.html>) for the component location.

Shoptalk

Monitor the barometric pressure reading with an electronic service tool to confirm that the pressure reading matches the actual air pressure.

Refer to specific engine wiring diagram for the output voltage of the pressure sensor.

Note: Some engine models will use the Metri-Pack type connector on this pressure sensor, and some will use the Danfoss™ type connector. The Metri-Pack connector pin designators are alpha and the Danfoss™ connector pin designators are numeric. The steps depicted in this fault code show the Metri-Pack type connector with alpha pin callouts. Refer to specific engine wiring diagrams to determine the correct pin designators for the type of connector.

Refer to Troubleshooting Fault Code t05-222 (</qs3/pubsys2/xml/en/procedures/01/01-t05-222.html>)