


# Fault Code: 234

## Engine Speed High - Critical

 Printable Version

### Overview

| Codes                                                                    | Reason                                                                         | Effect                                                                                                           |
|--------------------------------------------------------------------------|--------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
| Fault Code: 234<br><br>PID(P):<br>SPN:<br>FMI:<br>Lamp: Shutdown<br>SRT: | Engine speed signals indicate an engine speed greater than shutdown threshold. | Engine will shut down. Fuel shutoff valves are de-energized (valves close). Overspeed relay driver is energized. |

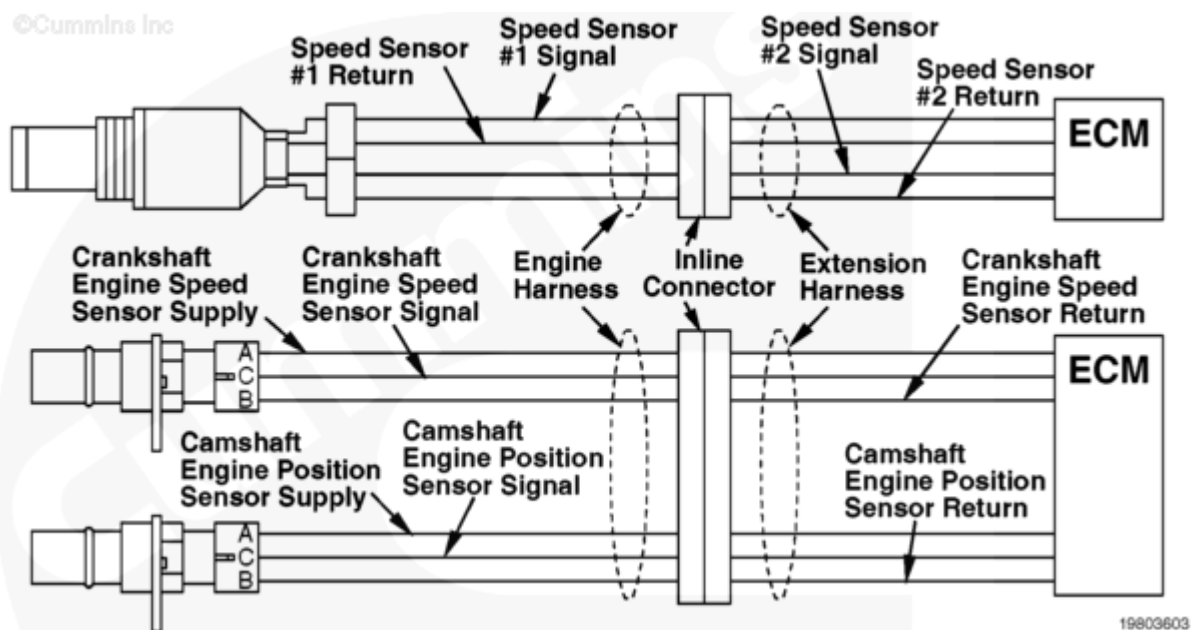

### Engine Overspeed

#### Circuit Description

The engine position sensor(s) monitor the engine position and the engine speed. It then passes this information to the electronic control module (ECM) through the engine harness.

#### Component Location

Use the following procedure for component location. Refer to Procedure 100-002 (</qs3/pubsys2/xml/en/procedures/01/01-100-002.html>) for the component location.

## Shoptalk

Possible causes of this fault code include external fuel sources drawn into the intake air passage, reverse powering (motoring) of the engine, or tampering of the engine speed/position sensors. Inspect the intake manifold for sources of flammable vapors. Check the turbocharger seals to verify that there are no oil leaks. Inspect the engine speed/position sensors for damage or tampering.

Refer to Troubleshooting Fault Code t05-234 (</qs3/pubsys2/xml/en/procedures/01/01-t05-234.html>)

---

**Last Modified: 29-Jul-2010**

---