


Fault Code: 316

Fuel Supply Pump Actuator - Shorted High

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 316 PID(P): SPN: FMI: Lamp: Warning SRT:	Fuel supply pump actuator circuit - shorted high. Fuel pump actuator circuit is open, the fuel pump actuator signal pin is shorted to battery voltage or ground, or fuel pump actuator return pin is shorted to battery voltage or ground.	No action is taken by the ECM. Possible loss of performance. Actuator is open, closed, or partially closed.

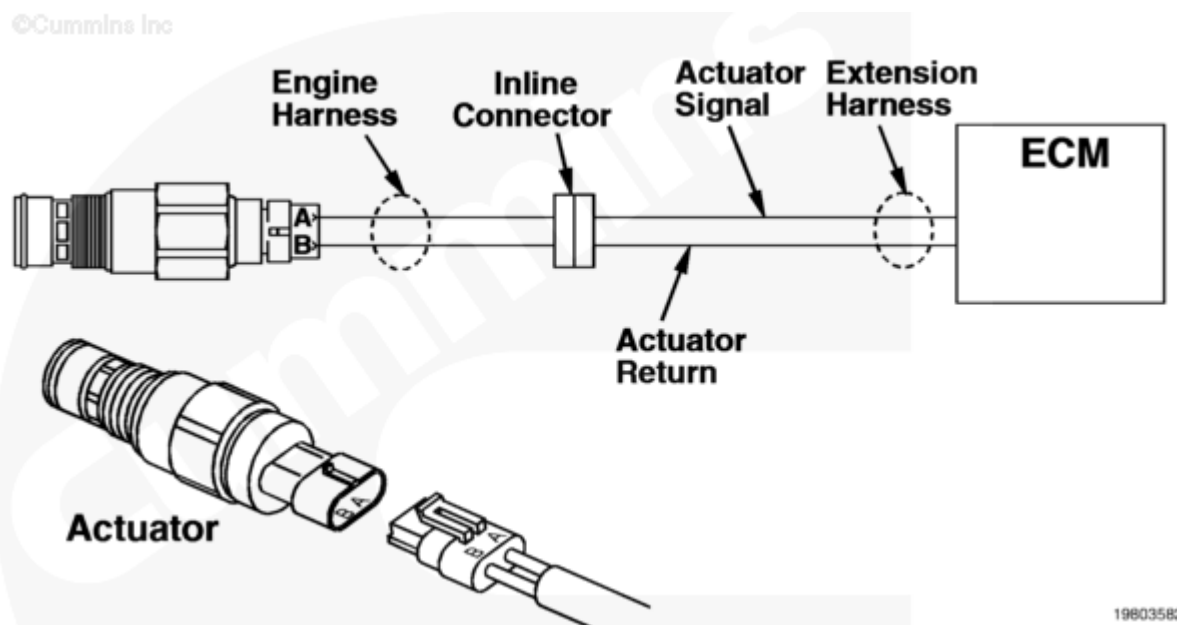

Fuel Supply Pump Actuator Circuit

Circuit Description

The fuel pump actuator circuit supplies current to the fuel pump actuator. The ECM commands a varying amount of current to the fuel pump actuator to control the fuel pump output pressure to the control valve assembly.

Component Location

The fuel pump actuator is on the fuel pump, just below the fuel pump sensor.

Shoptalk

Confirm that the actuator connector is firmly in place. When there is no power to the actuator, the actuator closes and fuel flow continues.

Refer to Troubleshooting Fault Code t05-316 (</qs3/pubsys2/xml/en/procedures/01/01-t05-316.html>)

Last Modified: 29-Jul-2010
