


Fault Code: 144

Coolant Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 144 PID(P): P110 SPN: 110 FMI: 3 Lamp: Amber SRT:	Coolant temperature sensor circuit - voltage above normal or shorted to high source.	Engine protection for coolant temperature is disabled. Possible white smoke.

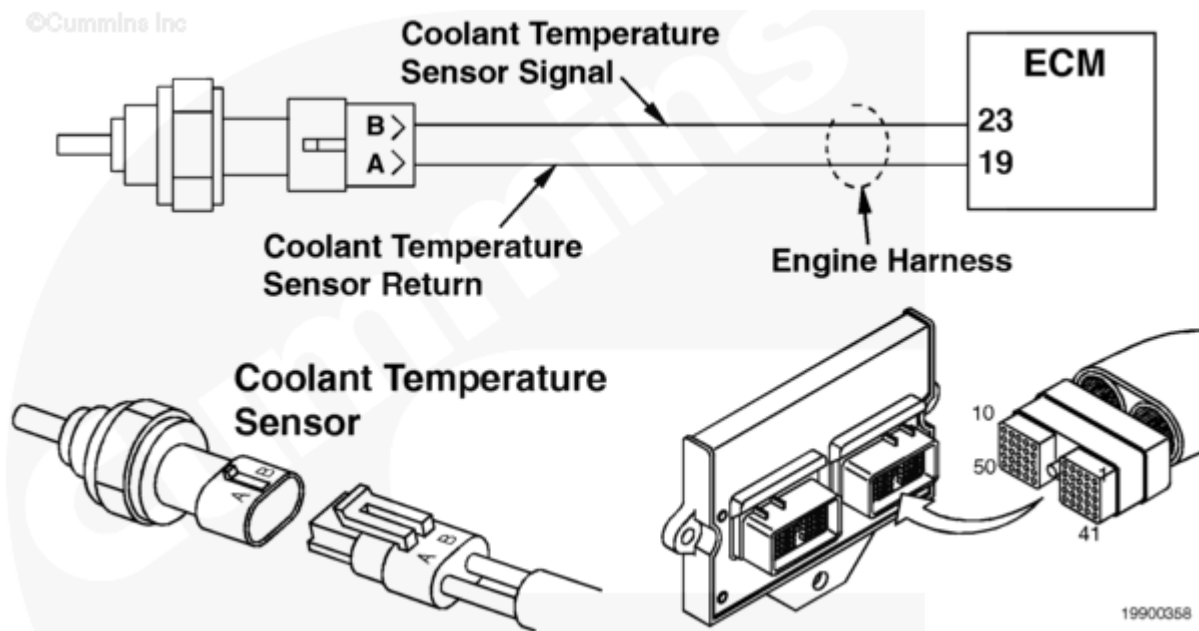

Coolant Temperature Sensor Circuit

Circuit Description

The coolant temperature sensor is used by the electronic control module (ECM) to monitor the temperature of the engine coolant. The coolant temperature is used by the ECM for the engine protection system, timing, and fueling control.

Component Location

Reference Section E for a detailed component location view. The coolant temperature sensor is located in the thermostat housing.

Shoptalk

The resistance of the sensor varies with the temperature. The reading observed will compare to the following table if the sensor is functioning properly.

Temperature (°F)	Temperature (°C)	Resistance (ohms)
32	0	30k to 36k
77	25	9k to 11k
122	50	3k to 4k
167	75	1350 to 1500
212	100	600 to 675

Refer to Troubleshooting Fault Code t05-144 (</qs3/pubsys2/xml/en/procedures/07/07-t05-144.html>)

Last Modified: 18-Dec-2012
