

Trainings ▾

Preparatory Steps


- Remove the crankcase breather tube and hose. Refer to Procedure 003-018 (</qs3/pubsys2/xml/en/procedures/100/100-003-008.html>)
- Remove the rocker lever cover. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/100/100-003-011.html>).
- Loosen the rocker lever adjusting screw locknuts and loosen the adjusting screws until they stop.
- Remove the rocker lever assemblies. Refer to Procedure 003-008 (</qs3/pubsys2/xml/en/procedures/100/100-003-008.html>).



Remove


Mark the push rods to identify their location.

Remove the push rods.

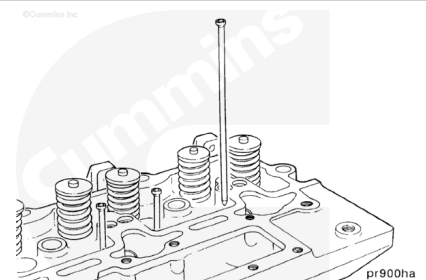


Inspect for Reuse

Clean the push rods in hot, soapy water.

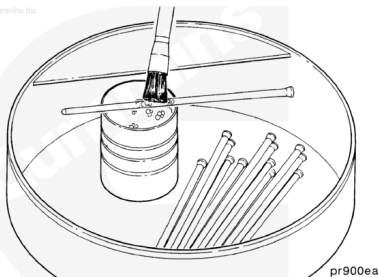


Inspect the push rod ball and socket for signs of scoring.

Check for cracks where the ball and the socket are pressed into the tube.

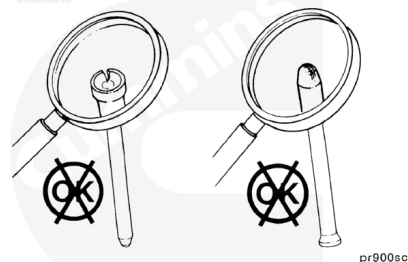


Check the push rods for roundness and straightness.

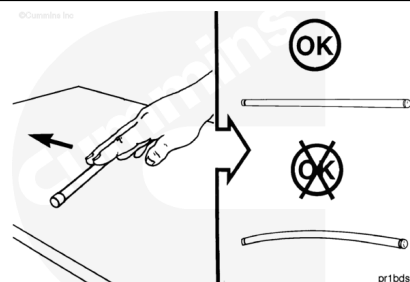


Install

Install the push rods into the sockets of the valve tappets.

Lubricate the push rod sockets with clean engine oil.

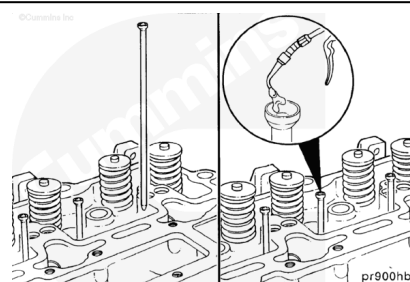


Make sure the rocker lever adjusting screws are completely backed out.

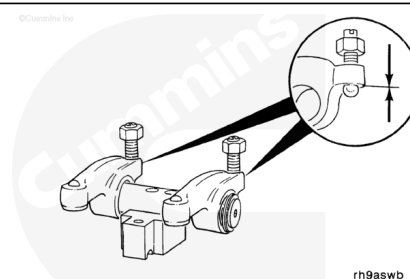

To prevent damage to the rocker lever or push rod, make sure the adjusting screw ball is positioned in the socket of the push rods when tightening.

Install the rocker lever assemblies. Refer to Procedure 003-008 (</qs3/pubsys2/xml/en/procedures/100/100-003-008.html>).

Adjust the valve lash. For C Series diesel engines, refer to Procedure 003-004 (</qs3/pubsys2/xml/en/procedures/39/39-003-004.html>) in Troubleshooting and Repair Manual, C Series Engines, Bulletin 3666003. For C Series gas engines, refer to Procedure 003-004 (</qs3/pubsys2/xml/en/procedures/41/41-003-004.html>) in Troubleshooting and Repair Manual, C8.3G (Natural Gas) Engines, Bulletin 3666206.

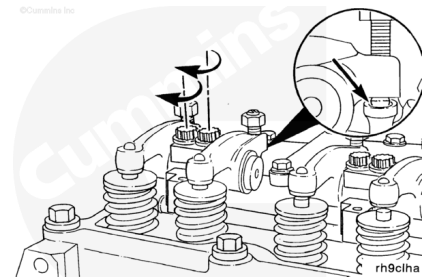

Finishing Steps

- Install the rocker lever cover and gasket. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/100/100-003-011.html>).
- Install the crankcase breather tube. Refer to Procedure 003-018 (</qs3/pubsys2/xml/en/procedures/100/100-003-018.html>).

