


Trainings ▾

Calibrate

Note : This procedure must begin with the oil pan drained. Refer to Procedure 007-037 (Lubricating Oil System) in Section 7. (</qs3/pubsys2/xml/en/procedures/100/100-007-037-tr-gc.html>)

Install the dipstick in the dipstick tube housing.

Use clean engine oil to fill the oil pan to the specified low oil level. Refer to Procedure 018-017 (Lubricating Oil System) in Section V for the correct engine oil capacity. (</qs3/pubsys2/xml/en/procedures/39/39-018-017-tr-gc.html>)

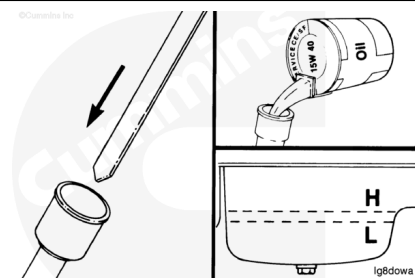


⚠ CAUTION ⚠

Use care when marking the dipstick. The dipstick will break if the scribe mark is too deep.

Remove the dipstick and scribe a mark across the stick at the oil level.


Label the mark with an "L" to indicate the low oil level.

Note : If a new blank dipstick is being used, cut the dipstick off approximately 38 mm [1.5 in] below the low oil level mark.

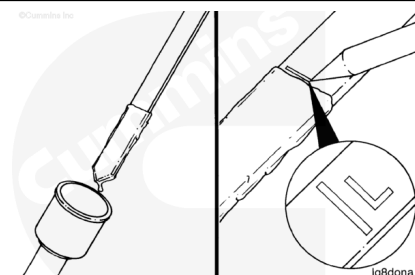

Wipe off the dipstick and install it in the dipstick tube housing.

Fill the oil pan to the specified high oil level. Refer to Procedure 018-017 (Lubricating Oil System) in Section V for the correct engine oil capacity. (</qs3/pubsys2/xml/en/procedures/39/39-018-017-tr-gc.html>)

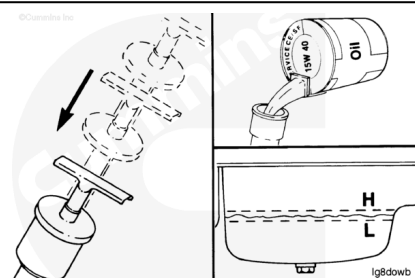

⚠ CAUTION ⚠

Use care when marking the dipstick. The dipstick will break if the scribe mark is too deep.

Remove the dipstick and scribe a mark across the stick at the oil level. Label the mark with an "H" to indicate the high oil level.

