


## Trainings ▾

### Measure

**Note :** For naturally aspirated engines, measure the intake restriction just before the intake manifold.

Install a vacuum gauge or water manometer, Part Number ST-1111-3, in the intake air piping.


The gauge adapter **must** be installed at a 90-degree angle to the airflow in a straight section of pipe, one pipe diameter before the turbocharger.

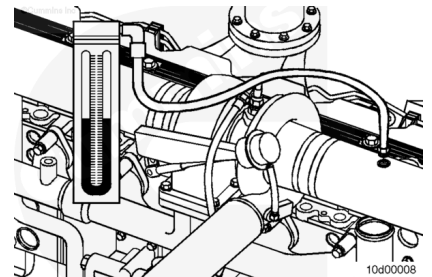


Operate the engine at full throttle and rated rpm with maximum load.

Record the data on the gauge or manometer.

| mm-h2o |     | in-h2o |
|--------|-----|--------|
| 635    | MAX | 25     |

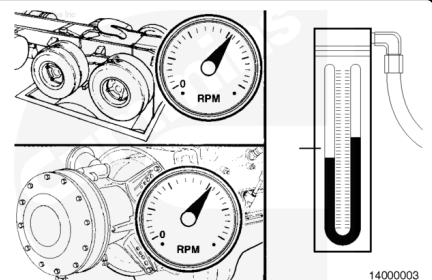


If restriction exceeds specifications, replace or clean the air filter element. Refer to the equipment manufacturer's instructions.

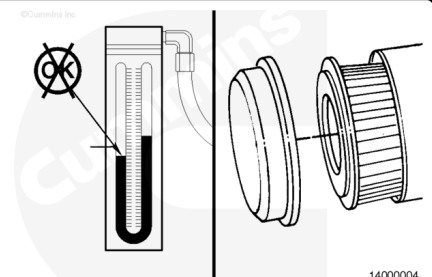

Inspect the intake piping for damage. Refer to the equipment manufacturer's repair instructions.

Remove the test equipment.

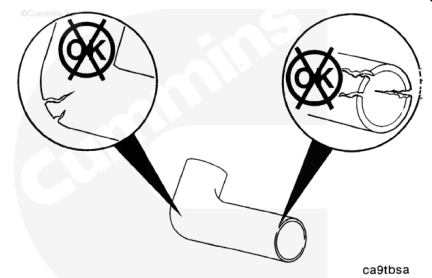

---

**Last Modified: 19-May-2004**

---