

Trainings ▾

Disassemble

For a detailed Disassemble procedure, use the Maintenance Section in the Eliminator™ Filter, Bulletin 3666253 (</qs3/pubsys2/xml/en/bulletin/3666253.html>).

Clean and Inspect for Reuse

For a detailed Clean and Inspect for Reuse, use the Maintenance Section in the Eliminator™ Filter, Bulletin 3666253 (</qs3/pubsys2/xml/en/bulletin/3666253.html>).

Assemble


For a detailed Assemble procedure, use the Maintenance Section in the Eliminator™ Filter, Bulletin 3666253 (</qs3/pubsys2/xml/en/bulletin/3666253.html>).

Pressure Test

This test will indicate oil pressure before and after the oil flows through the Eliminator™.

Use a differential pressure gauge or one pressure gauge with two oil hoses and two valves (1 and 2) to eliminate gauge error. Use a gauge with a minimum pressure capacity of 1400 kPa [200 psi].


Be sure the engine is switched off.

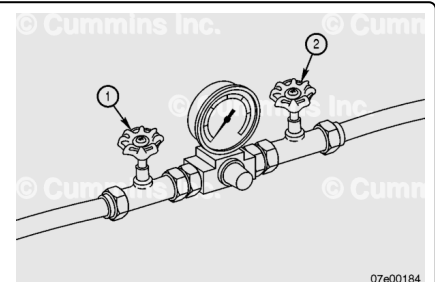


Remove the two plugs from the filter housing.

Install the 3end of the valve assembly in the port of the filter nearest to the centrifuge from where the plug was removed.

Install the end of the valve assembly in the port of the filter furthest away from the centrifuge from where the other plug has been removed.

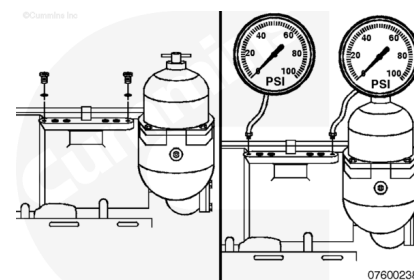


Operate the engine at rated revolutions per minute (rpm) until the engine oil reaches its normal operating temperature. Continue running the engine at rated rpm for the duration of the pressure test.

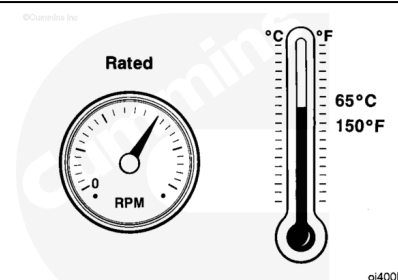

Close valve (1), open valve (2), and record the pressure value before the Elininator™.

Close valve (2), open valve (1), and record the pressure value after the Eliminator™.

If the difference in pressure is more than the maximum allowable value, inspect and clean the Eliminator™ screens before checking the oil pressure differential again.

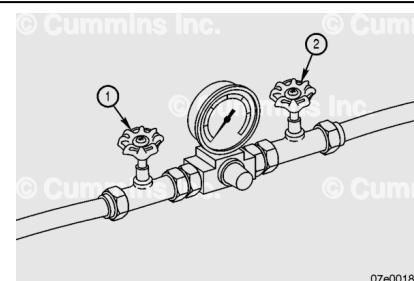

Measurements

	kPa	psi
Maximum Oil Pressure Differential	60	9

Turn the engine OFF.

Remove the valve assembly from the Eliminator™ and install the two plugs.

Tighten the plugs.

Torque Value: 10 n•m [89 in-lb]

