


Fault Code: 111

Engine Control Module Critical Internal Failure - Bad Intelligent Device or Component

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 111 PID(P): S254 SPN: 629 FMI: 12 Lamp: Red SRT:	Engine Control Module Critical Internal Failure - Bad Intelligent Device or Component. Error internal to the engine control module (ECM) related to memory hardware malfunctions or internal ECM voltage supply circuits.	Engine may not start or may be difficult to start.

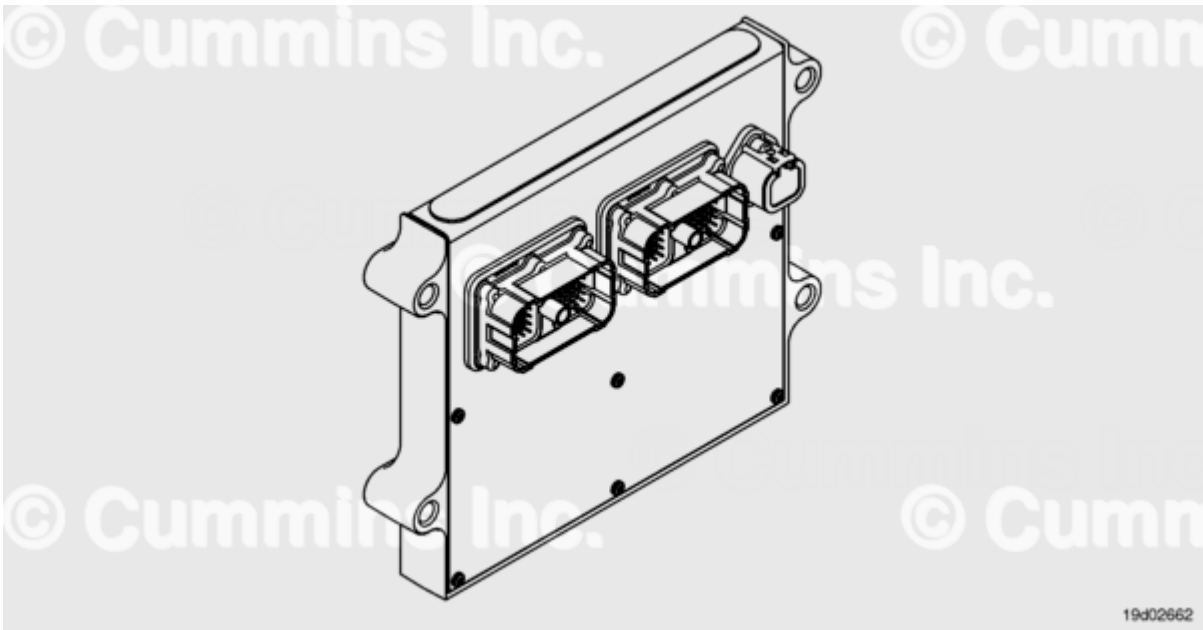

ECM

Circuit Description

The ECM has internal diagnostics that continuously run and check the internal memory.

Component Location

The ECMs are located on the left (fuel pump) side of the engine.

Conditions For Running The Diagnostics

This diagnostic runs continuously when the keyswitch is in the ON position.

Conditions For Setting The Fault Codes

The ECM detected a read or write error internal to the ECM.

Action Taken When The Fault Code Is Active

- The ECM illuminates the red STOP ENGINE lamp immediately after the diagnostic runs and fails.
- The engine may **not** start.

Conditions For Clearing The Fault Code

- To validate the repair, perform a key cycle, start the engine and let it idle for 1 minute.
- The fault code status displayed by INSITE™ electronic service tool will change to INACTIVE immediately after the diagnostic runs and passes.
- The ECM will turn off the red STOP ENGINE lamp immediately after the diagnostic runs and passes.
- The Reset All Faults command in INSITE™ electronic service tool can be used to clear active and inactive faults.

Shoptalk

This fault code can **only** be caused by an internal ECM malfunction. Repairs are **not** possible for the ECM.

Refer to Troubleshooting Fault Code t05-111 (</qs3/pubsys2/xml/en/procedures/122/122-t05-111.html>)