


Fault Code: 521

Transmission Oil Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 521 PID(P): SPN: 175 FMI: 3 Lamp: Amber SRT:	Transmission (Gear) Oil Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source. High signal voltage detected at transmission (gear) oil temperature sensor circuit.	No engine protection for transmission oil temperature.

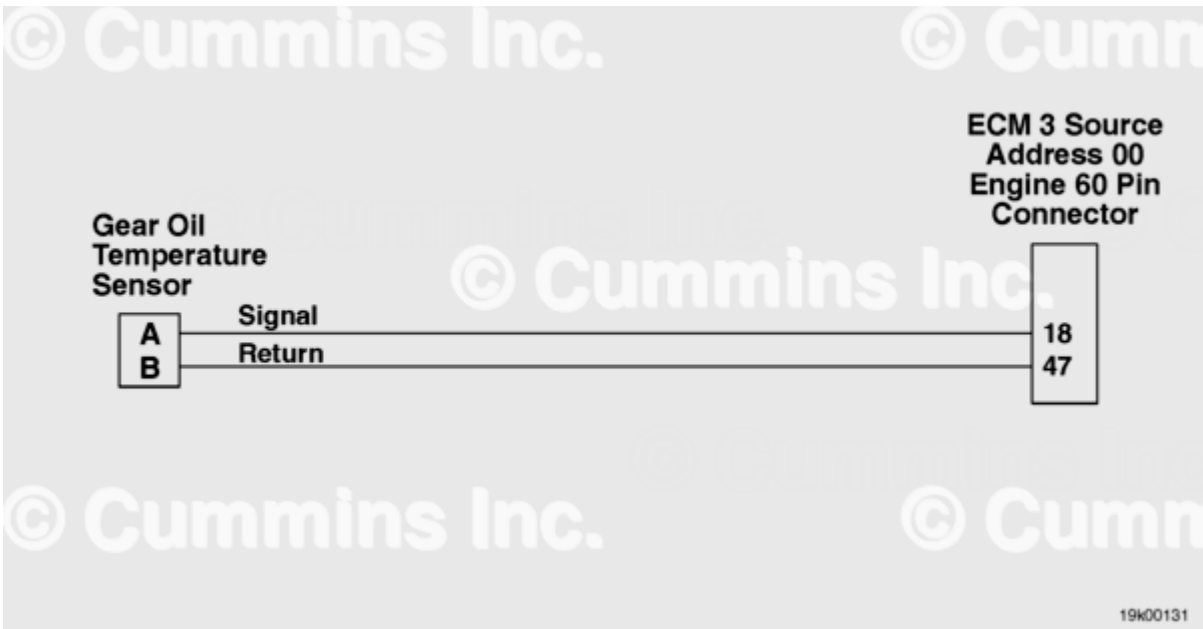

Transmission (Gear) Oil Temperature Sensor Circuit

Circuit Description

The transmission (gear) oil temperature sensor is used by the engine control module (ECM) to monitor the transmission oil temperature. The ECM monitors the voltage on the SIGNAL pin and converts it to a temperature value.

Component Location

The transmission (gear) oil temperature sensor is located in the transmission.

Shoptalk

There are multiple ECMs for the engine models included in this manual. Each ECM has an individual source address that displays when INSITE™ electronic service tool is connected. When troubleshooting a fault code, use the source address displayed in INSITE™ electronic service tool to determine which ECM and circuit is affected.

Before troubleshooting Fault Code 521, check for multiple faults.

The transmission (gear) oil temperature sensor share RETURN wires in the engine harness with other sensors. An open return can cause multiple fault codes to be active.

Possible causes for this fault code include:

- Open return circuit in the harness, connectors, or sensor
- Open signal circuit or shorted to a voltage source.

Refer to Troubleshooting Fault Code 521. (</qs3/pubsys2/xml/en/procedures/122/122-t05-521.html>)