

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Fluorescent tracer, Part Number 3376891.


Additional Service Items

- High-intensity black light, Part Number 3163337, or equivalent.

Fluorescent Dye Tracer

Add one unit of fluorescent tracer, Part Number 3376891, to each 38 liters [10 U.S. gal] of engine oil.

Idle the engine for 5 to 10 minutes or until normal operating temperature is reached to allow the dye to circulate through the lubricating system.

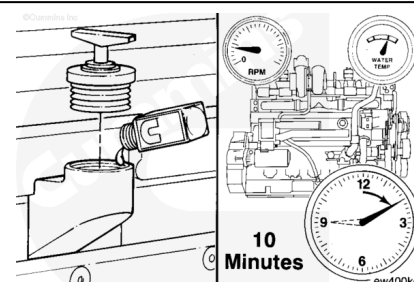

⚠ WARNING ⚠

The exhaust and exhaust components can become heated during troubleshooting. To avoid the risk of fire, property damage, burns, or other serious personal injury, allow the exhaust system to cool before beginning any procedure or repair and make sure that no combustible materials are located where they are likely to come in contact with hot exhaust or exhaust components.

⚠ WARNING ⚠


This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly

⚠ CAUTION ⚠


Engine must not be run without manifold on.

- Allow the engine to cool down before removing the exhaust manifold.
- Check for single cylinder oil consumption, remove the exhaust manifold. Refer to Procedure 011-007 in Section 11 (</qs3/pubsys2/xml/en/procedures/89/89-011-007.html>).


Use a high-intensity black light, Part Number 3163337, or equivalent, to inspect the exhaust ports. A yellow glow indicates a fuel leak. A dark blue glow indicates an oil leak.

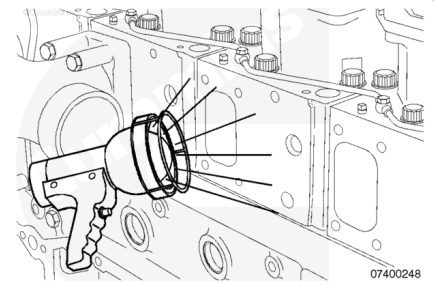

Check the cylinder heads. Refer to Procedure 002-004 in Section 2 (</qs3/pubsys2/xml/en/procedures/89/89-002-004-tr.html>).

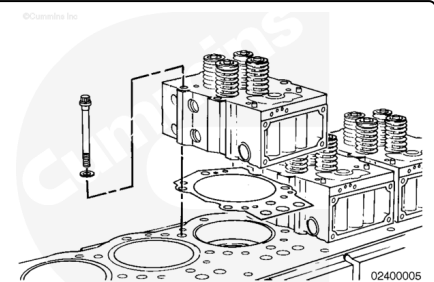

Check the pistons and rings. Refer to Procedure 001-054 in Section 1 (</qs3/pubsys2/xml/en/procedures/89/89-001-054.html>).

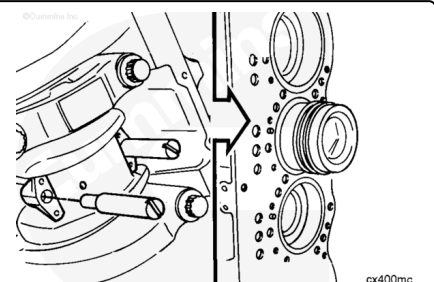

Finishing Steps

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly

- Install the exhaust manifold. Refer to Procedure 011-007 in Section 11 (</qs3/pubsys2/xml/en/procedures/89/89-011-007.html>).

Last Modified: 21-Nov-2018
