


Trainings ▾

Pressure Test

Use a pressure gauge with a minimum capacity of 275 kPa [40 psi]. Measure the coolant pressure at the thermostat housing.

Operate the engine until the coolant temperature reaches 85°C [185°F].


The thermostats **must** be open.

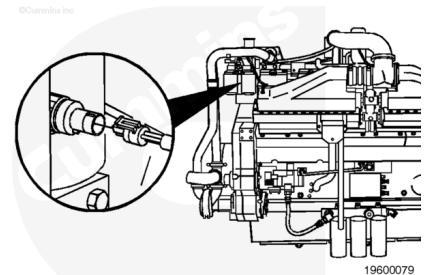

Operate the engine at rated rpm. Compare the pressure readings to the following specifications.

	kpa		psi
1800 rpm	75	MIN	11
1900 rpm	82	MIN	12
2100 rpm	89	MIN	13


kpa		psi
241	MAX	35

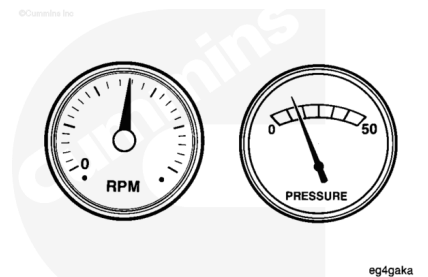

If the above measurement location is **not** accessible, install the gauge in the engine block in place of the draincock.


	kpa		psi
1800 rpm	103	MIN	15
1900 rpm	117	MIN	17
2100 rpm	131	MIN	19

kpa		psi
241	MAX	35

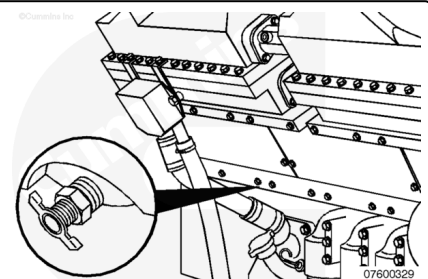


If the coolant pressure is high, make sure the thermostats are operating correctly. Refer to Procedure 008-013 (</qs3/pubsys2/xml/en/procedures/56/56-008-013-tr.html>).

If the thermostats are OK, inspect the radiator for restriction. Refer to Procedure 008-042 (</qs3/pubsys2/xml/en/procedures/56/56-008-042.html>).

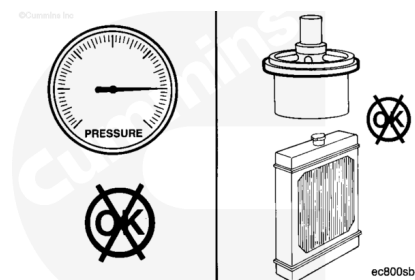

If the cooling system pressure is low, install a gauge (with a maximum capacity of 69 kPa [10 psi]) at the water pump inlet.

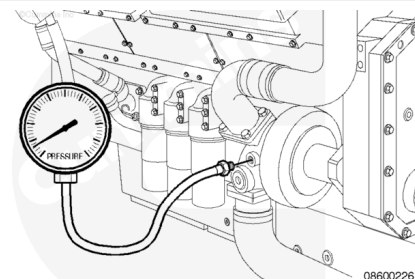

Operate the engine at rated rpm. If the gauge reads more than 35 kPa [5 psi], check the radiator for restriction. Refer to Procedure 008-042 (</qs3/pubsys2/xml/en/procedures/56/56-008-042.html>).

