


Trainings ▾

Initial Check


Use the blowby service tool and a water manometer, Part Number ST-1111-3. Maximum gauge capacity is 1270 mm H₂O [50 in H₂O].

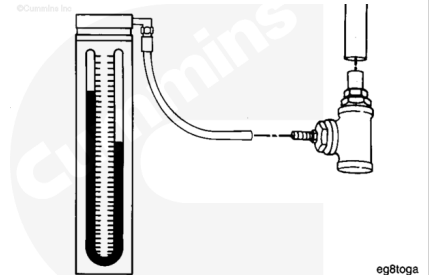

Blowby Tool Part Number	Orifice Size
3822568	10 mm [0.406 in]


Use a length of hose (1) to attach the blowby tool to one of the crankcase breathers.

Attach a manometer to the location shown (2).

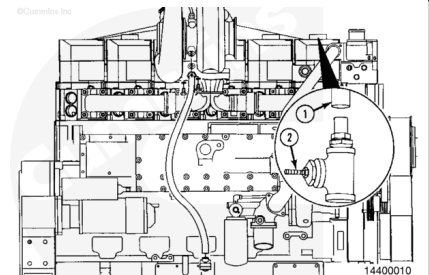

Connect an electronic service tool to the data link.

Monitor results from service tool. If the results are different by more than 10 mm H₂O [0.394 in] then replace the blowby sensor.

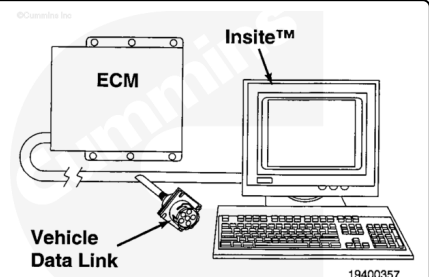


Remove

Remove the hose clamps that attach the blowby pressure sensor to the engine.

Lift up on the locking tab and pull the electrical connectors apart.

Remove the sensor.

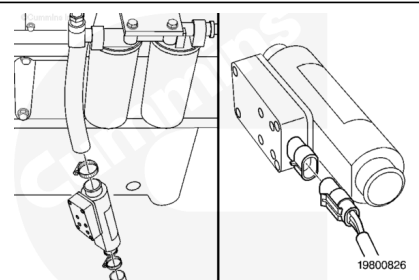

Install

Install the sensor on the engine. Install and tighten the hose clamps.

Push the connectors together until they lock.

