



Service Tool Instruction

Service Tool Instruction
Number: 3377793-1

Revision Level:

Released Date: 01-may-
2001


Description

Signature™ Engine Repair Stand Mounting Plate Kit

Purpose

This service tool instruction provides procedures for the use of the Signature™ engine repair stand mounting plate kit, Part Number 3162464, on Cummins Signature™ engines.

©Cummins Inc

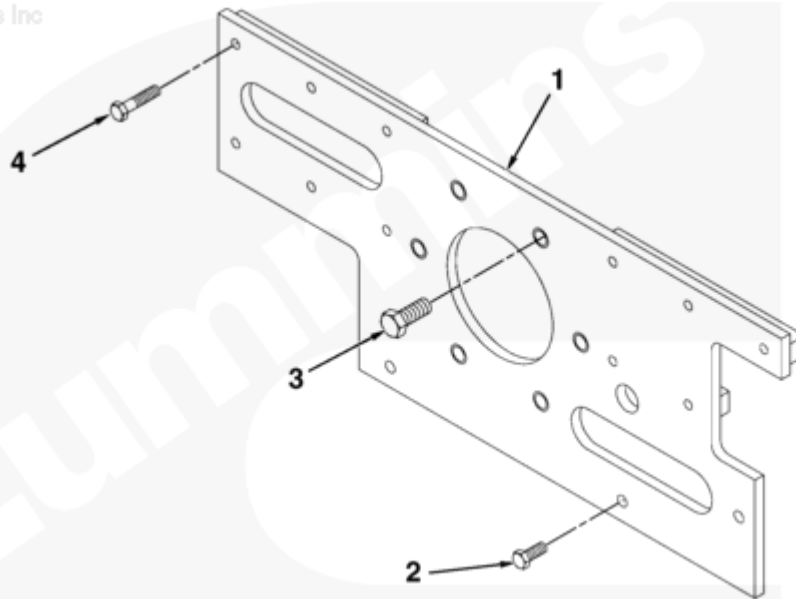

22100093

Signature™ Engine Repair Stand Mounting Plate Kit, Part Number 3162464

Item Number	Part Number	Description	Quantity
1	3163623	Mounting plate	1
2	3925344	Capscrew, M10 x 1.5 x 50-mm (10.9) (1 shown)	3
3	3171717	Capscrew, M16 x 2 x 50-mm (10.9) (1 shown)	6
4	3093807	Capscrew, M10 x 1.5 x 30-mm (10.9) (1 shown)	11


Items Used in Mounting Plate, Part Number 3163623, Purchased Separately

Item Number	Part Number	Description	Quantity
Not shown	3163820	Threaded insert*	1
* Note: The threaded insert is press fit into the mounting plate and is used for repair purposes only.			

Install the mounting plate (1) on the engine repair stand with six capscrews (3).

Tighten the capscrews.

Torque Value: 75 n·m [55 ft-lb]

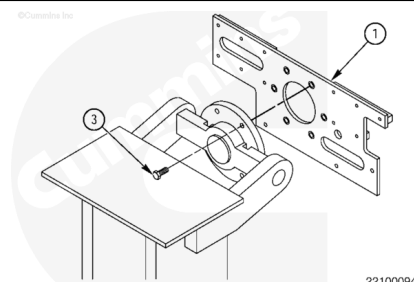


⚠ WARNING ⚠

Do not use substitute capscrews without first verifying that they are the same grade and length as the capscrews that are in the kit. Failure to do so can result in serious injury or damage to the engine if the capscrews break while attached to the rebuild stand.

Position the engine repair stand and mounting plate assembly against the engine block, as shown, and install 11 capscrews (4) through the mounting plate and into the engine block.

Tighten the capscrews.

Torque Value: 60 n·m [44 ft-lb]

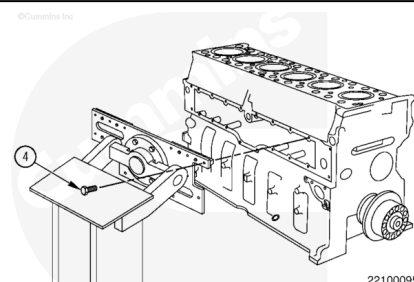

Install the three shorter capscrews (2) through the mounting plate and into the engine block.

Tighten the capscrews.

Torque Value: 60 n·m [44 ft-lb]

