



Service Tool Instruction

Service Tool Instruction
Number: 3377637-3

Revision Level:

Released Date: 26-jun-
2002

Description


Cylinder Liner Installer

Purpose

The cylinder liner installer is used to press the cylinder liner into the cylinder block. Cylinder liner protrusion is checked while the liner is held down by the installer.

This instruction combines the instructions for the Cummins L10, M11, ISM, NH/NT, N14, QST30, Signature, QSK45, QSK60, K19, QSK19, K38, K50, and QSK78 cylinder liner installers. Slight differences can exist among the various installers because of the different cylinder liner sizes. The function and procedures are the same for all of the installers listed. Refer to the appropriate table to determine the correct installer.

©Cummins Inc

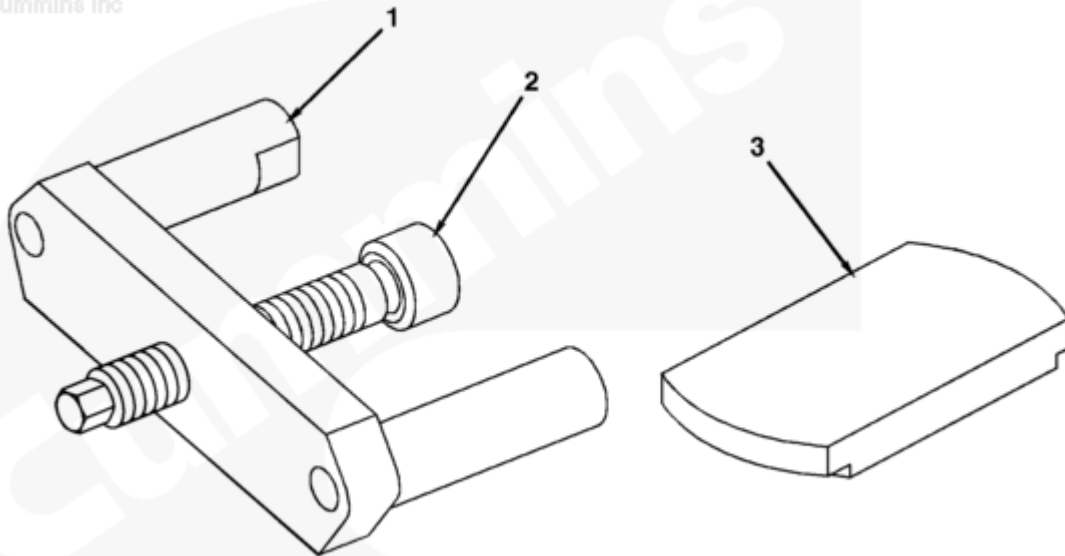

22a00147

Table 1, Cylinder Liner Installer for NH/NT, N14 Engines, Part Number 3823615

Item Number	Part Number	Description	Quantity
1	3823616	Installer fixture	1
2	3823617	Installer screw	1
3	3823618	Cylinder liner installer plate	1

Table 2, Cylinder Liner Installer for L10, M11, and ISM Engines, Part Number 3824272			
Item Number	Part Number	Description	Quantity
1	3824273	Installer fixture	1
2	3823617	Installer screw	1
3	3824274	Cylinder liner installer plate	1

Table 3, Cylinder Liner Installer for ISX/Signature Engine, Part Number 3164606			
Item Number	Part Number	Description	Quantity
1	3164608	Installer fixture	1
2	3823617	Installer screw	1
3	3164607	Cylinder liner installer plate	1

Table 4, Cylinder Liner Installer for QSK45 and QSK60 Engines, Part Number 3164870			
Item Number	Part Number	Description	Quantity
1	3164871	Installer fixture	1
2	3376833	Installer screw	1
3	3163598	Cylinder liner installer plate	1


Table 5, Cylinder Liner Installer for K19, QSK19, K38, and K50 Engines, Part Number 3375422			
Item Number	Part Number	Description	Quantity
1	3375423	Installer fixture	1
2	3376833	Installer screw	1
3	3163598	Cylinder liner installer plate	1

Table 6, Cylinder Liner Installer for QSK78 Engine, Part Number 3164207			
Item Number	Part Number	Description	Quantity
1	3164208	Installer fixture	1
2	3376833	Installer screw	1
3	3164209	Cylinder liner installer plate	1

Table 7, Cylinder Liner Installer for QST30 Engine, Part Number 3164841			
Item Number	Part Number	Description	Quantity
1	3164842	Installer fixture	1
2	3823617	Installer screw	1
3	3823618	Cylinder liner installer plate	1

Position the cylinder liner installer plate (3) across the top of the cylinder liner with the step in the cylinder liner bore.

Tap the top of the cylinder liner installer plate (3) with a soft hammer to square up, and start the cylinder liner into the press-fit cylinder block bore.

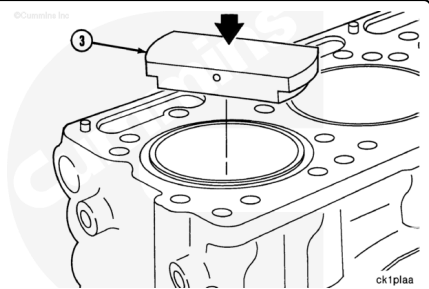


The installer screw threads need to be lubricated and the installer screw swivel foot brass wear pad should be coated with anti-seize compound.

Place the cylinder liner installer fixture (1) across the cylinder liner, and install two cylinder head capscrews.

Tighten the capscrews.

Torque Value: 68 n•m [50 ft-lb]

Position the cylinder liner installer plate so that the cylinder liner protrusion measurements can be taken.

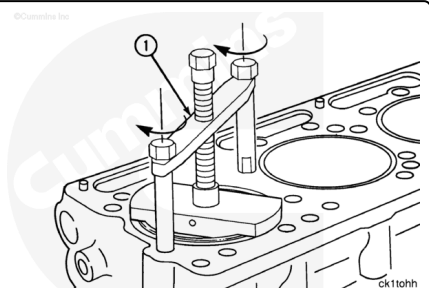


⚠ CAUTION ⚠

Do not use an impact wrench to tighten the installer screw (2). Doing so could result in damage to the tool and cylinder block.

Tighten the installer screw (2).

Torque Value: 136 n•m [100 ft-lb]

Using the depth gauge assembly, Part Number 3164438, check cylinder liner protrusion. Refer to the appropriate troubleshooting and repair manual for the correct procedure.

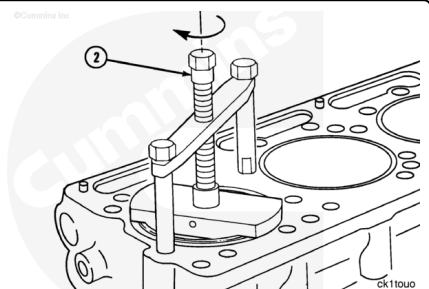

Loosen the installer screw (2). Remove the two cylinder head capscrews and the cylinder liner installer fixture (1).

Remove the cylinder liner installer plate (3).

Repeat the above procedures to install the remaining cylinder liners.

