



ECOGENICA

INNOVATION MEETS
TECHNOLOGY



Wi-Fi enabled

R290 Refrigerant

Solar ready

HOT WATER HEAT PUMP | SPLIT SYTEM

EG-330FR

330 Litre heat pump hot water system with R290 natural refrigerant, delivered as a tank and heat pump pair.

330 L

Tank volume

4.6 w/w

COP

99 l/h

Recovery rate

>350 L

1st hour delivery

Technical Specifications

EG-330FR | Hot Water Heat Pump Split System



PERFORMANCE & CAPACITY	
1st Hour Delivery	>350 Litres
Tank Volume	330 Litres
Recovery Rate	99 Litres/Hour
Set Hot Water Temperature	65 °C
COP *	4.6 W/W
Suitable for People	Up to 7
HEATING	
Compressor Input Power	1020 Watts
Heat Pump Heating Capacity	4998 W
DIMENSIONS & FITTINGS	
Height	1756 mm
Width	620 mm
Heat Pump (H × W × D)	610 × 840 × 285 mm
Fittings (Inlet & Outlet)	32mm / G1 ¼ **
Return Inlet	32mm / G1 ¼
ELECTRICAL & ENVIRONMENT	
Power Supply	220–240V / 50Hz
Circuit Breaker	32 Amps
Max. AMPS	28
Operating Temperature Range	–7 °C ~ +43 °C
Refrigerant Type	R290
Protection Ranking Class	IPX4
Wi-Fi	Yes

* Specifications measured at inlet water temperature +14 °C, dry bulb +19 °C, wet bulb 15 °C, hot water set point 55 °C. Recovery rates vary with environmental conditions. Hot water temperature is limited to 70 °C.

** Commercial 330 litre model has a reducer to 20mm / G ¾ available. This water heater is with fully welded enamel tank meeting the design requirements: AS 2712 and AS 60335. This water heater complies with AS 3498 and AS/NZS 1677.2.

Dimensional Drawings

EG-330FR | All dimensions in millimetres

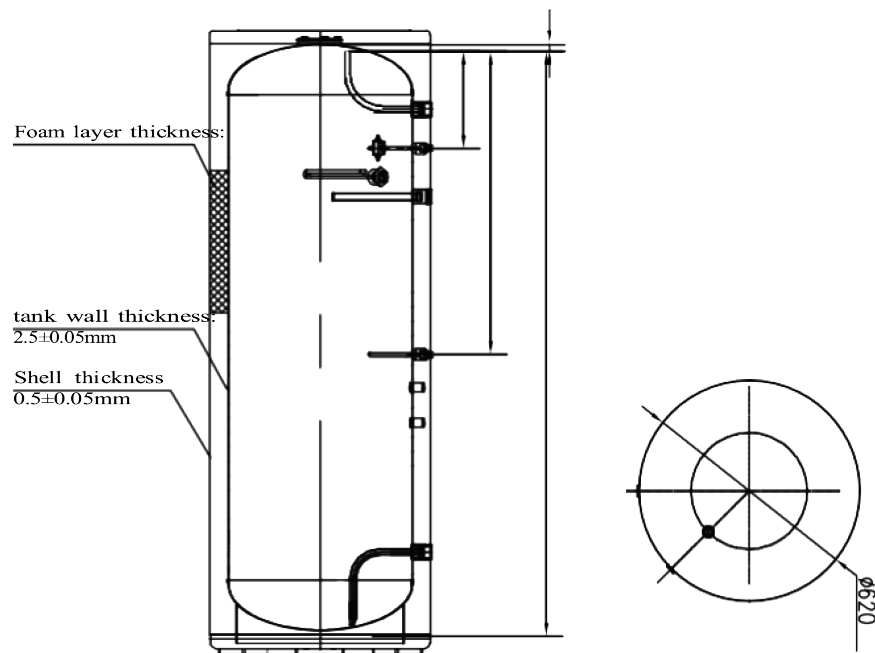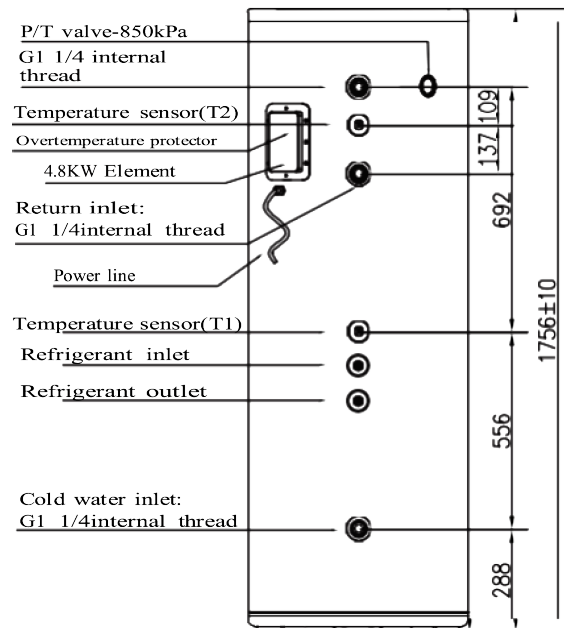

KEY DIMENSIONS

Heat Pump Size

610 × 840 × 285 mm

Tank Size


1756 x Ø620 mm

Fittings

32 mm / G1¼

Heat Pump Assembly - Exploded View

EG-330FR | Component breakdown

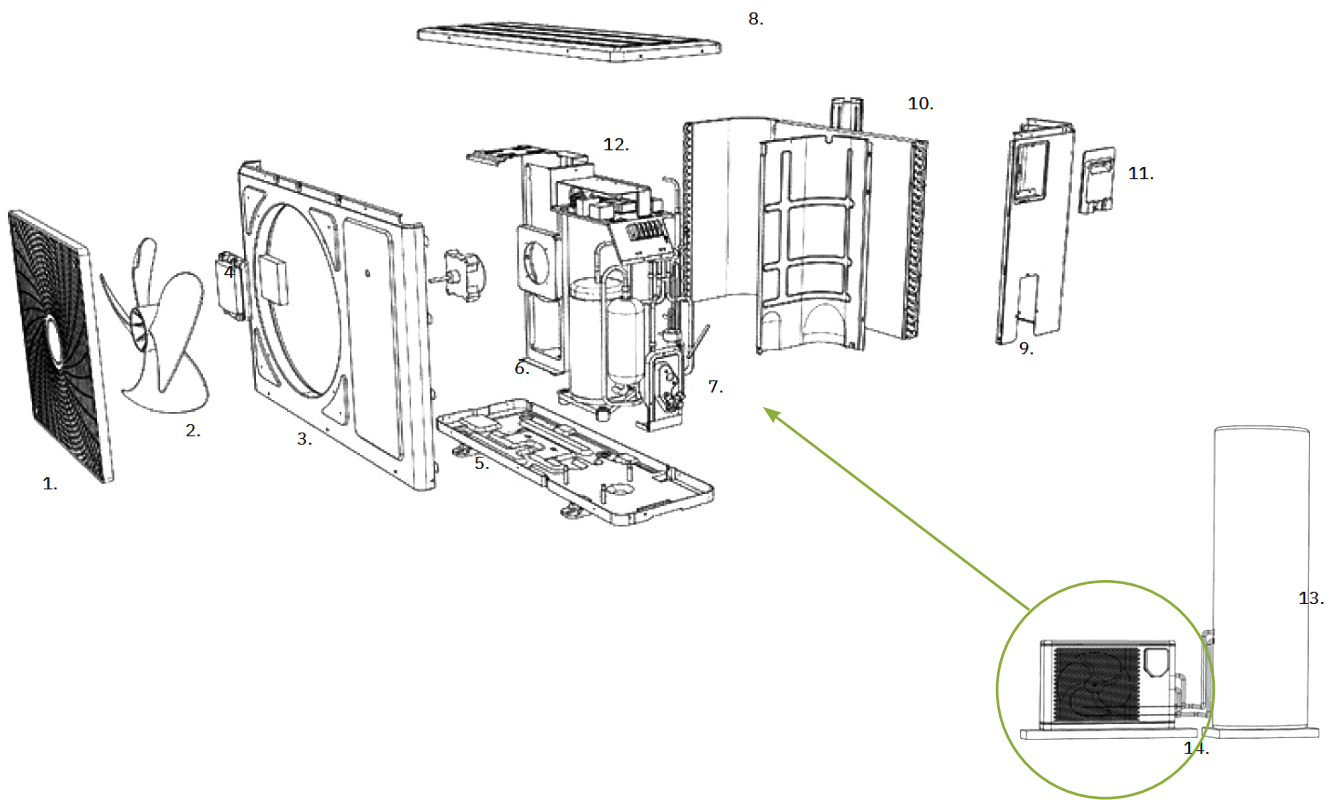

PARTS LIST

- | | | | |
|---|---|----|----------------------------|
| 1 | Fan protection grill | 8 | Top cover |
| 2 | Fan | 9 | Rear casing assembly |
| 3 | Front cover | 10 | Evaporator |
| 4 | Controller | 11 | Power cable cover |
| 5 | Condensation drain | 12 | Circuit board |
| 6 | Compressor assembly | 13 | Condenser tank |
| 7 | Schrader valve & quick condenser connection | 14 | Condenser pipe (pair coil) |

The controller must be mounted on a wall by a qualified Ecogenica technician in a weather proof casing.



Only ECONOVA® or a licensed tradesperson may open this unit.