




# Physics 120B: Lecture 5

LCD Text Display
Keypads and Time Slicing
Interrupts

#### 2×16 LCD

- Typically 5×8 dots per character
- Note 16 pins: indicator of common interface

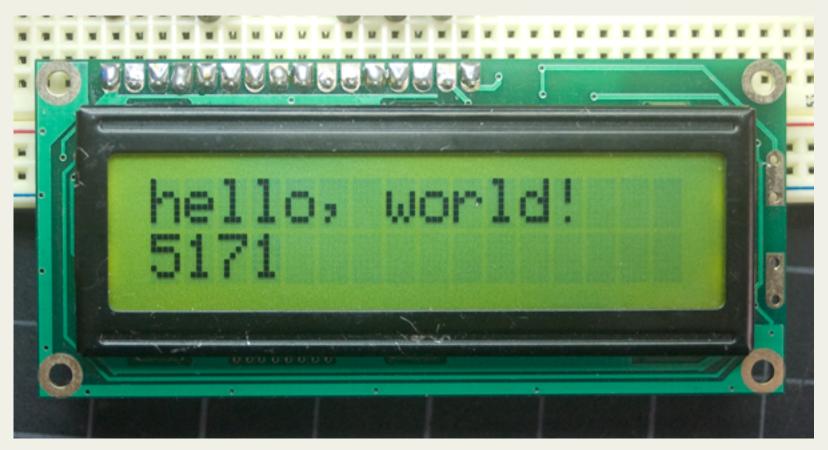

Lecture 5

# Typical LCD Unit pinout


pin	function	Arduino pin (shield)				
1	ground	GND				
2	+5 V	+5 V				
3	VEE (contrast via potentiometer between 0 and 5 V)	pot on shield				
4	RS (LOW = command; HIGH = data/characters)	8				
5	RW (LOW = read; HIGH = write)	GND				
6	E (enable strobe: toggle to load data and command)	9				
7-14	data bus	4,5,6,7 → D4,D5,D6,D7				
15	backlight +V					
16	backlight ground					

Note that most features are accessible using only the 4 MSB data pins

#### Arduino LCD Shield


- Handy package, includes buttons, contrast pot, some pins/headers for other connections
  - consumes Arduino pins 4, 5, 6, 7, 8, 9
  - leaves 0, 1 for Serial, 2, 3, 10, 11, 12, 13
    - fails to make pin 10 available on header, though



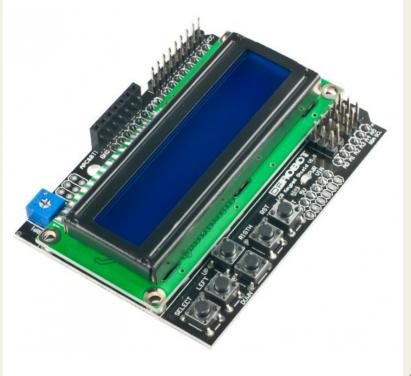

Lecture 5

4

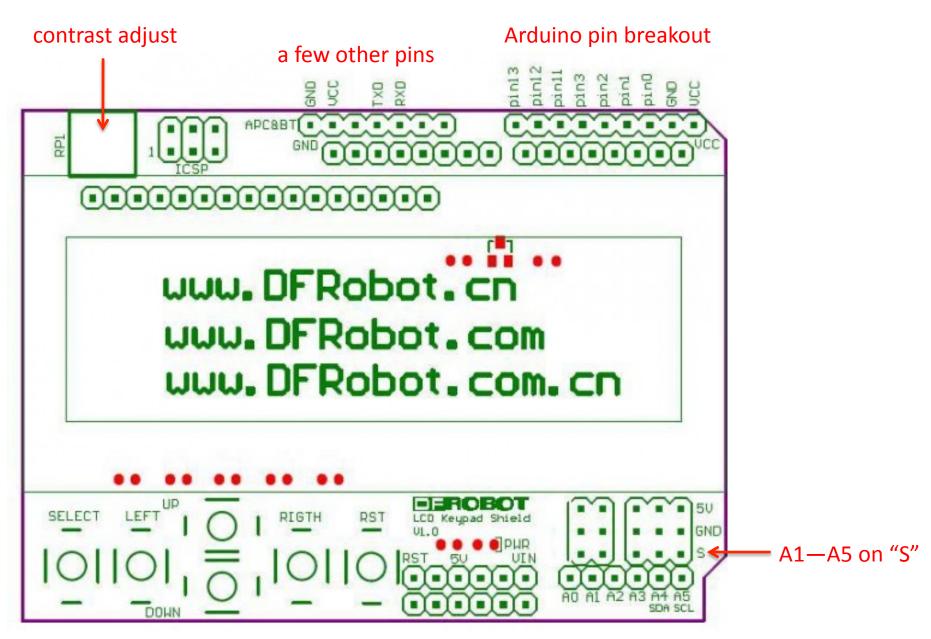

buttons utilize A0 analog input

#### **Buttons**

- The buttons use a voltage divider tree to present an analog voltage to A0
  - note "RIGTH" typo made it onto printed circuit board!
- I measure the following:

none: 4.95 V

- SELECT: 3.59 V


- LEFT: 2.44 V

- DOWN: 1.60 V

- UP: 0.70 V

- RIGHT: 0.0 V

Easily distinguishable

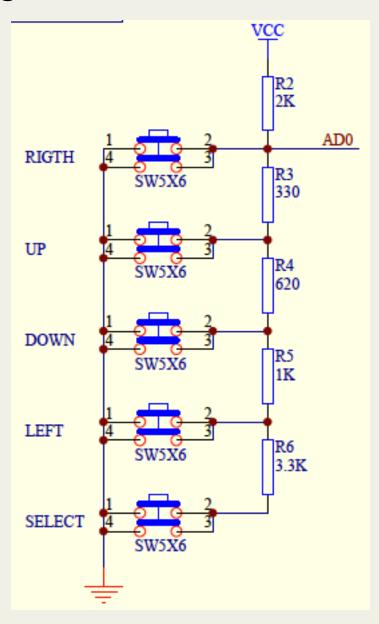

Lecture 5

#### LCD Datasheet

Lower Bits 4 Bits	0000	0001	0010	0011	0100	0101	0110	0111	1000	1001	1010	1011	1100	1101	1110	1111
xxxx0000	CG RAM (1)	þ		0	9	P	١	P	Б	α		0	À	Ð	à	ä
xxxx0001	(2)	4	I	1	Ĥ	Q	a	9	A	ŀ	i	<u>+</u>	Á	Ñ	á	ñ
xxxx0010	(3)	22	Ш	2	В	R	Ь	r	Ж	Γ	¢	2	Â	Ò	â	ò
xxxx0011	(4)	77	#	3	C	S	C	s	3	π	£	3	Ã	Ó	ã	Ó
xxxx0100	(5)	<b>±</b>	\$	4	D	T	d	t	И	Σ	×	Fŧ.	Ä	ô	ä	ô
xxxx0101	(6)	Ŧ	%	5	Ε	U	e	u	Й	σ	¥	μ	Å	õ	å	õ

- For behind-the-scenes control of the LCD display, see the datasheet
  - http://www.physics.ucsd.edu/~tmurphy/phys120b/labs/ doc/LCD\_HD44780.pdf
- Above is just one snippet of the sort of things within

Lecture 5

# And one other snippet from LCD datasheet

Character Codes (DDRAM data)	CGRAM Address	Character Patterns (CGRAM data)	
7 6 5 4 3 2 1 0	5 4 3 2 1 0	7 6 5 4 3 2 1 0	
High Low	High Low	High Low	
0 0 0 0 * 0 0 0	0 0 0 0 0 1 0 1 0 0 1 0 1 0 0 1 0 1 1 1 0 1 1 1	* * * 1 1 1 1 0 1 0 0 0 1 1 0 0 0 1 1 1 1 1 0 1 0 1 0 0 1 0 0 1 0 1 0 0 0 1 * * * 0 0 0 0 0	Character pattern (1)  Cursor position
0 0 0 0 * 0 0 1	0 0 0 0 0 1 0 1 0 0 1 1 1 0 0 1 1 0 1 1 1	* * * 1 0 0 0 1 0 1 0 1 0 1 1 1 1 1 0 0 1 0 0 1 1 1 1	Character pattern (2)  Cursor position

• Datasheets: they build character (at least characters)

# The LiquidCrystal Library


- This is one place I'm not itching for low-level control
  - or wait—where's the fun/challenge in that attitude?
- Library makes simple

```
#include <LiquidCrystal.h>
LiquidCrystal lcd(8, 9, 4, 5, 6, 7); // matches shield config
void setup() {
 lcd.begin(16, 2);  // # columns & rows
  lcd.print("Phys 120B Rules!");
void loop() {
lcd.setCursor(0, 1);  // first col, second row (0 base)
 // print the number of seconds since reset:
  lcd.print(millis()/1000);
```

Lecture 5

# The setup call


- Arguments in LiquidCrystal type are:
  - pins corresponding to: RS, Enable, D4, D5, D6, D7
  - don't need shield at all; just those 6 pins and power/gnd
  - here's one without shield: must hook R/W to gnd; rig pot

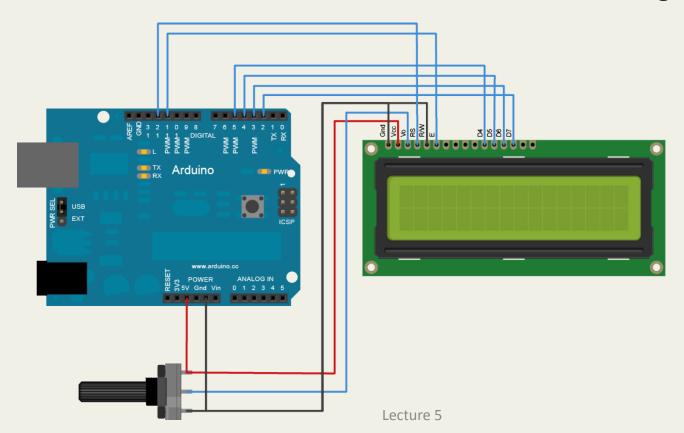

10

# Same thing in schematic form

Note this pinout is different than shield's mapping

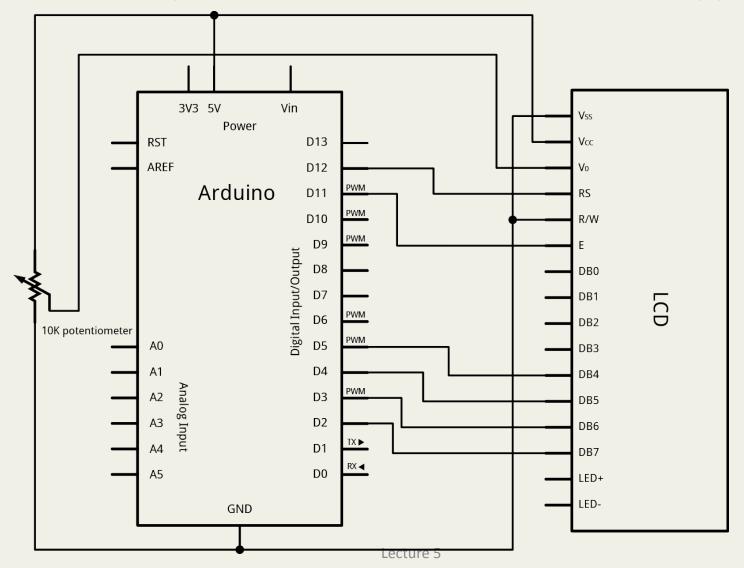

# Explore the library

- Can do a lot with a few functions, but more available
  - <u>LiquidCrystal()</u> must use
  - begin() must use
  - clear()
  - home()
  - <u>setCursor()</u> almost certainly use
  - write()
  - print() almost certainly use
  - cursor()
  - noCursor()
  - blink()
  - noBlink()
  - display()
  - noDisplay()
  - scrollDisplayLeft()
  - scrollDisplayRight()
  - autoscroll()
  - noAutoscroll()
  - leftToRight()
  - rightToLeft()
  - createChar()


#### LCD References

- Good general intro to LCD control
  - http://spikenzielabs.com/SpikenzieLabs/LCD\_How\_To.html
- Arduino page
  - http://arduino.cc/en/Tutorial/LiquidCrystal
- See links on course site:
  - http://www.physics.ucsd.edu/~tmurphy/phys120b/labs/ useful links.html
    - http://www.physics.ucsd.edu/~tmurphy/phys120b/labs/doc/LCDshield-schem.pdf
    - http://www.physics.ucsd.edu/~tmurphy/phys120b/labs/doc/ LCD\_HD44780.pdf

# Keypads

- Most keypads are matrix form: row contact and column contact
  - pressing button connects one row to one column



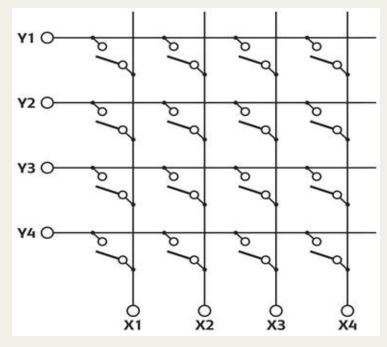


note crossings do not connect: dots indicate connection

# Reading the keypad

- Imagine we hooked the rows

   (Y) to four digital inputs with
   pull-up resistors
  - and hooked the columns (X) up to digital outputs
- Now cycle through X, putting each to zero (LOW) in turn
  - otherwise enforce high state
- Read each row value and see if any inputs are pulled low
  - means switch closed, button pressed
- Called time-slicing

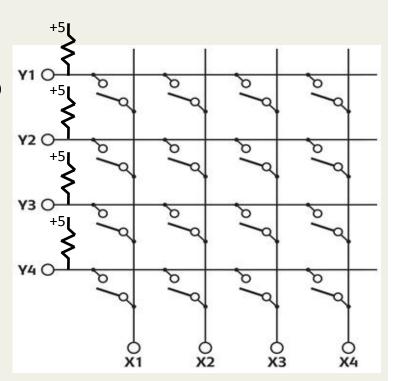

## Those Pesky Pullups

- Arduino has a pinMode option to engage internal pullup resistors
  - pinMode(pin, INPUT\_PULLUP);
  - does just what we want
- Let's start by defining our pins (example values)
  - and our key characters

### Now set up pins in setup()

```
pinMode(ROW1, INPUT PULLUP);
etc.
pinMode(COL1, OUTPUT);
etc.
digitalWrite(COL1, HIGH); // def. state is high; start high

    Now in loop()

pressed = 0;
                                     // value for no press
digitalWrite(COL1, LOW);
                                     // assert col 1 low
if (digitalRead(ROW1) == LOW)
  pressed = 0x11;
                                     // upper digit is row
if (digitalRead(ROW2) == LOW)
 pressed = 0x21;
                                     // lower digit is col
etc.
digitalWrite(COL1, HIGH);
                                  // reset coll to high
```

etc. for all 4 columns; the scheme for pressed is just one way, my first impulse

## Piecing together at end of loop

- print only if new press, new line if '#' pressed
  - note >> bit shift ro look at high nibble;
  - and mask lower 4 bits for isolating lower nibble
  - thus decode into row and column (at least this is one way)

### Cleaning up code

- Repeating the sweep four times during the is a bit clumsy, from a coding point of view
  - begs to be function()-ized

```
int readCol(int column)
{
  int row_press = 0;
  digitalWrite(column, LOW);
  if (digitalRead(ROW1) == LOW)
    row_press = 1;
  if (digitalRead(ROW2) == LOW)
    row_press = 2;
  etc.
  digitalWrite(column, HIGH);
  return row_press;
}
```

Lecture 5

# Now a function to sweep columns

```
int sweepCols()
  int row press;
  pressed = 0;
  row press = readCol(COL1);
  if (row_press > 0)
    pressed = (row_press << 4) + 1;</pre>
  etc.
  row press = readCol(COL4);
  if (row press > 0)
    pressed = (row press << 4) + 4;</pre>
  return pressed;
now in main loop, just: pressed = sweepCols(); and otherwise same
```

## And, there's a Library

- Of course there is...
  - http://playground.arduino.cc/code/Keypad
  - installed in sketch folder libraries/ directory

```
#include <Keypad.h>
const byte ROWS = 4; //four rows
const byte COLS = 3; //three columns
char keys[ROWS][COLS] = \{\{'1','2','3'\}, \{'4','5','6'\},
                         {'7','8','9'}, {'#','0','*'}};
byte rowPins[ROWS] = {5, 4, 3, 2}; //conn. to the row pins of the keypad
byte colPins[COLS] = {8, 7, 6}; //conn. to the col pins of the keypad
Keypad keypad = Keypad( makeKeymap(keys), rowPins, colPins, ROWS, COLS );
void setup(){
  Serial.begin(9600);}
void loop(){
  char key = keypad.getKey();
  if (key != NO KEY)
    Serial.println(key);
                                  Lecture 5
```

## Some Notes on the Keypad Library

- Note that the key map is taken seriously by Keypad.h
  - if any character appears twice, it messes up
  - therefore more than a printing convenience; a core functional element of the operation

#### Functions


```
- void begin(makeKeymap(userKeymap))
- char waitForKey()
- char getKey()
- KeyState getState()
- boolean keyStateChanged()
- setHoldTime(unsigned int time)
- setDebounceTime(unsigned int time)
- addEventListener(keypadEvent)
```

Consult link on previous slide for descriptions

# Combining LCD and Keypad?

- The LCD uses six digital pins
- A 4x4 keypad needs 8 pins
- Uno has 14, but pins 0 and 1 are used by Serial
  - could forgo serial communications, and max out pins
- Need a better way, less greedy
- Take a page from LCD shield buttons: use analog input
- Many schemes are possible
  - generally: +5 V on rows/cols, GND on other, resistors between
  - could have all 16 buttons map to a single analog input
    - interesting problem in designing appropriate network
  - or make it easier and map to four analog inputs

# Four-Input Scheme

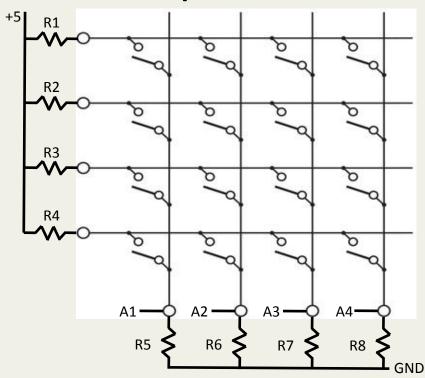

- R1 thru R4 could be 10 k $\Omega$ , 4.7 k $\Omega$ , 2.2 k $\Omega$ , 1 k $\Omega$
- R5 thru R7 could be all 3.3 k $\Omega$ , or in that ballpark
  - voltages will be 0 (nothing pressed), 1.25 V (top row),
    2.06V; 3 V; and 3.8 V for resp. rows lots of separation
- Poll each A# input to ascertain keypress

#### Interrupts

- Sometimes we can't afford to miss a critical event,
   while the main loop is busy, or in a delay, etc.
- Interrupts demand immediate attention
- Uno has two interrupts
  - int.0 on pin 2; int.1 on pin 3
  - Mega has 6 available interrupts
- You can exempt some of loop from interruption
  - may be rare that you need to do this, but...

```
void loop()
{
  noInterrupts();
  // critical, time-sensitive code here
  interrupts();
  // other code here
}
```

25

# Easily implemented

- Just have to attach an interrupt to a service routine
  - attachInterrupt(int#, function, trigger\_type);
  - the interrupt number is 0 or 1 on Uno (pins 2 or 3)
  - the function is some function you've created to service the interrupt: name it whatever makes sense
  - trigger\_type can be
    - RISING: detects edge from logic low to logic high
    - FALLING: detects falling edge
    - CHANGE: any change between high/low (watch out for bounce!)
    - LOW: a low state will trigger an interrupt
  - note that delay() will not work within the service routine
    - need delayMicroseconds(), only good up to 16383  $\mu s$
    - but not often interested in delay in interrupt routine

### Simple example

Turn on/off LED via interrupt; note volatile variable

```
int pin = 13;
volatile int state = LOW;
void setup()
 pinMode(pin, OUTPUT);
  attachInterrupt(0, blink, CHANGE);
void loop()
  digitalWrite(pin, state);
void blink()
  state = !state;
```


#### **Interrupt Notes**


- Inside the attached function, delay() won't work and the value returned by millis() will not increment.
   Serial data received while in the function may be lost.
   You should declare as volatile any variables that you modify within the attached function.
- See the page for attachInterrupts():
  - http://arduino.cc/en/Reference/AttachInterrupt

# Interrupts from analog?

- What if we need to make a digital interrupt out of an analog signal like the analog-scheme keypad?
- Can use a comparator to sense if we're above or below some threshold voltage
  - output is digital state
  - could also use a high-pass (differentiator) to sense any significant change in the analog level, fed into a comparator

## **Comparator Basics**

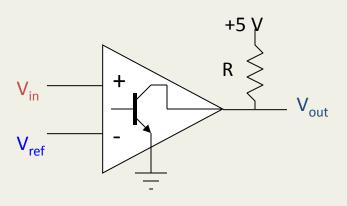


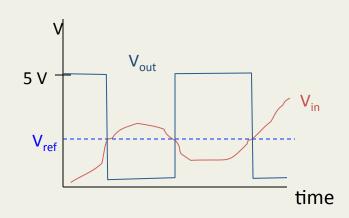

- Scheme is: when + input larger than input, transistor driven to ON
  - then current flows through transistor and output is pulled low
- When  $V_{in} < V_{ref}$ ,  $V_{out}$  is pulled high (through the pull-up resistor—usually 1 k $\Omega$  or more)
  - this arrangement is called "open collector" output: the output is basically
    the collector of an npn transistor: in saturation it will be pulled toward
    the emitter (ground), but if the transistor is not driven (no base current),
    the collector will float up to the pull-up voltage
- The output is a "digital" version of the signal
  - with settable low and high values (here ground and 5V)

#### Can Gang Open-Collector Comparators into Chain

- Put same (or different)
   threshold values on inputs
   and four different analog
   signals on +
  - tie all four open collectors
     together with common pull-up
  - if any comparator activates, the associated transistor will pull the combined output low, and the other (off) transistors won't care
- The "311" comparator is standard

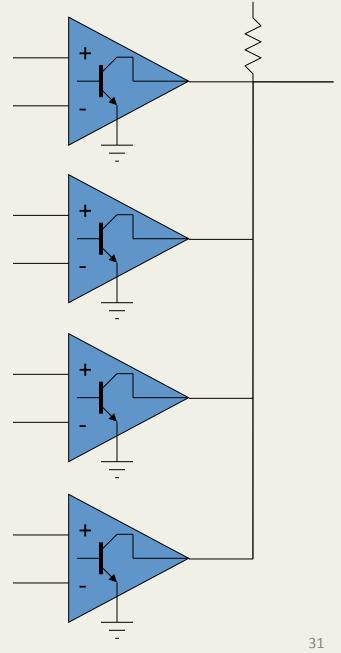

Lecture 5

# **Upcoming Lab**

- Monday is a holiday, so this is it for lab prep!
- In Week 3 lab, we will:
  - make an LCD analog voltage meter
  - read a 4x4 keypad using the time-slice method and 8 pins
  - combine the keypad, LCD, and interrupts into a party