



Edition 1.0 2014-03

INTERNATIONAL STANDARD

Information technology – Wireless beacon-enabled energy efficient mesh network (WiBEEM) for wireless home network services – Part 3: NWK layer





THIS PUBLICATION IS COPYRIGHT PROTECTED Copyright © 2014 ISO/IEC, Geneva, Switzerland

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either IEC or IEC's member National Committee in the country of the requester. If you have any questions about ISO/IEC copyright or have an enquiry about obtaining additional rights to this publication, please contact the address below or your local IEC member National Committee for further information.

IEC Central Office Tel.: +41 22 919 02 11 3, rue de Varembé Fax: +41 22 919 03 00

CH-1211 Geneva 20 info@iec.ch Switzerland www.iec.ch

About the IEC

The International Electrotechnical Commission (IEC) is the leading global organization that prepares and publishes International Standards for all electrical, electronic and related technologies.

About IEC publications

The technical content of IEC publications is kept under constant review by the IEC. Please make sure that you have the latest edition, a corrigenda or an amendment might have been published.

IEC Catalogue - webstore.iec.ch/catalogue

The stand-alone application for consulting the entire bibliographical information on IEC International Standards, Technical Specifications, Technical Reports and other documents. Available for PC, Mac OS, Android Tablets and iPad

IEC publications search - www.iec.ch/searchpub

The advanced search enables to find IEC publications by a variety of criteria (reference number, text, technical committee,...). It also gives information on projects, replaced and withdrawn publications.

IEC Just Published - webstore.iec.ch/justpublished

Stay up to date on all new IEC publications. Just Published details all new publications released. Available online and also once a month by email.

Electropedia - www.electropedia.org

The world's leading online dictionary of electronic and electrical terms containing more than 30 000 terms and definitions in English and French, with equivalent terms in 14 additional languages. Also known as the International Electrotechnical Vocabulary (IEV) online.

IEC Glossary - std.iec.ch/glossary

More than 55 000 electrotechnical terminology entries in English and French extracted from the Terms and Definitions clause of IEC publications issued since 2002. Some entries have been collected from earlier publications of IEC TC 37, 77, 86 and CISPR.

IEC Customer Service Centre - webstore.iec.ch/csc

If you wish to give us your feedback on this publication or need further assistance, please contact the Customer Service Centre: csc@iec.ch.



ISO/IEC 29145-3

Edition 1.0 2014-03

INTERNATIONAL STANDARD

Information technology – Wireless beacon-enabled energy efficient mesh network (WiBEEM) for wireless home network services – Part 3: NWK layer

INTERNATIONAL ELECTROTECHNICAL COMMISSION

PRICE CODE

P

ICS 35.200 ISBN 978-2-8322-1450-3

Warning! Make sure that you obtained this publication from an authorized distributor.

CONTENTS

FOF	REWOR	D		4			
INT	RODUC	TION		5			
1	Scope			6			
2	Norma	tive refere	nces	6			
3	Terms	, definitions	s and abbreviations	6			
	3.1		nd definitions				
	3.2	Abbrevia	ations	7			
	3.3	Convent	ions	8			
4	Confor	mance		8			
5	Overvi	ew of the V	ViBEEM technology	8			
6	NWKI	ayer specif	ications	8			
	6.1	General		8			
	6.2		ver service specifications				
		6.2.1	Overview	8			
		6.2.2	NWK data service	9			
		6.2.3	NWK management service	12			
		6.2.4	Network formation	14			
		6.2.5	Allowing devices to join				
		6.2.6	Begin as a router				
		6.2.7	Joining a network				
		6.2.8	Joining a device directly to a network				
		6.2.9	Leaving a network				
		6.2.10	Resetting a device				
		6.2.11	Receiver synchronisation				
D.1. 1		6.2.12	Information base maintenance				
BIDI	iograph	у		34			
	4						
_		-	structure				
_		_	equence chart for resetting the network layer				
Figu	ıre 3 – I	Message s	equence chart for synchronising in a non-beaconing network	30			
Tab	le 1 – N	ILDE-DAT <i>i</i>	A.request parameters	10			
			A.confirm parameters				
			A.indication parameters				
Tab	le 4 – S	Summary of	f primitives used by NWK layer	12			
Tab	le 5 – N	ILME-NET\	WORK-DISCOVERY.request parameters	13			
Tab	le 6 – N	ILME-WiBE	EEM-DISCOVERY.confirm paramters	14			
	Table 7 - Network descriptor information fields14						
	Table 8 – NLME-WRC-OPERATING.request parameters15						
			WORK-FORMATION.confirm parameters				
			OW-JOINING.request				
			OW-JOINING.confirm parameters				
ıab	10 11 -	IAFINIF-WFF	OW COMMING.COMMIN Parameters	17			

Table 12 – NLME-SET-SUPERFRAME.request parameters	18
Table 13 - NLME-SET-SUPERFRAME.confirm parameters	19
Table 14 – NLME-JOIN.request parameters	20
Table 15 – NLME-JOIN.indication parameters	21
Table 16 – NLME-JOIN.confirm parameters	22
Table 17 – NLME-DETERMINED-JOIN.request parameters	22
Table 18 – Capability information parameter format	23
Table 19 - NLME-DETERMINED-JOIN.confirm parameters	23
Table 20 – NLME-LEAVE.request parameters	24
Table 21 – NLME-LEAVE.indication parameters	25
Table 22 – NLME-LEAVE.confirm parameters	25
Table 23 – NLME-RESET.confirm parameters	27
Table 24 – NLME-SYNC.request parameters	28
Table 25 – NLME-SYNC.confirm parameters	29
Table 26 – NLME-READ-NIB.request parameters	30
Table 27 – NLME-READ-NIB.confirm parameters	31
Table 28 – NLME-WRITE-NIB.request parameters	32
Table 29 - NLME-WRITE-NIB.confirm parameters	33

INFORMATION TECHNOLOGY – WIRELESS BEACON-ENABLED ENERGY EFFICIENT MESH NETWORK (WIBEEM) FOR WIRELESS HOME NETWORK SERVICES –

Part 3: NWK layer

FOREWORD

- 1) ISO (International Organization for Standardization) and IEC (International Electrotechnical Commission) form the specialized system for worldwide standardization. National bodies that are members of ISO or IEC participate in the development of International Standards. Their preparation is entrusted to technical committees; any ISO and IEC member body interested in the subject dealt with may participate in this preparatory work. International governmental and non-governmental organizations liaising with ISO and IEC also participate in this preparation.
- 2) In the field of information technology, ISO and IEC have established a joint technical committee, ISO/IEC JTC 1. Draft International Standards adopted by the joint technical committee are circulated to national bodies for voting. Publication as an International Standard requires approval by at least 75 % of the national bodies casting a vote.
- 3) The formal decisions or agreements of IEC and ISO on technical matters express, as nearly as possible, an international consensus of opinion on the relevant subjects since each technical committee has representation from all interested IEC and ISO member bodies.
- 4) IEC, ISO and ISO/IEC publications have the form of recommendations for international use and are accepted by IEC and ISO member bodies in that sense. While all reasonable efforts are made to ensure that the technical content of IEC, ISO and ISO/IEC publications is accurate, IEC or ISO cannot be held responsible for the way in which they are used or for any misinterpretation by any end user.
- 5) In order to promote international uniformity, IEC and ISO member bodies undertake to apply IEC, ISO and ISO/IEC publications transparently to the maximum extent possible in their national and regional publications. Any divergence between any ISO/IEC publication and the corresponding national or regional publication should be clearly indicated in the latter.
- 6) ISO and IEC provide no marking procedure to indicate their approval and cannot be rendered responsible for any equipment declared to be in conformity with an ISO/IEC publication.
- 7) All users should ensure that they have the latest edition of this publication.
- 8) No liability shall attach to IEC or ISO or its directors, employees, servants or agents including individual experts and members of their technical committees and IEC or ISO member bodies for any personal injury, property damage or other damage of any nature whatsoever, whether direct or indirect, or for costs (including legal fees) and expenses arising out of the publication of, use of, or reliance upon, this ISO/IEC publication or any other IEC, ISO or ISO/IEC publications.
- 9) Attention is drawn to the normative references cited in this publication. Use of the referenced publications is indispensable for the correct application of this publication.
- 10) Attention is drawn to the possibility that some of the elements of this International Standard may be the subject of patent rights. ISO and IEC shall not be held responsible for identifying any or all such patent rights.

International Standard ISO/IEC 29145-3 was prepared by subcommittee 25: Interconnection of information technology equipment, of ISO/IEC joint technical committee 1: Information technology.

The list of all currently available parts of the ISO/IEC 29145 series, under the general title Information technology – Wireless beacon-enabled energy efficient mesh network (WiBEEM) for wireless home network services, can be found on the IEC web site.

This International Standard has been approved by vote of the member bodies, and the voting results may be obtained from the address given on the second title page.

This publication has been drafted in accordance with the ISO/IEC Directives, Part 2.

INTRODUCTION

This International Standard specifies the WiBEEM (Wireless Beacon-enabled Energy Efficient Mesh network) protocol, which provides low-power-consuming mesh network functions by enabling the "beacon mode operation". WiBEEM is based on the IEEE 802.15.4 standard with additional upper layer protocols and a specific usage of the MAC layer protocol. Through the novel use of beacons, WiBEEM technology achieves longer battery life, larger network support, quicker response, enhanced mobility and dynamic reconfiguration of the network topology compared with other protocols such as ZigBee.

In the beacon mode, beacon information propagates over the entire mesh network nodes during the BOP (Beacon-Only Period) of the superframe structure without any beacon conflicts by utilising a smart beacon scheduling technique in the BOP. It also provides location information about moving devices without spending extra time running a positioning and locating algorithm by using RSSI (Received Signal Strength Indication). These features allow the WiBEEM protocol to be widely used for wireless home network services in the ubiquitous network era.

One of the key features of the WiBEEM protocol is that it has a special time interval called BOP (Beacon-Only Period) in the superframe structure that allows more than two beacons to be transmitted. This unique time period is located at the beginning of the Superframe. Because the BOP does not use the CSMA/CA mechanism, the network will not work properly in the beacon mode unless an appropriate algorithm is applied. This algorithm needs to manage and control multiple beacons in a single superframe. The solution is the Beacon Scheduling method applied in the BOP to avoid collisions among beacons, providing synchronisation among all the nodes of the entire mesh network.

For the network layer, the NAA (Next Address Available) mechanism, which is a short address allocation algorithm, has been adopted to provide an efficient way of utilising the complete 16-bit address space. The NAA algorithm does not limit the maximum number of children nodes that a node of a mesh network can have. Since the number of children nodes is unlimited, the NAA mechanism allows the WiBEEM protocol to be used not only for home network services, but also for community services. WiBEEM can be used where high network expandability through efficient use of short address spaces, device mobility and end-to-end QoS are required.

This part of ISO/IEC 29145 specifies the network layer (NWK) of the WiBEEM protocol for wireless home network services that support a low-power-consuming wireless mesh network as well as device mobility and QoS.

INFORMATION TECHNOLOGY – WIRELESS BEACON-ENABLED ENERGY EFFICIENT MESH NETWORK (WIBEEM) FOR WIRELESS HOME NETWORK SERVICES –

Part 3: NWK layer

1 Scope

This part of ISO/IEC 29145 specifies the network layer (NWK) of the WiBEEM (Wireless Beacon-enabled Energy Efficient Mesh network) protocol for wireless home network services that support a low-power-consuming wireless mesh network as well as device mobility and quality of service.

2 Normative references

The following documents, in whole or in part, are normatively referenced in this document and are indispensable for its application. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO/IEC 29145-1:2014, Information technology – Wireless beacon-enabled energy efficient mesh network (WiBEEM) for wireless home network services – Part 1: PHY layer

3 Terms, definitions and abbreviations

3.1 Terms and definitions

For the purposes of this document, the following terms and definitions apply.

3 1 1

association

service used to establish the membership of a device in a wireless mesh network

3.1.2

co-ordinator

wireless device configured to provide synchronisation services through the transmission of beacons

Note 1 to entry: If a co-ordinator is the principal controller of a wireless mesh network, it is called the WMC (WiBEEM mesh co-ordinator).

3.1.3

device

entity containing an implementation of the WiBEEM applications, NWK, MAC and physical interface to the wireless medium

3.1.4

frame

data format of aggregated bits from a medium access control (MAC) layer entity transmitted in a specified sequence

3.1.5

packet

format of aggregated bits transmitted in a specified sequence across the physical medium

3.1.6

personal operating space

space of typically about 10 m around a person or an object, no matter whether this person or object is stationary or in motion

3.1.7

protocol data unit

unit of data exchanged between two peer entities

3.1.8

WiBEEM end device

WiBEEM device acting as the leaf device of a mesh network

3.1.9

WiBEEM mesh co-ordinator

WiBEEM device acting as the principal controller of a mesh network

Note 1 to entry: A WiBEEM mesh network has exactly one WiBEEM mesh co-ordinator.

3.1.10

WiBEEM routable co-ordinator

WiBEEM device acting as the router of a mesh network

3.1.11

wireless medium

medium used to implement the transfer of protocol data units (PDUs) between peer physical layer (PHY) entities of a low-rate wireless mesh network

3.2 Abbreviations

The following acronyms and abbreviations are used in this standard and commonly used in other industry publications.

AES Advanced Encryption Standard ARQ Automatic Request-Response

BO Beacon Order

BOP Beacon Only Period

BTTSL Beacon Transmit Time Slot Length

CAP Contention Access Period

ID Identifier

MIB Management Information Base

NAA Next Address Available
PDU Protocol Data Unit
PQP Prioritised QoS Period

QoS Quality of Service

RAP Reservation-Based Access Period

WED WiBEEM End Device

WiBEEM Wireless Beacon-enabled Energy Efficient Mesh network

WMC WiBEEM Mesh Co-ordinator

WRC WiBEEM Routable Co-ordinator

3.3 Conventions

All the italicised words used in this standard represent relevant constants defined and stored in the MIB (management information base) of each layer.

4 Conformance

A WiBEEM device that claims conformance to this part of ISO/IEC 29145 shall implement all the primitives that are specified in 6.2. Each WiBEEM device shall be able to act as a WMC, a WRC and a WED. When operating in the role of a WMC it shall act as specified in 5.3.2 of ISO/IEC 29145-1:2014, when operating in the role of a WRC, it shall act as specified in 5.3.3 of ISO/IEC 29145-1:2014, and when operating in the role of a WED, it shall act as specified in 5.3.3 of ISO/IEC 29145-1.

5 Overview of the WiBEEM technology

Clause 5 of ISO/IEC 29145-1:2014 presents an overview of the WiBEEM technology and the functionalities of the WiBEEM devices.

6 NWK layer specifications

6.1 General

This clause specifies the NWK layer of this standard. The NWK layer handles network management, message broker and routing. This clause specifies the services that shall be provided by the WiBEEM NWK layer.

Constants and attributes that are specified and maintained by the MAC layer are written in the text of this clause in italics. Constants have a general prefix of "a". Attributes have a general prefix of "mac".

6.2 NWK layer service specifications

6.2.1 Overview

The NWK layer services provide an interface between the NWK layer and the APP layer. The NWK layer provides two services, accessed through two SAPs:

- MAC data service, accessed through the NWK layer data SAP (NLDE-SAP); and
- NWK management service, accessed through the NLME-SAP.

Figure 1 depicts the elements and interfaces of NWK layer.

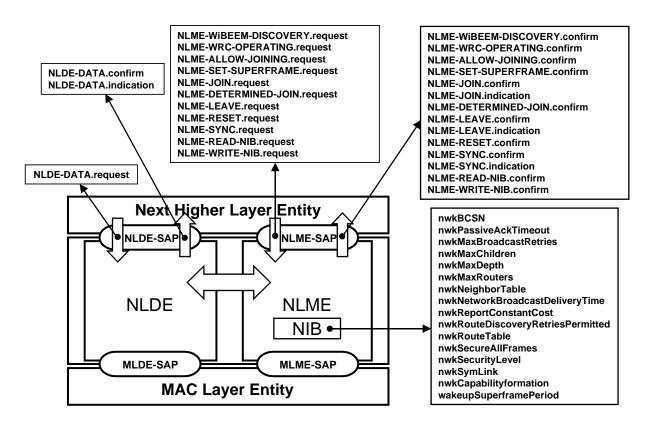


Figure 1 - NWK layer structure

6.2.2 NWK data service

6.2.2.1 Overview

The NWK layer data entity SAP (NLDE-SAP) supports the transport of application protocol data units (APDUs) between peer application entities.

6.2.2.2 NLDE-DATA.request

6.2.2.2.1 Function

This primitive requests the transfer of a data PDU (NSDU) from the local Application layer entity to a single or multiple peer application layer entities.

6.2.2.2.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
DE-DATA.request (
DstAddr,
NsduLength,
Nsdu,
NsduHandle,
BroadcastRadius,
DiscoverRoute,
SecurityEnable
```

Table 1 specifies the parameters for the NLDE-DATA.request primitive.

Table 1 - NLDE-DATA.request parameters

Name	Туре	Valid range	Description
DstAddr	Device address	Specified by the DstAddr	The network address of the entity or entities to which the NSDU is being transferred.
NsduLength	integer	≤nwkcMaxPayloadSize	The number of octets comprising the NSDU to be transferred.
Nsdu	Set Of Octets	-	The set of octets comprising the NSDU to be transferred.
NsduHandle	integer	0x00 to 0xff	The handle associated with the NSDU to be transmitted by the NWK layer entity.
BroadcastRadius	integer	0x00 to 0xff	The distance, in hops, that a broadcast frame will be allowed to travel through the network.
DiscoverRoute	Boolean	TRUE or FALSE	The DiscoverRoute parameter may be used to enable route discovery operations for the transit of this frame.
Discoveriodic	Boolean	TRUE OF FALSE	TRUE = enable route discovery
			FALSE = disable route discovery
Security enable	Boolean	TRUE or FALSE	The SecurityEnable parameter may be used to enable NWK layer security processing for the current frame.

6.2.2.2.3 When generated

This primitive is generated by a local APS sublayer entity whenever a data PDU (NSDU) is to be transferred to a peer APS sublayer entity.

6.2.2.2.4 Effect on receipt

On receipt of this primitive on a device that is not currently associated, the NWK layer will issue an NLDE-DATA.confirm primitive with a status of INVALID_REQUEST.

On receipt of this primitive, the NLDE first constructs an NPDU in order to transmit the supplied NSDU.

If, during processing, the NLDE issues the NLDE-DATA.confirm primitive prior to transmission of the NSDU, all further processing is aborted.

6.2.2.3 NLDE-DATA.confirm

6.2.2.3.1 Function

This primitive reports the results of a request to transfer a data PDU (NSDU) from a local APS sublayer entity to a single peer APS sublayer entity.

6.2.2.3.2 Semantics of the service primitive

The semantics of this primitive is as follows:

Table 2 specifies the parameters for the NLDE-DATA.confirm primitive.

Table 2 – NLDE-DATA.confirm parameters

Name	Туре	Valid range	Description
nsduHandle	Integer	10×00 to 0×11	The handle associated with the NSDU being confirmed.
		SUCCESS, TRANSACTION_OVERFLOW,	
	Enumeration	TRANSACTION_EXPIRED, CHANNEL_ACCESS_FAILURE,	
Status		INVALID_GTS, NO_ACK, UNAVAILABLE_KEY,	The status of the corresponding request.
		FRAME_TOO_LONG, FAILED_SECURITY_CHECK,	
		or INVALID_PARAMETER	

6.2.2.3.3 When generated

This primitive is generated by the local NLDE in response to the reception of an NLDE-DATA.request primitive.

6.2.2.3.4 Effect on receipt

On receipt of this primitive the APS sublayer of the initiating device is notified of the result of its request to transmit. If the transmission attempt was successful, the status parameter will be set to SUCCESS. Otherwise, the status parameter will indicate the error.

6.2.2.4 NLDE-DATA.indication

6.2.2.4.1 Function

This primitive indicates the transfer of a data PDU (NSDU) from the NWK layer to the local APS sublayer entity.

6.2.2.4.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
NLDE-DATA.indication (
SrcAddress,
NsduLength,
Nsdu,
LinkQuality
)
```

Table 3 specifies the parameters for the NLDE-DATA.indication primitive.

Name Type Valid range Description 16-bit Device The individual device address from which the NSDU SrcAddre Any valid device address originated. address Except the broadcast Address NsduLength integer The number of octets comprising the NSDU being ≤nwkcMaxPayloadSize Nsdu Set of Object The set of octets comprising the NSDU being indicated. LinkQuality Integer 0x00 to 0xff The link quality indication delivered by the MAC on receipt of this frame as a parameter of the MAC-DATA.indication primitive.

Table 3 – NLDE-DATA.indication parameters

6.2.2.4.3 When generated

This primitive is generated by the NLDE and issued to the APS sublayer on receipt of an appropriately addressed data frame from the local MAC sublayer entity.

6.2.2.4.4 Effect on receipt

On receipt of this primitive the APS sublayer is notified of the arrival of data at the device.

6.2.3 NWK management service

6.2.3.1 Overview

The NWK layer management entity SAP (NLME-SAP) allows the transport of management commands between the next higher layer and the NLME. Table 4 summarises the primitives supported by the NLME through the NLME-SAP interface. See the following subclauses for more details on the individual primitives.

Name	Request	Indication	Response	Confirm
NLME-WiBEEM-DISCOVERY	0			0
NLME-WRC-OPERATING	0			0
NLME-ALLOW-JOINING	0			0
NLME-WRITE-NIB-SUPERFRAME	0			0
NLME-JOIN	0	0		0
NLME-DETERMINED-JOIN	0			0
NLME-LEAVE	0	0		0
NLME-RESET	0			0
NLME-SYNC	0	0		0
NLME-READ-NIB	0			0
NLME-WRITE-NIB	0			0

Table 4 - Summary of primitives used by NWK layer

6.2.3.2 Network discovery

The NWK layer management entity SAP (NLME-SAP) supports the discovery of operating networks. The primitives employed in network discovery are the NLME-NETWORK-DISCOVERY primitives.

6.2.3.3 NLME-WiBEEM-DISCOVERY.request

6.2.3.3.1 Function

This primitive allows the next higher layer to request that the NWK layer discover networks currently operating within the POS.

6.2.3.3.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
NLME-WiBEEM-DISCOVERY.request (
ScanChannels,
ScanDuration
```

Table 5 specifies the parameters for the NLME- WiBEEM-DISCOVERY.request primitive.

Name	Туре	Valid range	Description
ScanChannels	Bitmap	32 bit field	The five most significant bits (b_{27}, b_{31}) are reserved. The 27 least significant bits $(b_0, b_1, \dots b_{26})$ indicate which channels are to be scanned $(1 = \text{scan}, 0 = \text{do not scan})$ for each of the 27 valid channels.
ScanDuration	Integer		A value used to calculate the length of time to spend scanning each channel.
			The time spent scanning each channel is ($aBaseSuperframeDuration * (2n + 1)$) symbols, where n is the value of the ScanDuration parameter. For more information on MAC subayer scanning.

6.2.3.3.3 When generated

This primitive is generated by the next higher layer of a device and issued to its NLME to request the discovery of networks operating within the device's personal operating space (POS).

6.2.3.3.4 Effect on receipt

On receipt of this primitive, the NWK will attempt to discover networks operating within the device's POS by scanning over the channels specified in the ScanChannels argument for the period specified in the ScanDuration parameter.

6.2.3.4 NLME-WIBEEM-DISCOVERY.confirm

6.2.3.4.1 Function

This primitive reports the results of a network discovery operation.

6.2.3.4.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
NLME-WiBEEM-DISCOVERY.confirm (
NetworkCount,
NetworkDescriptor,
Status
)
```

Table 6 below describes the arguments of the NLME-WiBEEM-DISCOVERY.confirm primitive.

Table 6 – NLME-WiBEEM-DISCOVERY.confirm paramters

Name	Type	Valid range	Description
NetworkCount	Integer		Gives the number of networks discovered by the search.
NetworkDescription	descriptors	number of elements given	A list of descriptors, one for each of the networks discovered. Table 10 gives a detailed account of the content of each item.
Status		SUCCESS, NO_BEACON, or INVALID_PARAMETER	Result of scan request

Table 7 gives a detailed account of the content of a network descriptor from the NetworkDescriptor parameter.

Table 7 – Network descriptor information fields

Name	Type	Valid range	Description
MeshID	Integer	0x0000 to 0xffff	The 16-bit Mesh identifier of the discovered network.
LogicalChannel	Integer	Selected from the available logical channels supported by the PHY	The current logical channel occupied by the network.
StackProfile	Integer	0x00 to 0x0f	A WiBEEM stack profile identifier indicating the stack profile in use in the discovered network.
WiBEEMVersion	Integer	0x00 to 0x0f	The version of the WiBEEM protocol in use in the discovered network.
BeaconOrder	Integer	0 to 15	This specifies how often the MAC sublayer beacon is to be transmitted by a given device on the network. For a discussion of MAC sublayer beacon order.
SuperframeOrder	Integer	0-BO or 15	For beacon-oriented networks, i.e. beacon order <15, this specifies the length of the active period of the superframe. For a discussion of MAC sublayer superframe order.
PermitJoining	Boolean	TRUE or FALSE	A value of TRUE indicates that at least one WRC on the network currently permits joining, i.e. its NWK has been issued an NLMEPERMIT-JOINING primitive and the time limit, if given, has not yet expired.
SecurityLevel	Integer	0x00 to 0x07	The security level in use on the discovered network.

6.2.3.4.3 When generated

This primitive is generated by the NLME and issued to its next higher layer on completion of the discovery task initiated by an NLME-WiBEEM-DISCOVERY.request primitive.

6.2.3.4.4 Effect on receipt

On receipt of this primitive, the next higher layer is notified of the results of a network search.

6.2.4 Network formation

6.2.4.1 Overview

This set of primitives defines how the next higher layer of a device can initialise itself as the WMC of a new network.

6.2.4.2 NLME – WRC – OPERATING.request

6.2.4.2.1 Function

This primitive allows the next higher layer to request that the device start a new network with itself as the WMC.

6.2.4.2.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
NLME-WRC-OPERATING.request

( ScanChannels, ScanDuration, BeaconOrder, SuperframeOrder, MeshID, BatteryLifeExtension, BTTSL, MaxBeaconTxNumber, Profile ID )
```

Table 8 specifies the parameters for the NLME-WRC-OPERATING.request primitive.

Table 8 – NLME-WRC-OPERATING.request parameters

Name	Туре	Valid range	Description
ScanChannels	Bitmap	32-bit field	The five most significant bits (b_{27}, \dots, b_{31}) are reserved. The 27 least significant bits $(b_0, b_1, \dots b_{26})$ indicate which channels are to be scanned in preparation for starting a network $(1 = \text{scan}, 0 = \text{do not scan})$ for each of the 27 valid channels.
ScanDuration	Integer	0 to 14	A value used to calculate the length of time to spend scanning each channel. The time spent scanning each channel is $(aBaseSuperframeDuration^* (2n + 1))$ symbols, where n is the value of the ScanDuration parameter.
BeaconOrder	Integer	0 to 15	The beacon order of the network that the higher layers wish to form.
SuperframeOrder	Integer	0 to BO or 15	The superframe order of the network that the higher layers wish to form.
MeshID	Integer	0x0000 to 0xffff	The 16-bit mesh identifier of the discovered network.
BatteryLifeExtension	Boolean	TRUE or FALSE	If this value is TRUE, the NLME will request that the WMC is started supporting battery life extension mode. If this value is FALSE, the NLME will request that the WMC is started without supporting battery life extension mode.
BTTSL	BYTE	0x00 to 0xff	The length of the beacon transmission time slot. This value can be calculated by adding the size of the beacon and the BeaconTxMargin.
MaxBeaconTxNumber	BYTE	0x00 to 0xff	The maximum number of beacons transmitted.
Profile ID	BYTE	0x00 to 0xff	The number that specifies its corresponding application. A different application program is running based on this value.

6.2.4.2.3 When generated

This primitive is generated by the next higher layer of a WMC-capable device and issued to its NLME to request the initialisation of itself as the WMC of a new network.

6.2.4.2.4 Effect on receipt

On receipt of this primitive by a device that is not capable of being a WMC of a network, the NLME issues the NLME-NETWORK-FORMATION.confirm primitive with the status parameter set to INVALID_REQUEST.

6.2.4.3 NLME-WRC-OPERATING.confirm

6.2.4.3.1 Function

This primitive reports the results of the request to initialise a WMC in a network.

6.2.4.3.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
NLME-NETWORKFORMATION.confirm (
Status
)
```

Table 9 specifies the parameters for the NLME-NETWORK-FORMATION.confirm primitive.

Table 9 – NLME-NETWORK-FORMATION.confirm parameters

Name	Type	Valid range	Description
Status			The result of the attempt to initialise a WMC.

6.2.4.3.3 When generated

This primitive is generated by the NLME and issued to its next higher layer in response to an NLME NETWORK-FORMATION.request primitive. This primitive returns a status value of INVALID_REQUEST, STARTUP_FAILURE or any status value returned from the MLME START.confirm primitive.

6.2.4.3.4 Effect on receipt

On receipt of this primitive, the next higher layer is notified of the results of its request to initialise the device as a WMC. If the NLME has been successful, the status parameter will be set to SUCCESS. Otherwise, the status parameter indicates the error.

6.2.5 Allowing devices to join

6.2.5.1 Overview

This primitive defines how the next higher layer of a WMC or WRC can request that devices be permitted to join its network.

6.2.5.2 NLME-ALLOW-JOINING.request

6.2.5.2.1 Function

This primitive allows the next higher layer of a WMC or WRC to set its MAC sublayer association permit flag for a fixed period during which it may accept devices onto its network.

6.2.5.2.2 Semantics of the service primitive

The semantics of this primitive is as follows:

NLME-ALLOW-JOINING.request (
PermitDuration

Table 10 specifies the parameters for the NLME-ALLOW-JOINING.request primitive.

Table 10 - NLME-ALLOW-JOINING.request

Name	Туре	Valid range	Description
PermitDuration		0xff	The length of time in seconds during which the WMC or WRC will allow associations. The values 0x00 and 0xff indicate that permission is disabled or enabled, respectively, without a specified time limit.

6.2.5.2.3 When generated

This primitive is generated by the next higher layer of a WMC or WRC and issued to its NLME whenever it is desired to allow devices to join its network.

6.2.5.2.4 Effect on receipt

It is only permissible that the next higher layer of a WMC or WRC issue this primitive. On receipt of this primitive by the NWK layer of a WED, the NLME-PERMIT-JOINING.confirm primitive returns a status of INVALID_REQUEST.

6.2.5.3 NLME-ALLOW-JOINING.confirm

6.2.5.3.1 Function

This primitive allows the next higher layer of a WMC or WRC to be notified of the results of its request to permit the acceptance of devices onto the network.

6.2.5.3.2 Semantics of the service primitive

The semantics of this primitive is as follows:

NLME-ALLOW-JOINING.confirm (
Status

Table 11 specifies the parameters for the NLME-ALLOW-JOINING.confirm primitive.

Table 11 - NLME-ALLOW-JOINING.confirm parameters

Name	Туре	Valid range	Description
Status	\tatile	l .*	The status of the corresponding request.

6.2.5.3.3 When generated

This primitive is generated by the initiating NLME of a WMC or WRC and issued to its next higher layer in response to an NLME-PERMIT-JOINING.request. The status parameter either indicates the status received from the MAC sublayer or an error code of INVALID REQUEST.

6.2.5.3.4 Effect on receipt

On receipt of this primitive, the next higher layer of the initiating device is notified of the results of its request to permit devices to join the network.

6.2.6 Begin as a router

6.2.6.1 Overview

This set of primitives allows a WRC that is newly joined to a network to setup its superframe configuration. It may also be used by a WMC or WRC to reconfigure its superframe.

6.2.6.2 NLME-SET-SUPERFRAME.request

6.2.6.2.1 Function

This primitive allows the next higher layer of a WRC to initialise or change its superframe configuration. It also allows the next higher layer of a WMC to change its superframe configuration.

6.2.6.2.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
NLME-SET-SUPERFRAME.request (
BeaconOrder,
SuperframeOrder,
BatteryLifeExtension
)
```

Table 12 specifies the parameters for NLME-SET-SUPERFRAME.request.

Name	Туре	Valid range	Description
BeaconOrder	Integer		The beacon order of the network that the higher layers wish to form.
SuperframeOrder	Integer		The superframe order of the network that the higher layers wish to form.
BatteryLifeExtension	Boolean		If this value is TRUE, the NLME will request that the WMC is started supporting battery life extension mode. If this value is FALSE, the NLME will request that the WMC is started without supporting battery life extension mode.

6.2.6.2.3 When generated

This primitive is generated by the next higher layer of a new device and issued to its NLME to request the initialisation of itself as a WRC. It may also be issued to the NLME of a device that is already operating as a WMC or WRC to adjust the configuration of its superframe.

6.2.6.2.4 Effect on receipt

On receipt of this primitive by a device that is not already joined to a network as a WRC, the NLME issues the NLME-START-ROUTER.confirm primitive with the Status parameter set to INVALID REQUEST.

To initialise a new superframe configuration or to reconfigure an already existing one, the NLME issues the MLME-START.request primitive to the MAC sublayer. The CoordRealignment parameter in the MLME-START.request primitive is set to FALSE if the

primitive is issued to initialise a new superframe. The CoordRealignment parameter is set to TRUE if the primitive is issued to change any of the PAN configuration attributes.

6.2.6.3 NLME-SET-SUPERFRAME.confirm

6.2.6.3.1 Function

This primitive reports the results of the request to initialise or change the superframe configuration of a WRC. If the device is a WMC, then the primitive reports the results of the request to change the superframe configuration.

6.2.6.3.2 Semantics of the service primitive

The semantics of this primitive is as follows:

Table 13 specifies the parameters for NLME-SET-SUPERFRAME.confirm.

Table 13 - NLME-SET-SUPERFRAME.confirm parameters

Name	Туре	Valid range	Description
Status	Status	INVALID_REQUEST or any status value returned from the MLME-START.confirm primitive.	The result of the attempt to initialise a WMC.

6.2.6.3.3 When generated

This primitive is generated by the NLME and issued to its next higher layer in response to an NLME-SET-SUPERFRAME.request primitive. This primitive returns a status value of INVALID_REQUEST or any status value returned from the MLME-START.confirm primitive.

6.2.6.3.4 Effect on receipt

On receipt of this primitive, the next higher layer is notified of the results of its request to initialise or change the superframe configuration of a WRC or to change the superframe configuration of a WMC. If the NLME has been successful, the status parameter will be set to SUCCESS. Otherwise, the status parameter indicates the error.

6.2.7 Joining a network

6.2.7.1 Overview

This set of primitives defines how the next higher layer of a device can

- request to join a network through association,
- request to join a network directly,
- request to re-join a network if orphaned.

6.2.7.2 NLME-JOIN.request

6.2.7.2.1 Function

This primitive allows the next higher layer to request to join a network either through association or directly, or to re-join a network if orphaned.

6.2.7.2.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
NLME-JOIN.request (
Meshld,
JoinAsRouter,
RejoinNetwork,
ScanChannels,
ScanDuration,
PowerSource,
RxOnWhenIdle
```

Table 14 specifies the parameters for the NLME-JOIN.request primitive.

Table 14 – NLME-JOIN.request parameters

Name	Type	Valid range	Description	
MeshID	Integer	0x0000 to 0xffff	Network 16-bit mesh ID	
JoinAsRouter	Boolean	TRUE or FALSE	The parameter is TRUE if the device is attempting to join the network in the capacity of a WRC. It is FALSE otherwise. The parameter is valid in requests to join through association and ignored in requests to join directly or to re-join through orphaning.	
RejoinNetwork	Boolean	TRUE or FALSE	The parameter is TRUE if the device is joining directly or rejoining the network using the orphaning procedure. The parameter is FALSE if the device is requesting to join a network through association.	
ScanChannels	Bitmap	32-bit field	The five most significant bits (b_{27}, \ldots, b_{31}) are reserved. The 27 least significant bits $(b_0, b_1, \ldots b_{26})$ indicate which channels are to be scanned $(1 = \text{scan}, 0 = \text{do not scan})$ for each of the 27 valid channels. This parameter is ignored for requests to join through association.	
ScanDuration	Integer	0 to 14	A value used to calculate the length of time to spend scanning each channel. The time spent scanning each channel is $(aBaseSuperframeDuration * (2n + 1))$ symbols, where n is the value of the ScanDuration parameter.	
PowerSource	Integer	0x00 to 0x01	This parameter becomes a part of the CapabilityInformation parameter passed to the MLME-ASSOCIATE.request primitive this generated as the result of a successful executing of a NWK join The values are:	
			0x01 = mains-powered device. 0x00 = other power source.	
RxOnWhenIdle	Integer	0x00 to 0x01	This parameter indicates whether the device can be expected to receive packets over the air during idle portions of the active portion of its superframe. The values are:	
			0x01 = The receiver is enabled when the device is idle. 0x00 = The receiver may be disabled when the device is idle.	

6.2.7.2.3 When generated

The next higher layer of a device generates this primitive to request to join a new network using the MAC sublayer association procedure, to join a new network directly using the MAC sublayer orphaning procedure or to locate and re-join a network after being orphaned.

6.2.7.2.4 Effect on receipt

JOIN-confirm primitive with the status parameter set to INVALID_REQUEST. On receipt of this primitive by a device that is not currently joined to a network, the device attempts to join the network specified by the Meshld parameter.

6.2.7.3 NLME-JOIN.indication

6.2.7.3.1 Function

This primitive allows the next higher layer of a WMC or WRC to be notified when a new device has successfully joined its network by association.

6.2.7.3.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
NLME-JOIN.indication (
ShortAddress,
ExtendedAddress,
CapabilityInformation
)
```

Table 15 specifies the parameters for the NLME-JOIN.indication primitive.

Table 15 – NLME-JOIN.indication parameters
--

Name	Туре	Valid range	Description
ShortAddress	Network address		The network address of an entity that has been added to the network.
ExtendedAddress	64-bit IEEE address		The 64-bit IEEE address of an entity that has been added to the network.
CapabilityInformation	Bitmap	-	Specifies the operational capabilities of the joining device.

6.2.7.3.3 When generated

This primitive is generated by the NLME of a WMC or WRC and issued to its next higher layer on successfully adding a new device to the network using the MAC association procedure.

6.2.7.3.4 Effect on receipt

On receipt of this primitive, the next higher layer of a WMC or WRC is notified that a new device has joined its network.

6.2.7.4 NLME-JOIN.confirm

6.2.7.4.1 Function

This primitive allows the next higher layer to be notified of the results of its request to join a network.

6.2.7.4.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
NLME-JOIN.confirm (
Meshld,
Status
)
```

Table 16 specifies the parameters for the NLME-JOIN.confirm primitive.

Table 16 - NLME-JOIN.confirm parameter	ble 16 -	- NLME-	JOIN.confirm	parameters
--	----------	---------	--------------	------------

Name	Туре	Valid range	Description	
MeshID	Integer		The mesh identifier from the NLME- JOIN.request to which this is a confirmation. The 2 highest-order bits of this parameter are reserved and should be set to 0.	
Status	Status	INVALID_REQUEST, NOT_PERMITTED or any status value returned from the MLME-ASSOCIATE.confirm primitive or the MLMESCAN.confirm primitive.	The status of the corresponding request.	

6.2.7.4.3 When generated

This primitive is generated by the initiating NLME and issued to its next higher layer in response to an NLME-JOIN.request primitive. If the request was successful, the status parameter indicates a successful join attempt. Otherwise, the status parameter indicates an error code of INVALID_REQUEST, NOT_PERMITTED or any status value returned from either the MLME-ASSOCIATE.confirm primitive or the MLME-SCAN.confirm primitive.

6.2.7.4.4 Effect on receipt

On receipt of this primitive, the next higher layer of the initiating device is notified of the results of its request to join a network using the MAC sublayer association procedure, to join directly using the MAC sublayer orphaning procedure or to re-join a network once it has been orphaned.

6.2.8 Joining a device directly to a network

6.2.8.1 Overview

This set of primitives defines how the next higher layer of a WMC or WRC can request to directly join another device to its network.

6.2.8.2 NLME-DETERMINED-JOIN.request

6.2.8.2.1 Function

This primitive allows the next higher layer of a WMC or WRC to request to directly join another device to its network.

6.2.8.2.2 Semantics of the service primitive

The semantics of this primitive is as follows:

Table 17 specifies the parameters for the NLME-DETERMINED-JOIN.request primitive.

Table 17 - NLME-DETERMINED-JOIN.request parameters

Name	Туре	Valid range	Description
DeviceAddress	64-bit IEEE address	,	The IEEE address of the device to be directly joined.
CapabilityInformation	Bitmap		The operating capabilities of the device being directly joined.

Table 18 illustrates the formatting of the CapabilityInformation parameter.

Table 18 – Capability information parameter format

Bits:0	1	2	3	4-5	6	7
Alternative mesh co-ordinator	Device type	Power source	Receive on when idle	Reserved	Security capability	Reserved

6.2.8.2.3 When generated

The next higher layer of a WMC or WRC generates this primitive to add a new device directly to its network. This process is completed without any over the air transmissions.

6.2.8.2.4 Effect on receipt

On receipt of this primitive, the NLME will attempt to add the device specified by the DeviceAddress parameter to its neighbour table. The CapabilityInformation parameter will contain a description of the device being joined. The alternate WMC bit is set to 0 in WiBEEM v1.0. The device type bit is set to 1 if the device is a WRC or to 0 if it is an end device. The power source bit is set to 1 if the device is receiving power from the alternating current mains or to 0 otherwise. The receiver on when idle bit is set to 1 if the device does not disable its receiver during idle periods or to 0 otherwise. The security capability bit is set to 1 if the device is capable to secure operation or to 0 otherwise.

6.2.8.3 NLME-DETERMINDE-JOIN.confirm

6.2.8.3.1 Function

This primitive allows the next higher layer of a WMC or WRC to be notified of the results of its request to directly join another device to its network.

6.2.8.3.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
LME- DETERMINED-JOIN.confirm (
DeviceAddress,
Status
)
```

Table 19 specifies the parameters for the NLME-DIRECT-JOIN.confirm primitive.

Table 19 – NLME-DETERMINED-JOIN.confirm parameters

Name	Туре	Valid range	Description
	64-bit IEEE address		The 64-bit IEEE address in the request to which this is a confirmation.
Status		SUCCESS, ALREADY_PRESENT, TABLE_FULL	The status of the corresponding request.

6.2.8.3.3 When generated

This primitive is generated by the initiating NLME and issued to its next higher layer in response to an NLME-DIRECT-JOIN.request primitive. If the request was successful, the status parameter indicates a successful join attempt. Otherwise, the status parameter indicates an error code of ALREADY PRESENT or TABLE FULL.

6.2.8.3.4 Effect on receipt

On receipt of this primitive, the next higher layer of the initiating device is notified of the results of its request to directly join another device to a network.

6.2.9 Leaving a network

6.2.9.1 Overview

This set of primitives defines how the next higher layer of a device can request to leave or request that another device leaves a network.

6.2.9.2 NLME-LEAVE.request

6.2.9.2.1 Function

This primitive allows the next higher layer to request that it or another device leaves the network.

6.2.9.2.2 Semantics of the service primitive

This semantics of this primitive is as follows:

Table 20 specifies the parameters for the NLME-LEAVE.request primitive.

Table 20 - NLME-LEAVE.request parameters

Name	Туре	Valid range	Description
II)eviceAddress	Device address	INA-NIT IEEE ANNTESS	The 64-bit IEEE address of the entity to be removed from the network or NULL if the device removes itself from the network.

6.2.9.2.3 When generated

The next higher layer of a device generates this primitive to request to leave the network. The next higher layer of a WMC or WRC may also generate this primitive to remove a device from the network.

6.2.9.2.4 Effect on receipt

On receipt of this primitive by the NLME of a device that is not currently joined to a network, the NLME issues the NLME-LEAVE.confirm primitive with a status of INVALID_REQUEST. On receipt of this primitive by the NLME of a device that is currently joined to a network and with the DeviceAddress parameter equal to NULL, the NLME issues the MLME-DISASSOCIATE.request primitive to the MAC sub-layer.

6.2.9.3 NLME-LEAVE.indication

6.2.9.3.1 Function

This primitive allows the next higher layer of a device to be notified if that device has been removed from the network by its parent

6.2.9.3.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
NLME-LEAVE.indication (

DeviceAddress
)
```

Table 21 specifies the parameters for the NLME-LEAVE.indication primitive.

Table 21 - NLME-LEAVE.indication parameters

Name	Туре	Valid range	Description
DeviceAddress		address	The 64-bit IEEE address of an entity that has removed itself from the network or NULL in the case that the device issuing the primitive has been removed from the network by its parent.

6.2.9.3.3 When generated

This primitive is generated by the NLME of a WMC or WRC and issued to its next higher layer on the successful exit of one of that device's associated children from the network. It is also generated by the NLME of a WRC or WED and issued to its next higher layer to indicate that it has been successfully removed from the network by its associated WRC or WMC. This primitive is issued whenever the NLME received the MLME-DISASSOCIATE.indication primitive and for no other reason.

6.2.9.3.4 Effect on receipt

On receipt of this primitive, the next higher layer of a WMC or WRC is notified that a device that was formerly associated with it has left the network. The primitive can also indicate that the next higher layer of WRC or WED is informed that it has been removed from the network by its associated WRC or WMC.

6.2.9.4 NLME-LEAVE.confirm

6.2.9.4.1 Function

This primitive allows the next higher layer to be notified of the results of its request for itself or another device to leave the network.

6.2.9.4.2 Semantics of the service primitive

The semantics of this primitive is as follows:

Table 22 specifies the parameters for the NLME-LEAVE.confirm primitive.

Table 22 – NLME-LEAVE.confirm parameters

Name	Туре	Valid range	Description
DeviceAddress	Device address		The 64-bit IEEE address in the request to which this is a confirmation or null if the device requested to remove itself from the network.
Status			The status of the corresponding request.

6.2.9.4.3 When generated

This primitive is generated by the initiating NLME and issued to its next higher layer in response to an NLME-LEAVE.request primitive. If the request was successful, the status parameter indicates a successful leave attempt. Otherwise, the status parameter indicates an error code of INVALID_REQUEST, UNKNOWN_DEVICE or any status value returned from the MLME-DISASSOCIATE.confirm primitive.

6.2.9.4.4 Effect on receipt

On receipt of this primitive, the next higher layer of the initiating device is notified of the results of its request for itself or another device to leave the network.

6.2.10 Resetting a device

6.2.10.1 Overview

This set of primitives defines how the next higher layer of a device can request that the NWK layer is reset.

6.2.10.2 NLME-RESET.request

6.2.10.2.1 Function

This primitive allows the next higher layer to request that the NWK layer performs a reset operation.

6.2.10.2.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
NLME-RESET.request (
```

This primitive has no parameters.

6.2.10.2.3 When generated

This primitive is generated by the next higher layer and issued to its NLME to request the reset of the NWK layer to its initial condition.

6.2.10.2.4 Effect on receipt

On receipt of this primitive, the NLME issues the MLME-RESET.request primitive to the MAC sublayer with the SetDefaultMIB parameter set to TRUE.

6.2.10.3 NLME-RESET.confirm

6.2.10.3.1 Function

This primitive allows the next higher layer to be notified of the results of its request to reset the NWK layer.

6.2.10.3.2 Semantics of the service primitive

The semantics for this primitive are as follows:

```
NLME-RESET.confirm (
Status
)
```

Table 23 specifies the parameters for this primitive.

Table 23 - NLME-RESET.confirm parameters

Name	Туре	Valid range	Description
Status		Any status value returned from the MLME-RESET.confirm primitive	The result of the reset operation.

6.2.10.3.3 When generated

This primitive is generated by the NLME and issued to its next higher layer in response to an NLME-RESET.request primitive. If the request was successful, the status parameter indicates a successful reset attempt. Otherwise, the status parameter indicates an error code of DISABLE TRX FAILURE.

6.2.10.3.4 Effect on receipt

On receipt of this primitive, the next higher layer is notified of the results of its request to reset the NWK layer.

6.2.10.4 Network layer reset message sequence chart

Figure 2 illustrates the sequence of messages necessary for resetting the NWK layer.

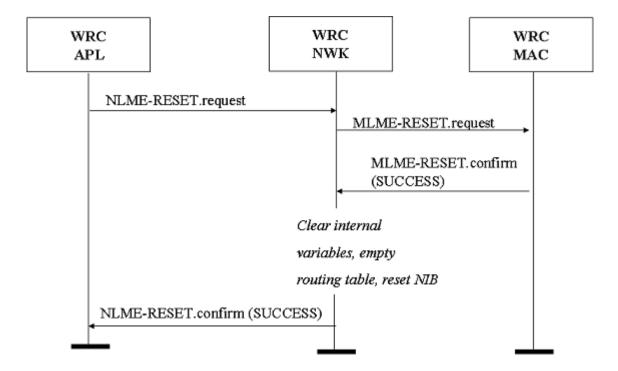


Figure 2 - Message sequence chart for resetting the network layer

6.2.11 Receiver synchronisation

6.2.11.1 Overview

This set of primitives defines how the next higher layer of a device can synchronise with a WMC or WRC and extract pending data from it.

6.2.11.2 NLME-SYNC.request

6.2.11.2.1 Function

This primitive allows the next higher layer to synchronise or extract data from its WMC or WRC.

6.2.11.2.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
NLME-SYNC.request (
Track
```

Table 24 specifies the parameters for this primitive.

Table 24 - NLME-SYNC.request parameters

Name	Туре	Valid range	Description
Track	Boolean	II RUE OF FALSE	Whether the synchronisation should be maintained for future beacons or not.

6.2.11.2.3 When generated

This primitive is generated whenever the next higher layer wishes to achieve synchronisation or check for pending data at its WMC or WRC.

6.2.11.2.4 Effect on receipt

If the TRACK parameter is set to FALSE and the device is operating on a non-beacon enabled network, the NLME issues the MLME-POLL.request primitive to the MAC sublayer. On receipt of the corresponding MLME-POLL.confirm primitive, the NLME issues the NLME-SYNC.confirm primitive with the status parameter set to SUCCESS if the MAC primitive was successful, or SYNC_FAILURE otherwise. If the TRACK parameter is set to FALSE and the device is operating on a beacon-enabled network, the NLME first sets the *macAutoRequest* PIB attribute in the MAC sublayer to TRUE by issuing the MLME SET.request primitive. It then issues the MLME-SYNC.request primitive with the TrackBeacon parameter set to FALSE. The NLME then issues the NLME-SYNC.confirm primitive with the status parameter set to SUCCESS.

6.2.11.3 NLME-SYNC.indication

6.2.11.3.1 Function

This primitive allows the next higher layer to be notified of the loss of synchronisation at the MAC sublayer.

6.2.11.3.2 Semantics of the service primitive

The semantics of this primitive is as follows:

NLME-SYNC.indication ()

6.2.11.3.3 When generated

This primitive is generated following a loss of synchronisation notification from the MAC sublayer via the MLME-SYNC-LOSS.indication primitive with a LossReason of BEACON_LOST. This follows a prior NLME-SYNC.request primitive being issued to the NLME.

6.2.11.3.4 Effect on receipt

The next higher layer is notified of the loss of synchronisation with the beacon.

6.2.11.4 NLME-SYNC.confirm

6.2.11.4.1 Function

This primitive allows the next higher layer to be notified of the results of its request to synchronise or extract data from its WMC or WRC.

6.2.11.4.2 Semantics of the service primitive

The semantics of this primitive is as follows:

Table 25 specifies the parameters for this primitive.

Table 25 - NLME-SYNC.confirm parameters

Name	Туре	Valid range	Description
Status	Status	SUCCESS,	The result of the request to synchronise with the WMC or WRC.
		SYNC_FAILURE,	
		INVALID_PARAMETER	

6.2.11.4.3 When generated

This primitive is generated by the initiating NLME and issued to its next higher layer in response to an NLME-SYNC.request primitive. If the request was successful, the status parameter indicates a successful state change attempt. Otherwise, the status parameter indicates an error code of SYNC_FAILURE.

6.2.11.4.4 Effect on receipt

On receipt of this primitive, the next higher layer is notified of the results of its request to synchronise or extract data from its WMC or WRC. If the NLME has been successful, the status parameter will be set to SUCCESS. Otherwise, the status parameter indicates the error.

6.2.11.5 Message sequence charts for synchronising with a co-ordinator

Figure 3 shows a message sequence chart for synchronising in a non-beaconing network.

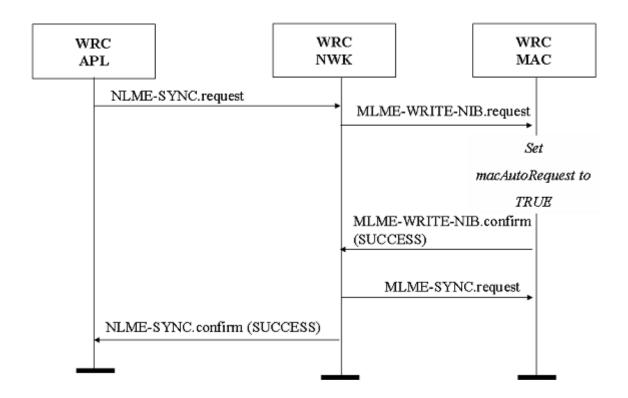


Figure 3 – Message sequence chart for synchronising in a non-beaconing network

6.2.12 Information base maintenance

6.2.12.1 Overview

This set of primitives defines how the next higher layer of a device can read and write attributes in the NIB.

6.2.12.2 NLME-READ-NIB.request

6.2.12.2.1 Function

This primitive allows the next higher layer to read the value of an attribute from the NIB.

6.2.12.2.2 Semantics of the service primitive

The semantics of this primitive is as follows:

Table 26 specifies the parameters for this primitive.

Table 26 – NLME-READ-NIB.request parameters

Name	Туре	Valid range	Description
NIBAttribute	Integer	-	The identifier of the NIB attribute to read.

6.2.12.2.3 When generated

This primitive is generated by the next higher layer and issued to its NLME in order to read an attribute from the NIB.

6.2.12.2.4 Effect on receipt

On receipt of this primitive, the NLME attempts to retrieve the requested NIB attribute from its database. If the identifier of the NIB attribute is not found in the database, the NLME issues the NLME-GET.confirm primitive with a status of UNSUPPORTED_ATTRIBUTE. If the requested NIB attribute is successfully retrieved, the NLME issues the NLME-GET.confirm primitive with a status of SUCCESS and the NIB attribute identifier and value.

6.2.12.3 NLME-READ-NIB.confirm

6.2.12.3.1 Function

This primitive reports the results of an attempt to read the value of an attribute from the NIB.

6.2.12.3.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
NLME-READ-NIB.confirm (
Status,
NIBAttribute,
NIBAttributeLength,
NIBAttributeValue
)
```

Table 27 specifies the parameters for this primitive.

Table 27 - NLME-READ-NIB.confirm parameters

Name	Туре	Valid range	Description
Status	Enumeration	SUCCESS or UNSUPPORTED_ATTRIBUTE	The results of the request to read a NIB attribute value.
NIBAttribute	Integer	–	The identifier of the NIB attribute that was read.
NIBAttributeLength	Integer		The length, in octets, of the attribute value being returned.
NIBAttributeValue	Various	-	The value of the NIB attribute that was read.

6.2.12.3.3 When generated

This primitive is generated by the NLME and issued to its next higher layer in response to an NLME GET.request primitive. This primitive returns a status of SUCCESS, indicating that the request to read a NIB attribute was successful, or an error code of UNSUPPORTED_ATTRIBUTE.

6.2.12.3.4 Effect on receipt

On receipt of this primitive, the next higher layer is notified of the results of its request to read a NIB attribute. If the request to read a NIB attribute was successful, the status parameter will be set to SUCCESS. Otherwise, the status parameter indicates the error.

6.2.12.4 NLME-WRITE-NIB.request

6.2.12.4.1 Function

This primitive allows the next higher layer to write the value of an attribute into the NIB.

6.2.12.4.2 Semantics of the service primitive

The semantics of this primitive is as follows:

Table 28 specifies the parameters for this primitive.

Table 28 – NLME-WRITE-NIB.request parameters

Name	Type	Valid range	Description
NIBAttribute	Integer	-	The identifier of the NIB attribute to be written.
NIBAttributeLength	Integer	0x0000 to 0xffff	The length, in octets, of the attribute value being set.
NIBAttributeValue	Various	ı	The value of the NIB attribute that should be written.

6.2.12.4.3 When generated

This primitive is to be generated by the next higher layer and issued to its NLME in order to write the value of an attribute in the NIB.

6.2.12.4.4 Effect on receipt

On receipt of this primitive the NLME attempts to write the given value to the indicated NIB attribute in its database. If the NIBAttribute parameter specifies an attribute that is not found in the database, the NLME issues NLME-WRITE-NIB.confirm primitive with a status of UNSUPPORTED_ATTRIBUTE. If the NIBAttributeValue parameter specifies a value that is out of the valid range for the given attribute, the NLME issues the NLME-WRITE-NIB.confirm primitive with a status of INVALID_PARAMETER. If the requested NIB attribute is successfully written, the NLME issues the NLME-WRITE-NIB.confirm primitive with a status of SUCCESS.

6.2.12.5 NLME-WRITE-NIB.confirm

6.2.12.5.1 Function

This primitive reports the results of an attempt to write a value to a NIB attribute.

6.2.12.5.2 Semantics of the service primitive

The semantics of this primitive is as follows:

```
NLME-WRITE-NIB.confirm (
Status,
NIBAttribute
)
```

Table 29 specifies the parameters for this primitive.

Table 29 - NLME-WRITE-NIB.confirm parameters

Name	Type Valid range		Description
Status	Enumeration	SUCCESS, UNSUPPORTED_ATTRIBUTE or INVALID_PARAMETER	The result of the request to write the NIB attribute.
NIBAttribute	Integer	-	The identifier of the NIB attribute that was written.

6.2.12.5.3 When generated

This primitive is generated by the NLME and issued to its next higher layer in response to an NLME SET.request primitive. This primitive returns a status of either SUCCESS, indicating that the requested value was written to the indicated NIB attribute, or an error code of INVALID_PARAMETER or UNSUPPORTED_ATTRIBUTE.

6.2.12.5.4 Effect on receipt

On receipt of this primitive, the next higher layer is notified of the results of its request to write the value of a NIB attribute. If the requested value was written to the indicated NIB attribute, the status parameter will be set to SUCCESS. Otherwise, the status parameter indicates the error.

Bibliography

ISO/IEC 7498-1:1994, Information technology – Open systems interconnection – Basic reference model: The basic model

ISO/IEC 8802-2:1998, (IEEE Std 802.2™, 1998 Edition), Information technology – Telecommunications and information exchange between systems – Local and metropolitan area networks – Specific requirements – Part 2: Logical link control

ISO/IEC 9646-1:1994, Information technology – Open systems interconnection – Conformance testing methodology and framework – Part 1: General concepts

ISO/IEC 9646-7:1995, (ITU-T Rec. X.296 (1994)), Information technology – Open systems interconnection – Conformance testing methodology and framework – Part 7: Implementation conformance statements

ISO/IEC 10039:1991, Information technology – Open systems interconnection – Local area networks – Medium Access Control (MAC) service definition (withdrawn)

ISO/IEC 15802-1:1995, Information technology – Telecommunications and information exchange between systems – Local and metropolitan area networks – Common specifications – Part 1: Medium Access Control (MAC) service definition

ITU-T Recommendation X.210, Data Networks and Open Systems Communication – Open Systems Interconnection – General

ITU-T Recommendation Z.100, CCITT Specification and Description Language – Overview of SDL

IEEE 802 – 1990, IEEE Standards for Local and Metropolitan Area Networks: Overview and Architecture

IEEE 802.15.4 – 2003, IEEE Standard for Information technology – Telecommunications and information exchange between systems – Local and metropolitan area networks – Specific requirements – Part 15.4: Wireless Medium Access Control (MAC) and Physical Layer (PHY) Specifications for Low-Rate Wireless Personal Area Networks (LR-WPANs)

NIST FIPS Pub 197 Advanced Encryption Standard (AES), Federal Information Processing Standards Publication 197, U.S. Department of Commerce/N.I.S.T., November, 2001

ZigBee Document 053474r06, Version 1.0 - December 14th, 2004 - ZigBee Alliance

INTERNATIONAL ELECTROTECHNICAL COMMISSION

3, rue de Varembé PO Box 131 CH-1211 Geneva 20 Switzerland

Tel: + 41 22 919 02 11 Fax: + 41 22 919 03 00 info@iec.ch www.iec.ch