

# AN-2181 Microcontroller Firmware Considerations for the National LMP90100 Sensor AFE

## **ABSTRACT**

This application report provides guidance to the firmware designer on how to communicate with the LMP90100 across the SPI interface as implemented on this device.

	Contents	
1	Introduction	2
2	SPI Protocol of the LM90100	2
3	Assumed Application	3
4	Overall Considerations	3
5	High-Level Description	4
6	Example Code Routines	5
7	Conclusion	10
8	References	10
	List of Figures	
1	Segment Address Setup and Conventional Data Access	3

Cortex is a trademark of ARM Limited. ARM is a registered trademark of ARM Limited. All other trademarks are the property of their respective owners.



Introduction www.ti.com

### 1 Introduction

The LMP90100 is an analog front-end (AFE) that is ideally suited for low-noise, precision sensing applications such as industrial temperature transmitters. This product is based on a 24-bit Sigma-Delta ADC and uses the SPI interface to communicate with a local processing IC – most often a microcontroller. The SPI interface is used to read/write the device's control and status registers as well as to retrieve the sensor data. This document provides guidance to the firmware designer on how to communicate with the LMP90100 across the SPI interface as implemented on this device.

This document includes high-level example code. Note that National's software license applies to the included code. The policy appears at the end of this document.

#### 2 SPI Protocol of the LM90100

At the electrical level, the SPI interface of the LMP90100 is very conventional: four wires (CSB, SCLK, SDI, SDO) with typical polarity and phases for the SCLK. For a full description of the SPI interface, see the LMP90100/LMP90099/LMP90098/LMP90097 Sensor AFE System: Multi-Channel, Low Power 24-Bit Sensor AFE with True Continuous Background Calibration Data Sheet (SNAS510). The LMP90100, however, provides additional capabilities on its serial interface:


- Since the LMP90100 has its own sampling clock, a Data Ready (DRDYB) signal is provided to the
  microcontroller as each new sample value becomes available from the device. (The SPI interface
  clock, SCLK, is used only for the data transfers across the interface).
- The LMP90100 has powerful calibration capabilities, and several other features as well, that necessitate close to 64 control registers. To support the large register set, the device divides the register space into multiple 16-register segments and the SPI protocol requires a segment address to be written when the segment boundary is crossed. As long as you stay within the current segment, you can keep doing conventional SPI accesses for example, as you do repetitive data reads. Figure 1 illustrates the concept of segment addresses. For more details, see the device-specific data sheet.
- · A number of other features are also offered:
  - The data-only mode where the instruction byte is not required
  - The streaming mode where more than three consecutive registers can be read or written with one SPI transaction only
  - CRC check for the data

You, however, may choose to avoid the additional complexity and access the device with SPI transactions that are close to the generic SPI protocol that he or she may already be familiar with. This application report provides a pseudo-code example to illustrate the basic read/write access of control and status registers as well as the data registers for typical applications. The more complex additional features are not used in this example code. Those items are referenced in the third bulleted item in Section 2.



www.ti.com Assumed Application

## <u>Transaction 1 – URA Setup</u> – necessary only when the previous URA is different than the desired URA.

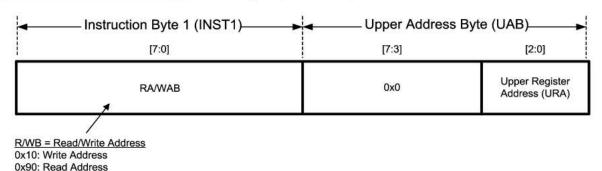

## <u>Transaction 2 – Data Access</u>

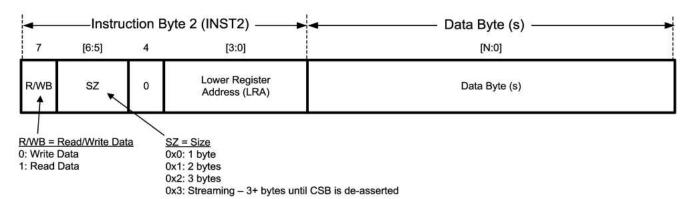


Figure 1. Segment Address Setup and Conventional Data Access

## 3 Assumed Application

This example assumes that multiple sensor channels are being read in a round-robin fashion. Furthermore, the example only deals with acquiring the data from the device and storing it in microcontroller buffers as dictated by upper level firmware. Processing of the received data is not covered. It is also assumed that the microcontroller being used has an integrated SPI Master block. However, micro-controller based SPI Masters vary a great deal in their capabilities. Here, a rather simple SPI Master is assumed. For example, it is assumed that the SPI Master is capable of doing byte-long SPI transactions at-a-time and its transmit and receive data registers are not buffered. This causes there to be multiple "gaps" within an SPI transaction. The gaps would affect the data throughput on the SPI interface, but this is considered not to be an issue in this very slow sensor application. A simple GPIO bit-banging code is also included for those application where the micro may not have an SPI Master at all.

#### 4 Overall Considerations

The LMP90100 is an AFE designed for measurements of very slow physical properties and, as such, operates at output data rates (ODR) of only up to 214.65 samples per second. This equates to a DRDYB signal every 4.66 msec or slower; which leaves a lot of time for each sample to be processed within each DRDYB cycle even with a relatively slow microcontroller. For example, the rather slow pseudo-code example shown here should be able to deliver each new sample to the controller memory in roughly 100 - 150 usec on a microcontroller running with a 4MHz CPU clock. If the user needs to speed up the data access, the code can be made more streamlined and the device's data-only mode may be employed as well.



High-Level Description www.ti.com

With the LMP90100 the user has the option of either using the DRDYB signal or a Data Available bit in a control register to find out when the next sample data is available. Further, the DRDYB signal can be combined with the SDO pin (chip's default) or made a separate signal by assigning it to the D6 pin – one of the GPIO pins. This example code uses the latter method – that is, a separate DRDYB signal on the D6 pin. Furthermore, this example code uses the DRDYB signal as an interrupt signal. An alternative would be to poll this signal and the user may do this if the overall firmware architecture so dictates.

Since the customer's actual microcontroller may be one of several typical controllers used in sensor applications, we have taken the approach of providing pseudo-code in this example. The intention is for it to serve as an example for the user to write his own code as suitable for the chosen microcontroller. National's evaluation system for this device uses the Atmel SAM3U microcontroller that is based on the ARM® Cortex<sup>TM</sup> M3 core. The code makes reference to the registers of this device, but the customer is expected to replace these hardware dependencies with his own code.

## 5 High-Level Description

The example code consists of several routines. The two main routines, callable by the higher level code, are: **spi\_reg\_read** and **spi\_reg\_write**. These are general purpose SPI routines that will transfer as many bytes of data between the device and the controller's memory as instructed. These routines then call one of the following routines to carry out the actual SPI transaction:

write_spi16	used to write the upper address byte (only when a segment change is occurring).
write_spi8 read_spi8	used to read or write 8 bits of data across SPI.

(Two types of **read\_spi8/write\_spi8** are provided: simple GPIO bit-banging types or ones using the microcontroller's SPI Master).

spi\_reg\_read/spi\_reg\_write thus use one instance of write\_spi16, if necessary, and as many instances of read\_spi\_8 to write\_spi8 to construct a complete transaction as necessary to abide by the user's command. The higher-level code expected to indicate when a segment change is occurring. There will be gaps between these instances within the single SPI transaction – where a transaction is defined as all the while the CSB signal is held asserted. The code directly controls the CSB signal with a GPIO pin (the SPI Master is not used to automatically drive CSB).

The higher-level code would have to perform the following functions:

- 1. Configure the microcontroller.
- 2. Initialize the LMP90100.
  - Build the device register image in memory.
  - Call spi\_reg\_write once for each segment of the device register space where at least one register
    has to be modified from its default values. Indicate to the routine the starting register address, the
    number of bytes to write, where in the memory to get the data from, and whether or not this is a
    new segment. See the actual routine code for the precise description. (It s a good practice to
    assume you need to explicitly set the segment address with the first device access).

For this code's purposes, relating only to the SPI operation, the following device register settings are necessary. (Register\_Name:Bit\_Name = value).

SPI DRDYBCN:SDO DRDYB D6 = 1

SPI\_HANDSHAKECN:SDO\_DRDYB\_DRIVER = 0x4

The example assumes that the multiple sensor channels are being scanned continuously. This means that CH\_SCAN register should be appropriately set and the CHx\_INPUTCN registers should be configured to set the front-end MUX as appropriate for the application.

- 3. Verify the device is initialized correctly
  - Call spi\_reg\_read once for each segment
  - Compare read-back data with device register image in the memory.
- 4. Set up memory buffers for the sensor data one buffer for each sensor channel.
- 5. Initialize the SPI Master with the appropriate SCLK frequency, polarity and phase settings. Also set the



number of bits per transfer to 8.

- Set the device register segment to where the data registers are located.
   Call spi\_reg\_write (reg\_addr=0x1A, segment\_change=1, ptr\_data=null, data\_length=0).
- 7. Call the Data Handling Loop.
- 8. Data Handling Loop: (This loop maintains a set of pointers that point to the memory locations where the sensor data is to be delivered. A channel number count is used to scan through the channels the same way the device has been configured to do. The actual memory pointers are passed to the spi\_reg\_read routine to inform it of where the sensor data is to be written).
  - (a) Enable the interrupts for the pin where DRDYB signal is connected. (The ISR should be very simple: just post the data\_ready message and return. This message is what the Data Handling Loop waits for in this example. Other methods are possible).
  - (b) When the message data\_ready is received:
    - Call spi\_reg\_read (reg\_addr=0x1A, segment\_change=0, ptr-data=memory pointer for this channel at this time, data\_length=3).
    - Check routine return value. It should be 3.
    - Increment memory pointer for this channel and check if it has reached the max. limit.
    - If not, obtain the next channel's pointer and loop back.
    - If yes, check if all channels' data counts have reached the max. values.
    - If not, obtain the next channel's pointer and loop back.
    - If yes, exit (all channels' data have been captured).

Note that this routine assumes that a finite amount of data have to be captured from the sensor channels. It is also possible to continuously receive data in the above manner and process each data sample in an ongoing fashion as it is received.

## 6 Example Code Routines

The actual code routines, called by the high-level function described in Section 5, are as follows:

```
// Generic National SPI Example Code
                                                               11
// Filename: spi_rw.c
                                                               11
// Author: Strategic Apps Group
                                                               11
// Revision: 1.1
// Date: Mar. 7, 2011
11
// Exported API for this code: spi_reg_read and spi_reg_write
//
// This is an example code provided to National's customers to
// assist them in writing microcontroller firmware routines that
// can access National's Sensor AFE chips that use the SPI
// interface but with a 2-step, address/data protocol that
// supports large, segmented address spaces.
// Please Note: This code is part of an Application Note that
                                                               11
//
              should be read for some important considerations
                                                               //
//
              beyond what is in this code.
//
                                                               //
\ensuremath{//} The code illustrates two types of hardware-dependent routines:
                                                               11
   - a simple bit-banging type method that utilizes GPIO; and
                                                               11
    - a higher-level method that relies on the microcontroller's
                                                               11
    SPI Master Controller to carry out the transactions.
    The latter method would have to change a good deal when this
    code is targetted to the user's specific microcontroller.
                                                               11
11
    This example code is based on National's evaluation board
                                                               11
    firmware that runs on Atmel ATSAM3U ARM M3-based controller.
11
                                                               11
//
                                                               //
// National's EULA policy applies.
                                                               11
// (c) National Semiconductor Corp, 2011
typedef unsigned char
                             UINT8;
```



```
typedef unsigned short int
                               UINT16;
typedef unsigned int
                               UINT32;
#define CSB
                    GPIO_PIN_CSB
                                          //hardware dependent
#define MISO
                    GPIO_PIN_MISO
                                          //hardware dependent
#define MOSI
                    GPIO_PIN_MOSI
                                          //hardware dependent
#define SCLK
                    GPIO_PIN_SCLK
                                          //hardware dependent
#define SET HIGH
                     1
#define SET_LOW
                       0
//hardware dependent API
void delay()
  //delay some time
void set_gpio(UINT32 pin, UINT8 value)
{
//set GPIO pin value
void get_gpio(UINT32 pin)
//get GPIO pin value
//The following code is based on using GPIO to control SPI
//Read 8 bits of data through SPI
//Only manipulates SDI and SCLK, not CS
#if USE_GPIO
void read_spi8(UINT8 *data)
UINT8 bits;
  //clear the data memory
*data = 0;
for (bits = 7; bits >= 0; bits--) {
 set_gpio(SCLK,SET_LOW);
 delay();
 set_gpio(SCLK,SET_HIGH);
  *data |= ((get_gpio(MISO) & 1 ) << bits);
}
//Write 8 bits of data through SPI
//Only manipulates SDO and SCLK, not CS
void write_spi8(UINT8 data)
UINT8 bits;
for (bits = 7; bits > = 0; bits--) {
 set\_gpio(MOSI, (data >> bits) \& 1); //shift the needed bit to the LSB position
 set_gpio(SCLK,SET_LOW) ;
 delay();
 set_gpio(SCLK,SET_HIGH);
}
}
```



```
#elseif ATMEL SAM3U4E //use SPI MASTER
//the following code is based on Atmel microcontroller SAM3U4E's SPI controller
typedef struct _AT91S_SPI {
 AT91_REG SPI_CR; // Control Register
 AT91 REG SPI MR; // Mode Register
 AT91_REG SPI_RDR; // Receive Data Register
 AT91_REG SPI_TDR; // Transmit Data Register
 AT91_REG SPI_SR; // Status Register
 AT91_REG SPI_IER; // Interrupt Enable Register
 AT91_REG SPI_IDR; // Interrupt Disable Register
 AT91_REG SPI_IMR; // Interrupt Mask Register
 AT91_REG Reserved0[4]; //
 AT91_REG SPI_CSR[4]; // Chip Select Register
 AT91_REG Reserved1[43]; //
 AT91_REG SPI_ADDRSIZE; // SPI ADDRSIZE REGISTER
 AT91_REG SPI_IPNAME1; // SPI IPNAME1 REGISTER
 AT91_REG SPI_IPNAME2; // SPI IPNAME2 REGISTER
 AT91_REG SPI_FEATURES; // SPI FEATURES REGISTER
 AT91_REG SPI_VER; // Version Register
 AT91_REG SPI_RPR; // Receive Pointer Register
 AT91_REG SPI_RCR; // Receive Counter Register
 AT91_REG SPI_TPR; // Transmit Pointer Register
 AT91_REG SPI_TCR; // Transmit Counter Register
 AT91_REG SPI_RNPR; // Receive Next Pointer Register
 AT91_REG SPI_RNCR; // Receive Next Counter Register
 AT91_REG SPI_TNPR; // Transmit Next Pointer Register
 AT91_REG SPI_TNCR; // Transmit Next Counter Register
 AT91_REG SPI_PTCR; // PDC Transfer Control Register
  AT91_REG SPI_PTSR; // PDC Transfer Status Register
} AT91S_SPI, *AT91PS_SPI;
//assigning the SPI Master Controller address to the data structure
AT91PS SPI *spiA = (AT91PS SPI)SPI MASTER CONTROOLLER A ADDR; // SPI MASTER CONTROOLLER A ADDR ,
= 0x40008000
\#define TRANSFER_DONE (0x1 << 1) // (SPI) Transmit Data Register Empty
void SPI_Base_Initialize(void)
  //User to insert his controller-specific code here to do:
  //initialize SPI master controller
 //set SPI controller register, intilaize SCLK rate, Polarity etc.
  //set the number of SCLKs per transfer
  // spiA->SPI_CSR[0] = (spi->SPI_CSR[0] & ~AT91C_SPI_BITS) | AT91C_SPI_BITS_8;
  //enable SPI
void write_spi8(UINT8 data)
spiA->SPI_TDR =data; // Send data - Starts as soon as this completes
while ((spiA-> SPI_SR & TRANSFER_DONE) == 0); // Wait for transfer done
//read 8 bit data through spi
void read_spi8(UINT8 *data)
spiA->SPI\_TDR = 0xFF; // Send data - Starts as soon as this completes
while ((spiA->SPI_SR & TRANSFER_DONE) == 0); // Wait for transfer done
*data = (spiA->SPI_RDR & 0x000000FF);
#endif
```



```
//general API
#define SPI_READ 0x80
#define SPI_SEGMENT 0x1000
#define SIZE_MASK 0x60
#define SIZE SHIFT 5
#define SIZE_FLAG 3 //1 or more bytes, until CSB is de-asserted
//write 16 bit data through spi
void write_spi16(UINT16 data)
UINT8 temp;
  temp = (data>>8)&0xFF;
  //write the upper 8bit data
  write_spi8(temp);
 temp = data & 0xFF;
  //write low 8 bit data
  write_spi8(temp);
//read 16 bit data through spi
void read_spi16(UINT16 *data)
UINT8 temp;
//get the upper 8bit data
read_spi8(&temp);
*data = temp;
*data <<= 8;
//set csb pin to high
void set_csb_hi()
set_gpio(CSB, SET_HIGH);
//set csb pin to low
void set_csb_lo()
set_gpio(CSB, SET_LOW);
function: write the data in controller memory to the device
paramters:
reg_addr: device register address
segment_change: TRUE if the adress is in a new segment
ptr_data: starting location in proc. memory where data resides
data_length: number of bytes of data to write, range 0-16, 0:just change segment
(note: SPI transaction = data_length + 1)
returns : write data length, should be the same as what was requested
* /
int spi_reg_write(UINT16 reg_addr,bool segment_change, UINT8 *ptr_data, UINT16 data_length )
UINT16 instruction;
UINT8 low_addr;
UINT16 w_count;
//set chip select to low
set_csb_lo();
```



```
if (segment_change) {
//write the high address
  //get the register upper 8bit address
 instruction = (reg_addr >> 4) & 0x7;
 instruction |= SPI_SEGMENT;
 write_spi16(instruction);
  //set chip select high
 set_csb_hi();
  //set chip select low
 set_csb_lo();
    if(data_length == 0) // just change the segment
 set_csb_hi();
    return 0;
}
    if (ptr_data ==NULL)
 return 0;
low_addr = (reg_addr & 0XF);
low_addr |= (SIZE_FLAG << SIZE_SHIFT);</pre>
\ensuremath{//} send the low address
write_spi8(low_addr);
w_count = 0;
while (w_count < data_length) {</pre>
write_spi8(ptr_data[w_count++]);
//set chip select high
set_csb_hi();
return data_length;
}
 function: read data from the device to the controller's memory
 paramters:
reg_addr: device register address
segment_change: TRUE if this access is to a new segment
ptr_data: starting address in proc. memory where data will go
data_length: number of bytes of data to read, range 1-16
  (note: SPI transaction = data_length + 1)
 returns : read data length, should be the same as what was requested
int spi_reg_read(UINT16 reg_addr,bool segment_change, UINT8 *ptr_data, UINT16 data_length )
UINT16 instruction;
UINT8 low_addr;
UINT16 r_count;
if (data_length == 0 || ptr_data ==NULL)
```



Conclusion www.ti.com

```
return 0;
//set chip select to low
set_csb_lo();
//write the high address
if (segment_change) {
  //get the register upper 8bit address
  instruction = (reg\_addr >> 4) \& 0x7;
 instruction |= SPI_SEGMENT;
 write_spi16(instruction);
  //set chip select high
 set_csb_hi();
  //set chip select low
  set_csb_lo();
 low_addr = (reg_addr & 0XF);
 low_addr |=SPI_READ;
 low_addr |= (SIZE_FLAG << SIZE_SHIFT);</pre>
  // send the low address
 write_spi8(low_addr);
 r_count = 0;
 while (r_count < data_length) {</pre>
 read_spi8(&ptr;_data[r_count++]);
  //set chip select high
 set_csb_hi();
 return data_length;
```

## 7 Conclusion

Though the LMP90100 offers many advanced functions with its SPI interface, an example has been provided for carrying out basic device configuration and data read operations.

## 8 References

LMP90100/LMP90099/LMP90098/LMP90097 Sensor AFE System: Multi-Channel, Low Power 24-Bit Sensor AFE with True Continuous Background Calibration Data Sheet (SNAS510)

#### IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have *not* been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products Applications

Audio www.ti.com/audio Automotive and Transportation www.ti.com/automotive Communications and Telecom **Amplifiers** amplifier.ti.com www.ti.com/communications **Data Converters** dataconverter.ti.com Computers and Peripherals www.ti.com/computers **DLP® Products** www.dlp.com Consumer Electronics www.ti.com/consumer-apps

DSP **Energy and Lighting** dsp.ti.com www.ti.com/energy Clocks and Timers www.ti.com/clocks Industrial www.ti.com/industrial Interface interface.ti.com Medical www.ti.com/medical logic.ti.com Logic Security www.ti.com/security

Power Mgmt power.ti.com Space, Avionics and Defense www.ti.com/space-avionics-defense

Microcontrollers <u>microcontroller.ti.com</u> Video and Imaging <u>www.ti.com/video</u>

RFID www.ti-rfid.com

OMAP Applications Processors <a href="www.ti.com/omap">www.ti.com/omap</a> TI E2E Community <a href="e2e.ti.com">e2e.ti.com</a>

Wireless Connectivity <u>www.ti.com/wirelessconnectivity</u>