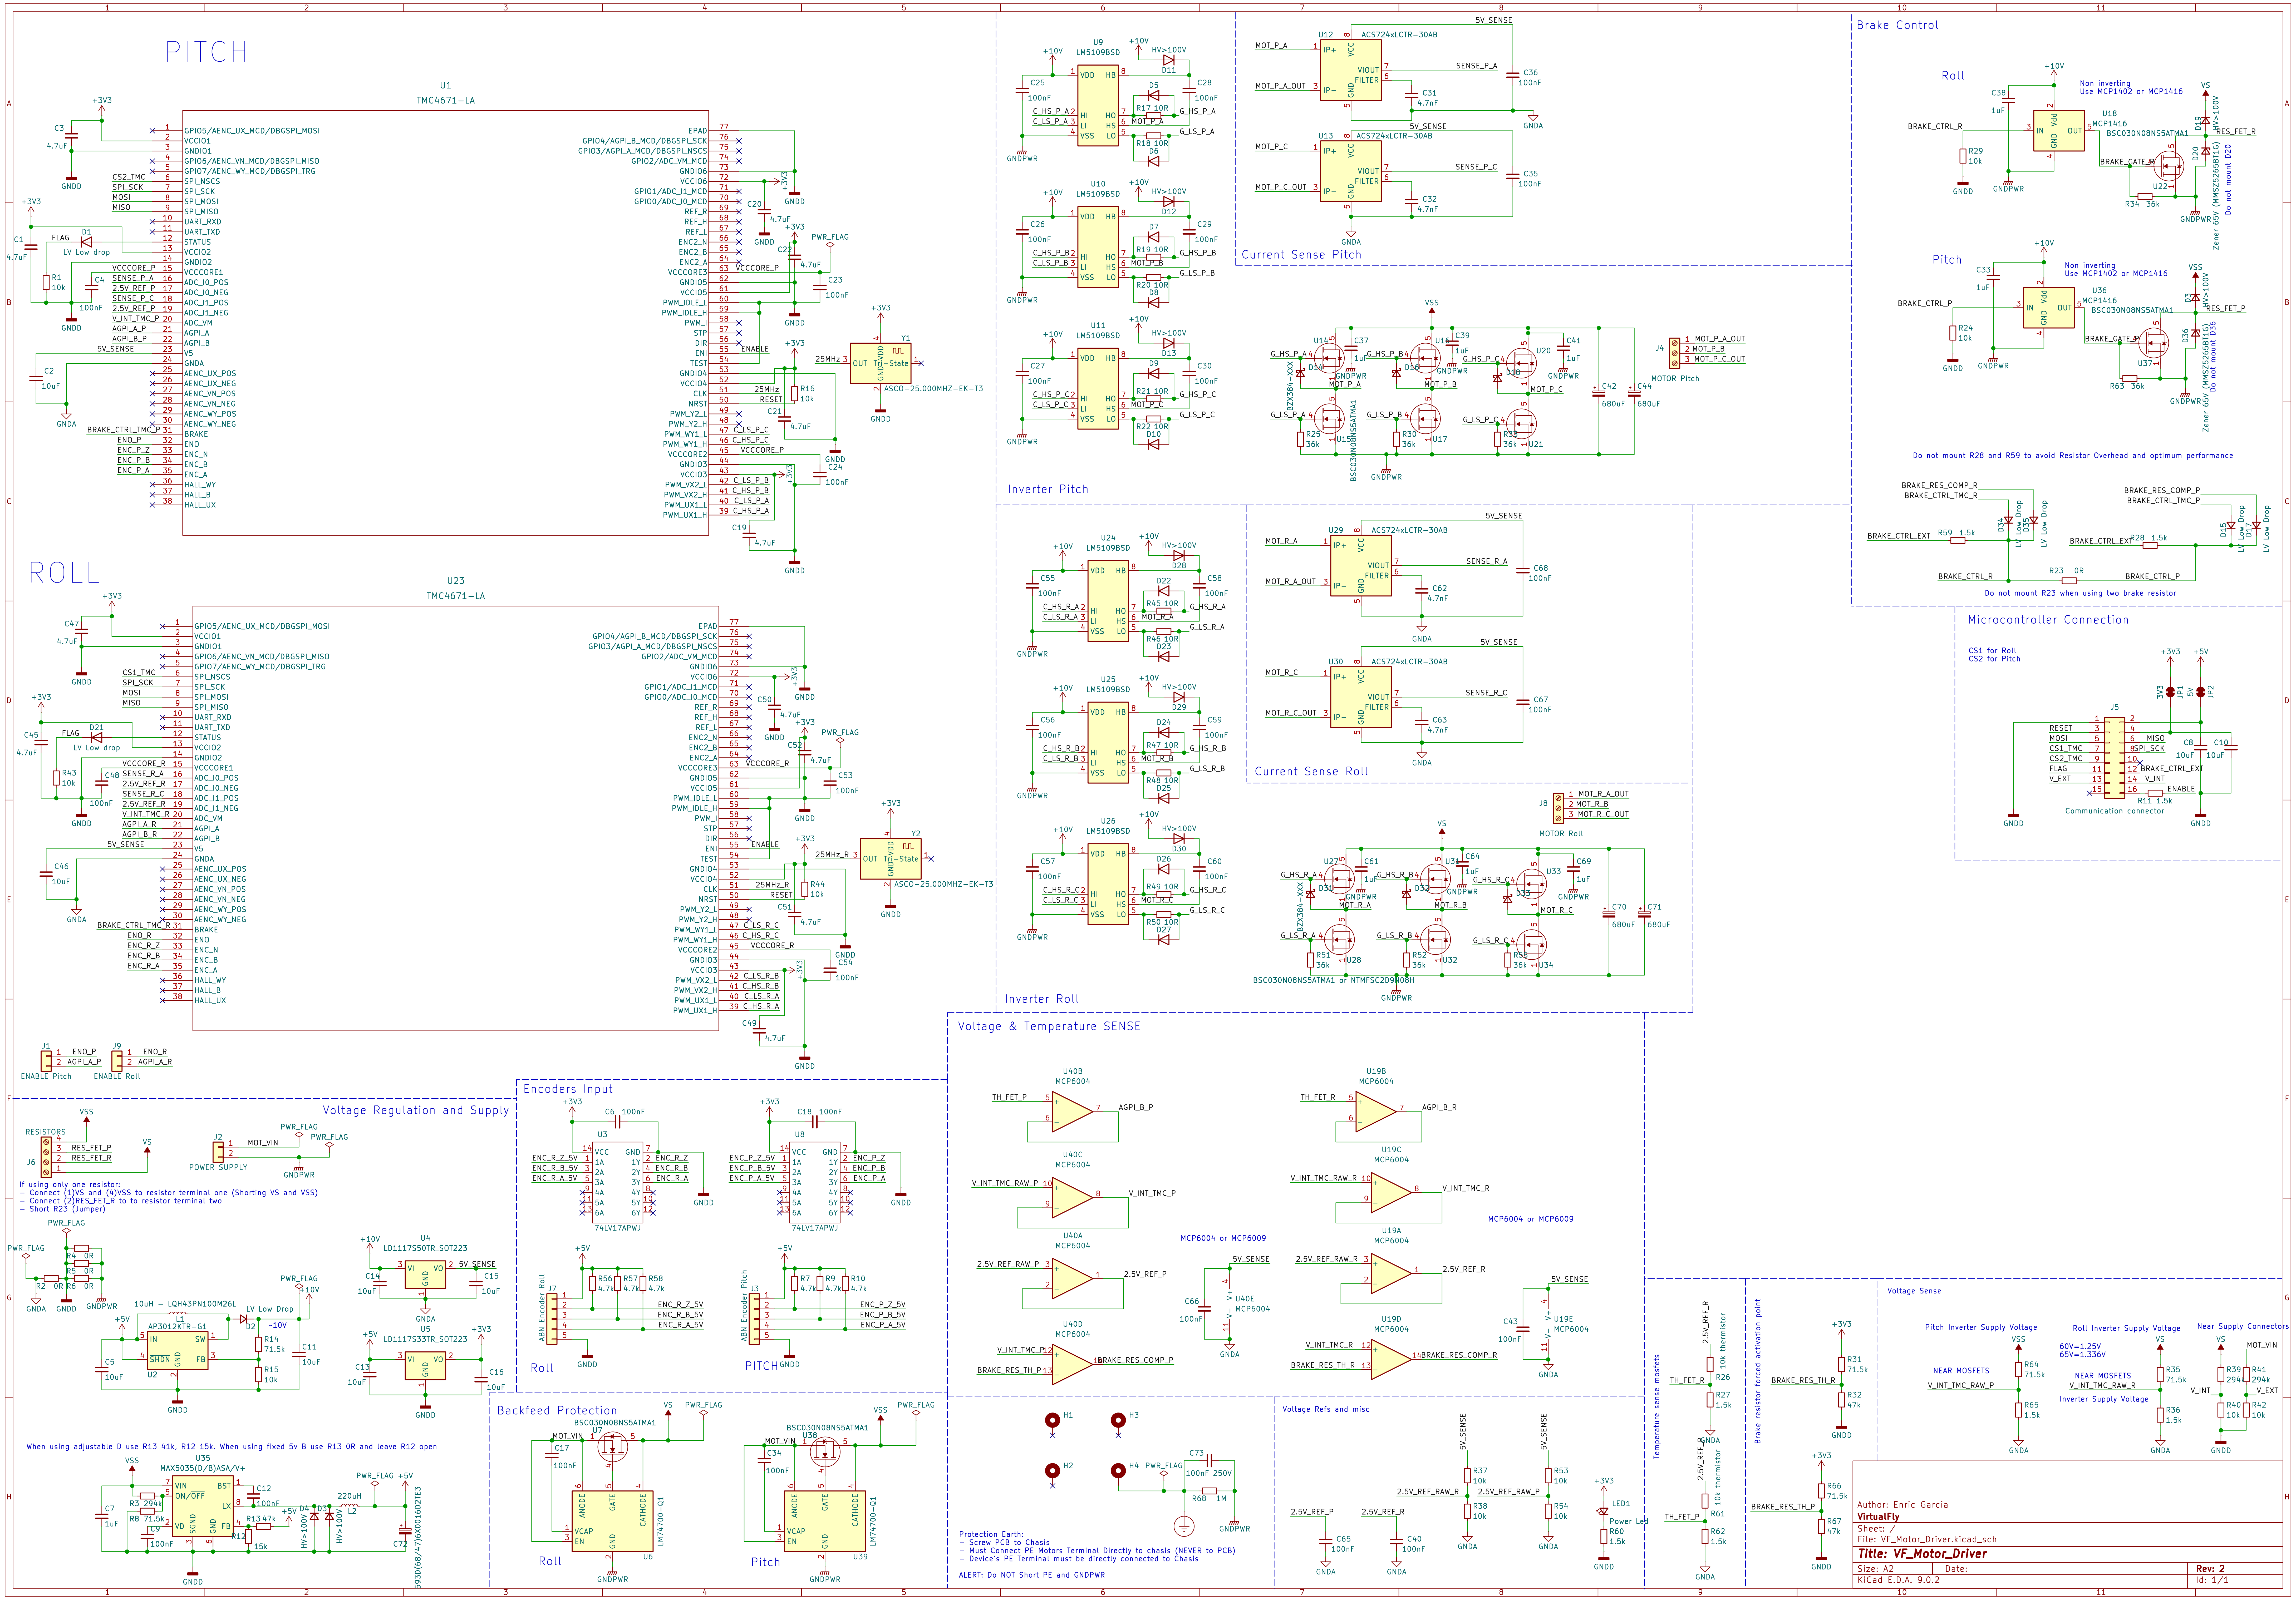

Non inverting
Use MCP1402 or MCP1416

Do not mount R28 and R59 to avoid Resistor Overhead and optimum performance

Do not mount R23 when using two brake resistor

CS1 for Roll
CS2 for Pitch

If using only one resistor:
- Connect (1)VS and (4)VSS to resistor terminal one (Shorting VS and VSS)
- Connect (2)RES_FET_R to to resistor terminal two
- Short R23 (Jumper)

When using adjustable D use R13 41k, R12 15k. When using fixed 5v B use R13 0R and leave R12 open

MCP6004 or MCP6009

Protection Earth:
- Screw PCB to Chasis
- Must Connect PE Motors Terminal Directly to chasis (NEVER to PCB)
- Device's PE Terminal must be directly connected to Chasis

ALERT: Do NOT Short PE and GNDPWR

Author: Enric Garcia
VirtualFly
Sheet: /
File: VF_Motor_Driver.kicad_sch
Title: VF_Motor_Driver
Size: A2 Date: Rev: 2
KiCad E.D.A. 9.0.2 Id: 1/1