


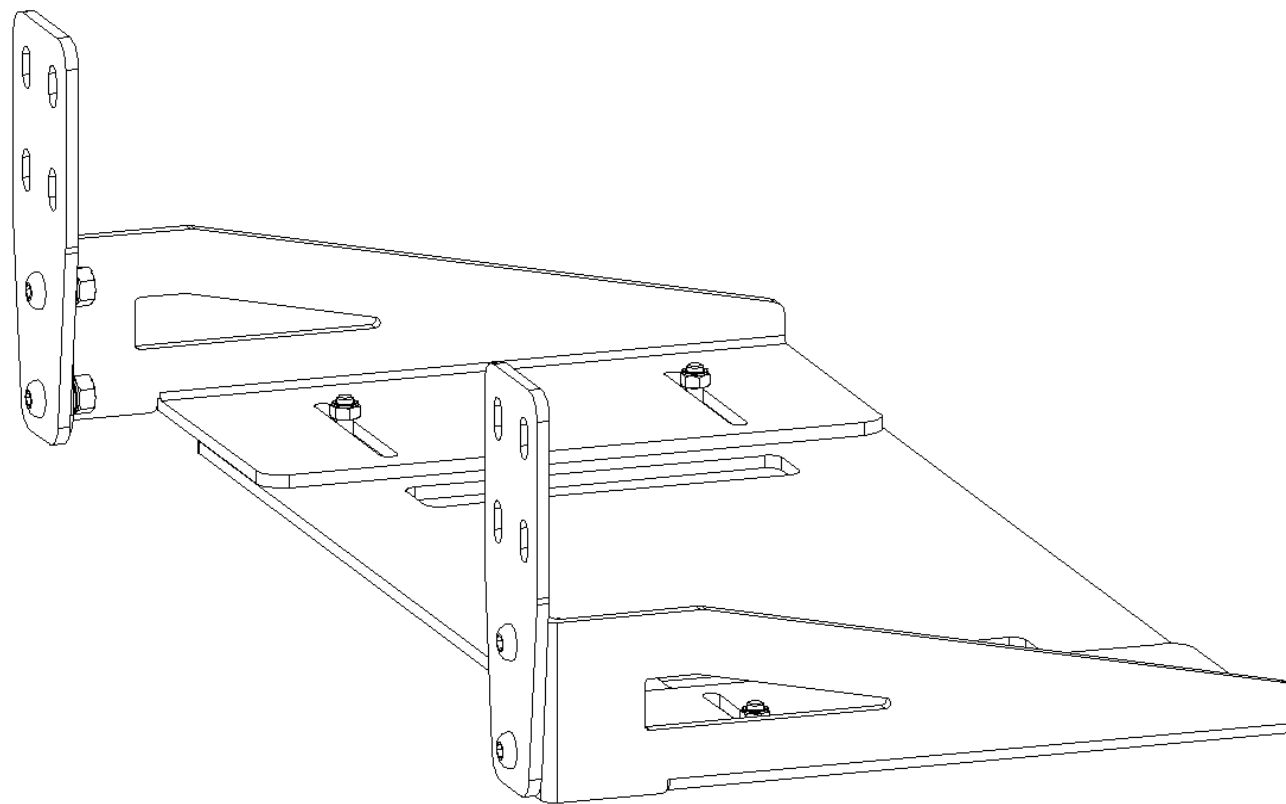

Quick installation guide


VNM PC Support



Horizontal Cover
x2




PC Support Plate
x1

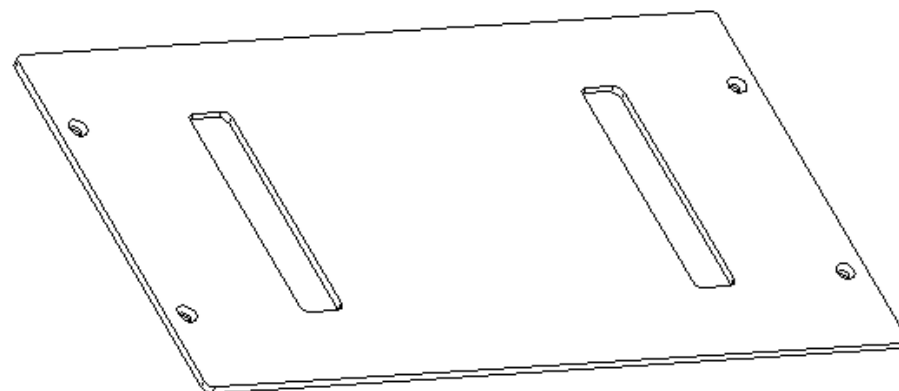

(M6 Lock nut)
x4



(M6x20)
x4



(Flat 8)
x12



(Spring 8)
x12




(M8)
x8




(M8)
x4



Arm Left
x1

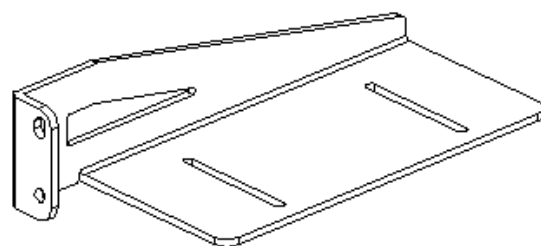

Arm Right
x1

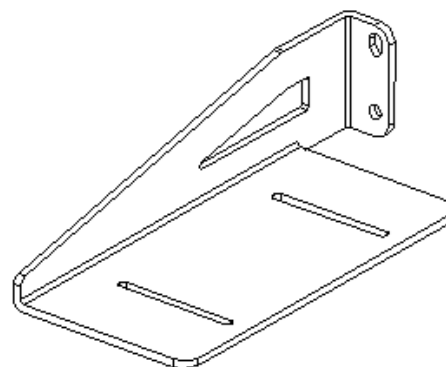


(M8x16)
x8




(M8x20)
x4






Method 1

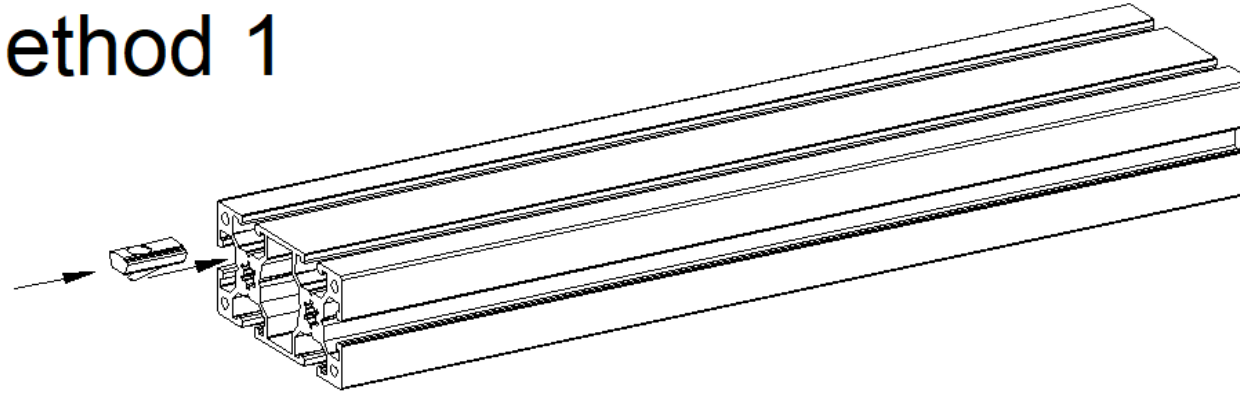



Method 2

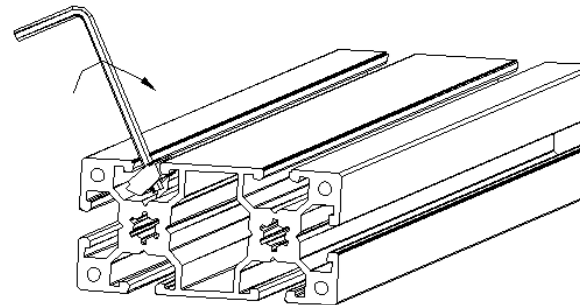

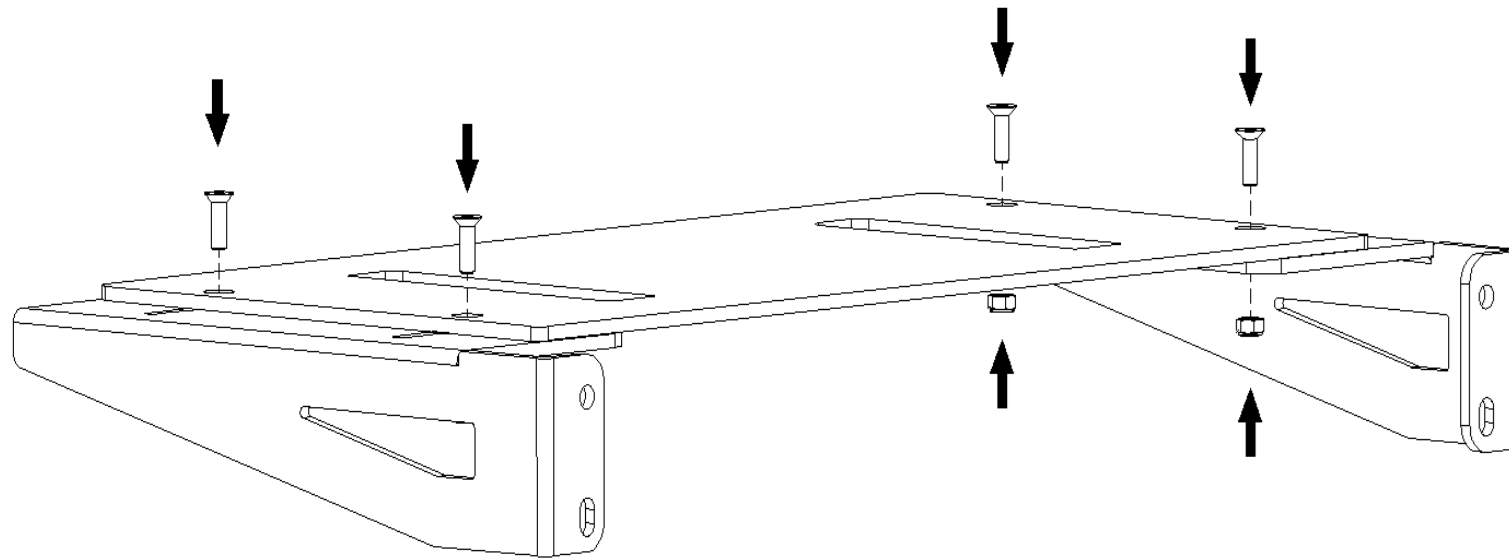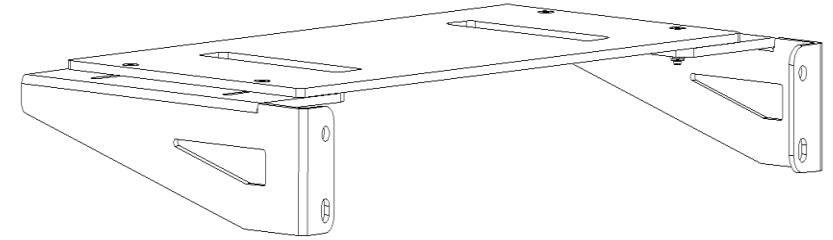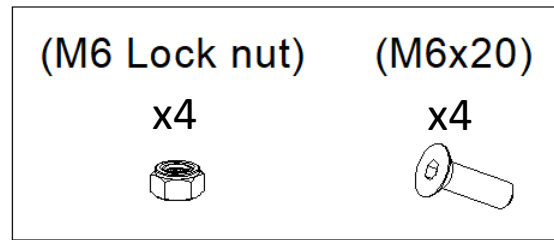



Method 1

(M8x16) x4 (Spring 8) x4 (Flat 8) x4 (M8 Nut) x4

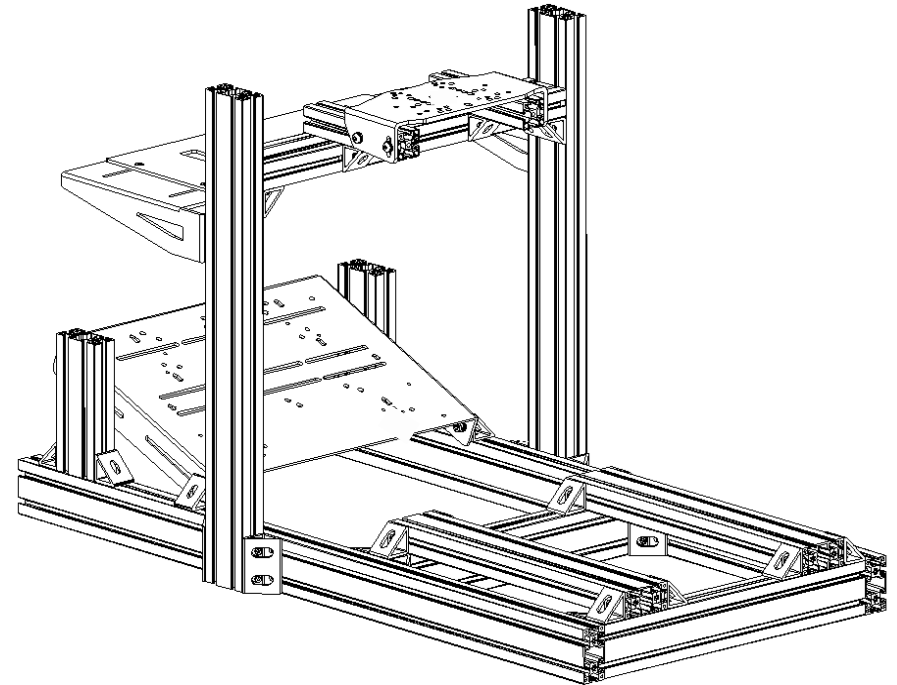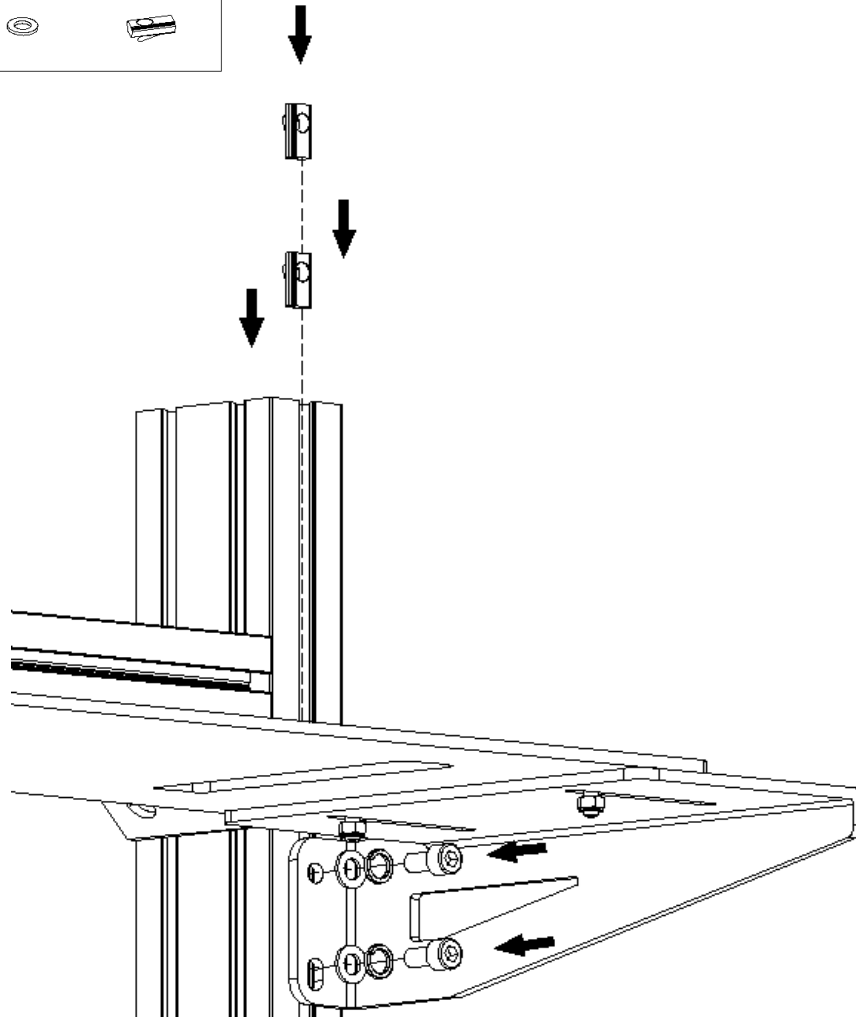

Method 2

(M8x16) x4	(Spring 8) x4	(Flat 8) x4	(M8 Nut) x4
			

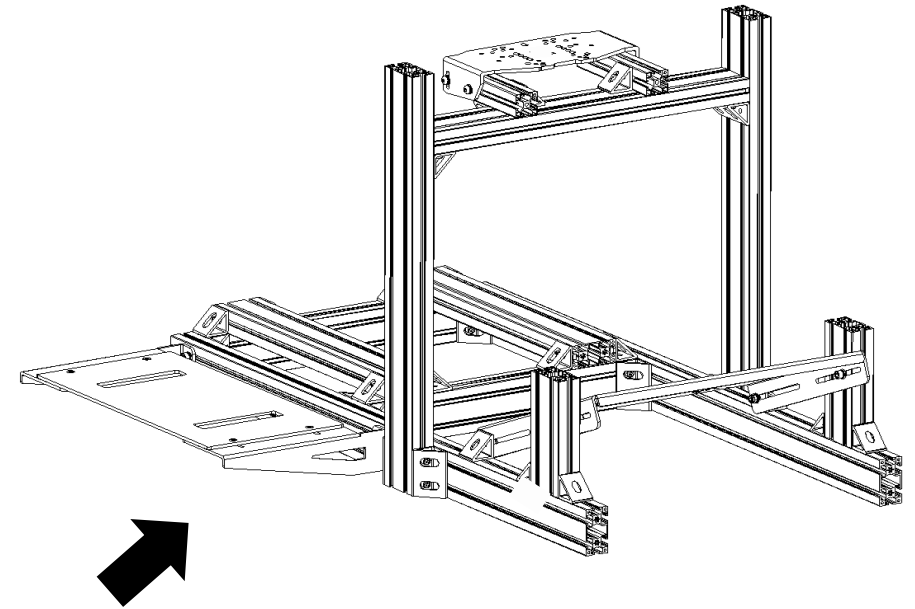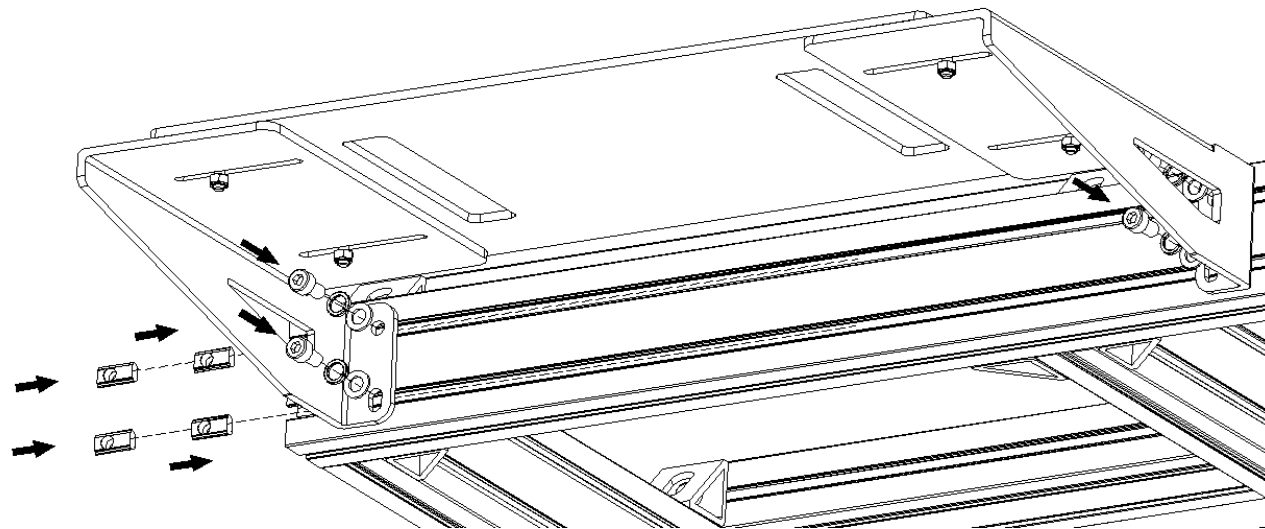

Method 3


(4080 Alu Corner)
x2






(M8x16)
x4





(M8 Nut)
x4

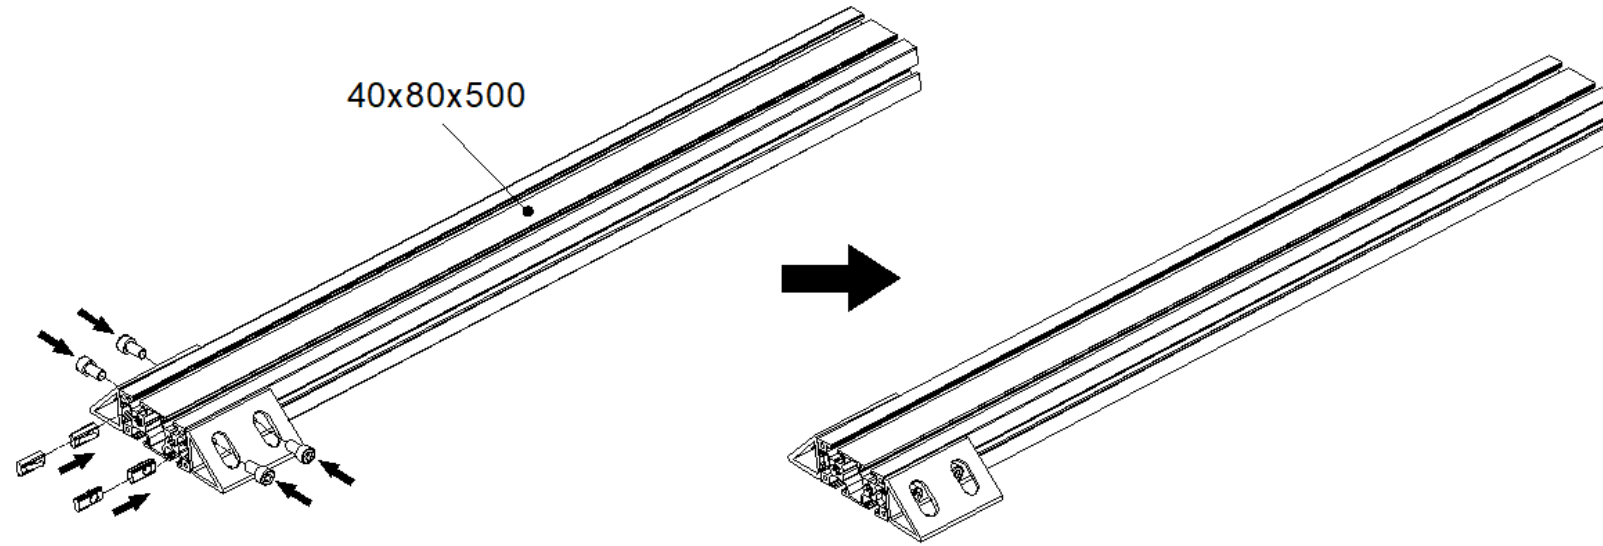

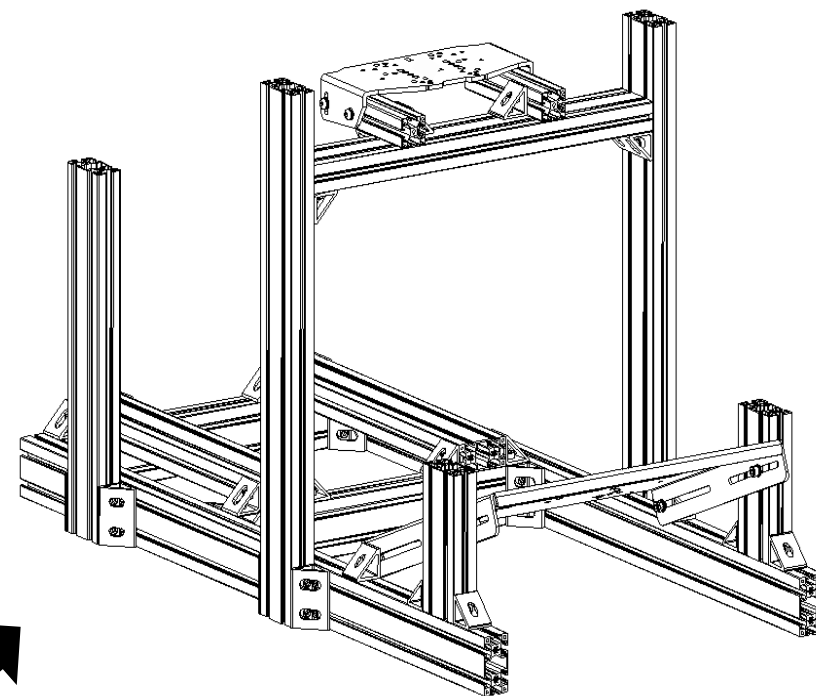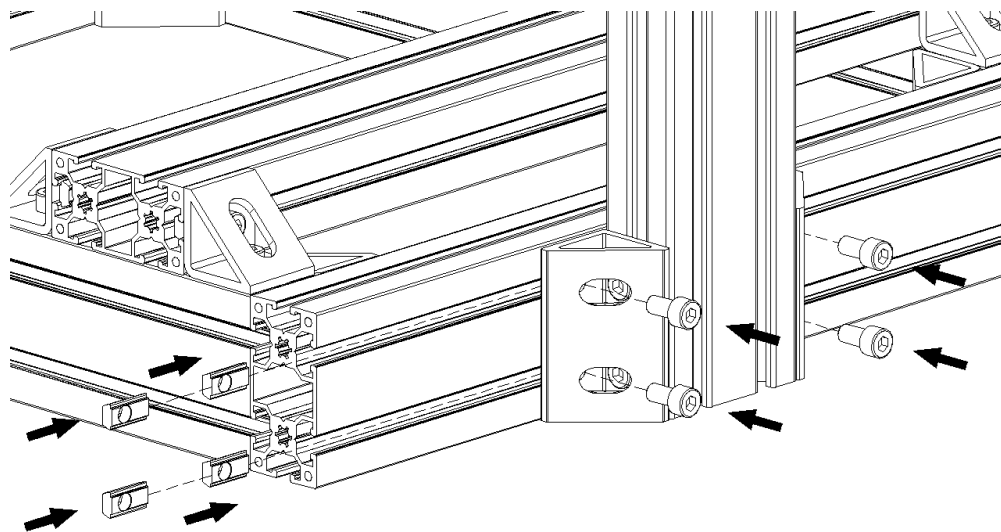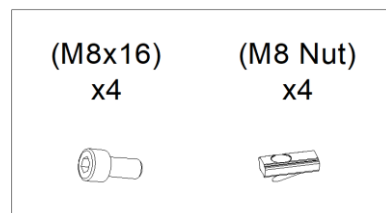

(M8x16) x4	(Spring 8) x4	(Flat 8) x4	(M8 Nut) x4
			

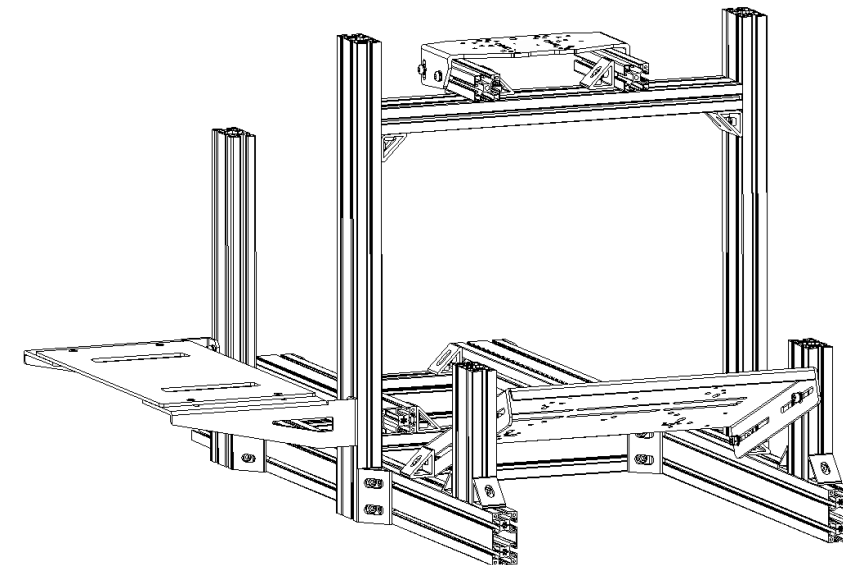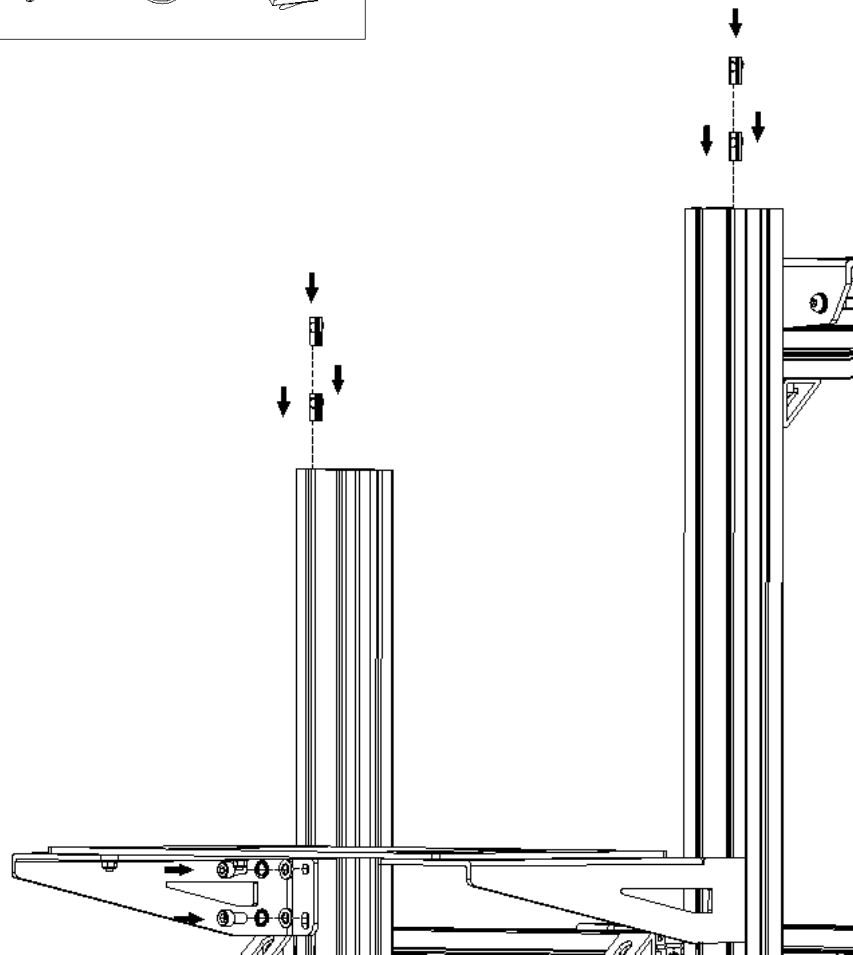

Method 4

(M8x20)
x4




(Spring 8)
x4



(Flat 8)
x4



(M8 Nut)
x4

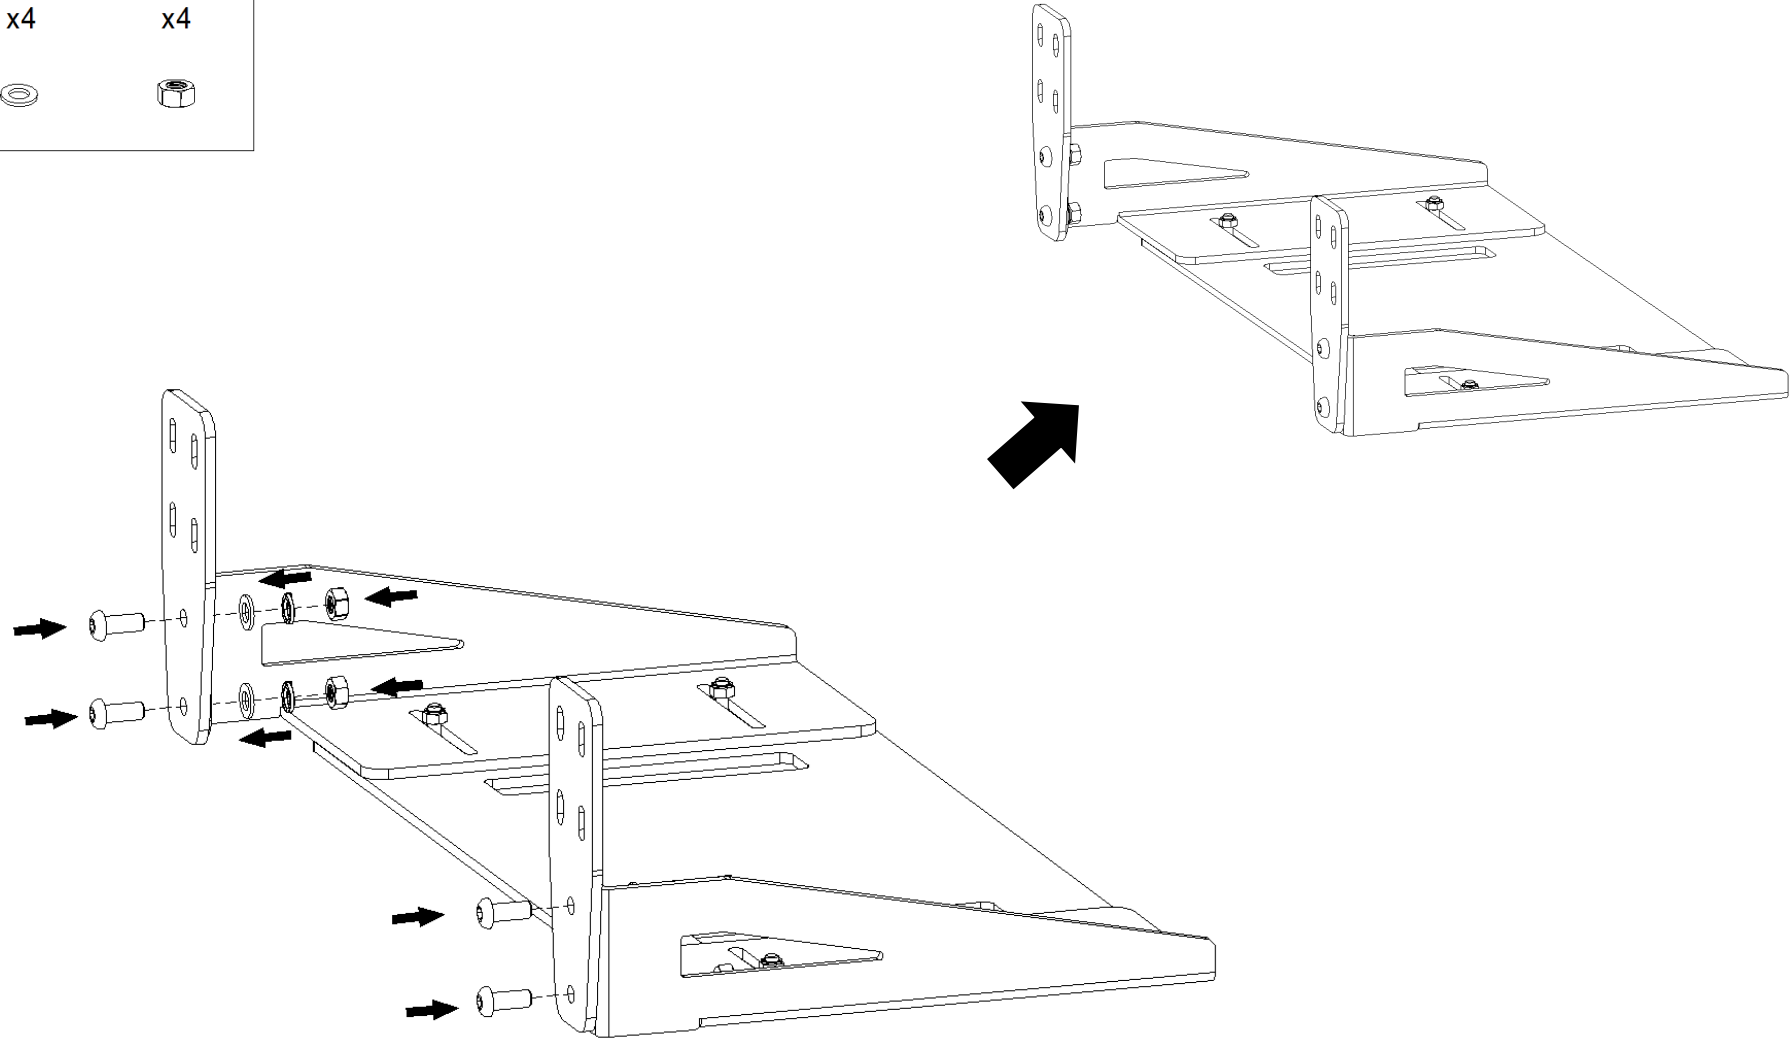

(M8x16) x8	(Spring 8) x8	(Flat 8) x8	(M8 Nut) x8
			

