
Vossi's cbm2-V9958-Card - solder the SOJ-sockets

1. Carefully cut both ends of the bottom with scratching step by step. Do not break it!

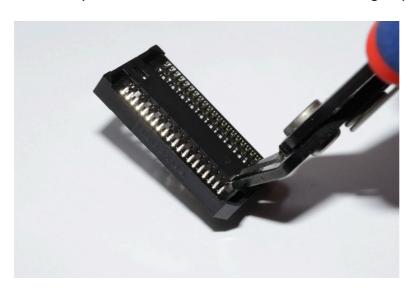

2. Carefully cut every strip at both sides. Don't cut the contacts!



3. Push down the bottom to the top of the socket on both sides.




Vossi's cbm2-V9958-Card — solder the SOJ-sockets


4. Check that all pins have the same heigh and cut the strips from the bottom-plate.



5. Solder tin at pin 1 and 21 on the board. Take 0,5 mm small smd-tin and a 0,4 mm tip.

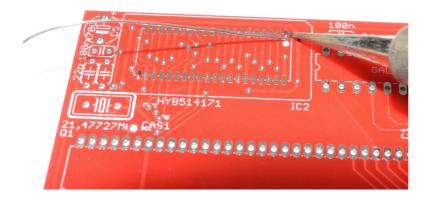


6. Carefully solder contact 1 and 21 to the pcb. Check for perfect alignment!

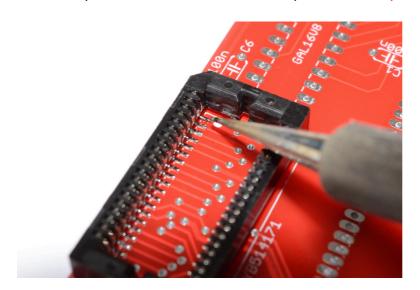

Vossi's cbm2-V9958-Card - solder the SOJ-sockets

7. Solder all pins to the board. Do not burn the plastic-socket with the iron!

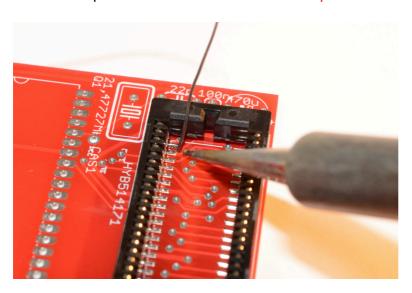

8. Solder the second socket and measure all used pins except lcas (29) from socket to socket.



9. Glue the bottom plate inside the socket for the right dram-heigh.

