

User's Manual

UPS

■ Model: UPS-2000VA/1500VA

GOLDENMATE



Thank you for choosing our UPS power supply!
Please carefully read this manual before use.

Version: 1.1

■ Disclaimer

Before using our product, please carefully read this user manual to ensure you fully understand its contents and ensure correct usage. After careful reading, please keep the manual in a safe place for future reference. Failure to use this product properly in accordance with the manual may result in serious injury to you or others, product damage, or property loss. Using this product implies that you have read, understood, agreed to, and accepted all the terms and conditions stated in the entire document. Users are responsible for the consequences of their own actions while using this product. We hold no liability for losses resulting from users not adhering to this manual. In accordance with laws and regulations, we retain the right to finalize the interpretation of this document and all associated documents concerning this product. This document is subject to change, revision, or termination without prior notice. Kindly visit the official GOLDENMATE website for the latest product information.

■ I. Safety Precautions

- 1) Please ensure that you have thoroughly read this manual before operating the product as instructed.
- 2) Disconnect the switch before moving or reconnecting the product to prevent the risk of electric shock.
- 3) Children are prohibited to touch or operate the product to avoid potential danger.
- 4) Do not pile up other items on top of the product.
- 5) Do not bump, step on, drop, impact on, violently vibrate,

or disassemble the product, to prevent unnecessary damage.

6) Do not immerse the product in water. If the product comes into contact with water or experiences water ingress, immediately isolate it and seek professional help.

7) Do not transport or store the product with conductive objects such as hairpins and necklaces.

8) Do not overload the product.

9) Do not disassemble the product to prevent unnecessary damage.

10) Avoid using organic solvents to clean the product shell.

11) If the product emits a strange odor or heat, undergoes discoloration or deformation, or exhibits any abnormalities during use, storage, or charging, immediately stop charging and usage. Remove it from the device and isolate it with safety. In the event of an accidental fire, use dry powder fire extinguishers or sand to extinguish the fire.

12) Do not deform the product forcefully, as it may damage electronic components or wiring sections, leading to unstable performance.

13) Use the original charging cable for charging purposes. We do not assume responsibility for any consequences resulting from the use of non-original charging cables.

14) If any liquids from the internal battery pack leak and come into contact with your eyes or skin, refrain from rubbing your eyes and rinse them thoroughly with water. Then promptly consult a doctor.

15) Please use the product within the specified temperature range, as the performance of the internal battery pack is greatly affected by temperature. This is evidenced by changes in backup time, which is a normal phenomenon.

16) Avoid condensation resulting from sudden changes in ambient temperature during use or storage, as it can lead to the failure of internal electronics or rusting of metal parts.

17) Do not use this product outdoors in rain or snow, as it may lead to an electric shock hazard.

18) Do not expose this product to fire, heat sources, water sources, direct sunlight, or temperatures exceeding 60°C, as this may result in an explosion.

19) Maintenance and replacement of lithium batteries must be conducted by professionals. Non-professionals are prohibited from performing these tasks. Ensure that batteries with the same specifications are installed during the process. Do not add additional batteries or attempt to expand the battery capacity.

20) For scrapped products, please adhere to local regulations regarding recycling and disposal.

21) The switch, LCD screen, and battery pack of the product are considered wear-and-tear parts, and after-sales service can be provided for a fee.


22) Avoid using the product in the following operating environments:

- Narrow spaces that impede heat dissipation.
- Places with temperatures and humidity levels exceeding the specified range.
- Places prone to vibration and collision.
- Places with strong static electricity or powerful magnetism.
- Places with metallic dust, corrosive substances, salts, or flammable gases.

II. Product Introduction

This product is an intelligent pure sine wave uninterruptible power supply powered by a lithium iron phosphate battery. It features a small size, lightweight design, and long service life, along with efficient energy conversion and reliable performance. In addition, this product effectively addresses common issues encountered with electrical appliances, including power outages, high and low mains voltage, instantaneous voltage drops, amplitude reduction oscillations, high voltage pulses, voltage fluctuations, surge voltages, harmonic distortion, electromagnetic interference, and frequency fluctuations. Moreover, it is well-suited for a wide range of applications, from computer equipment to automated systems in the communication industry.

1. Front/Rear Panel Description

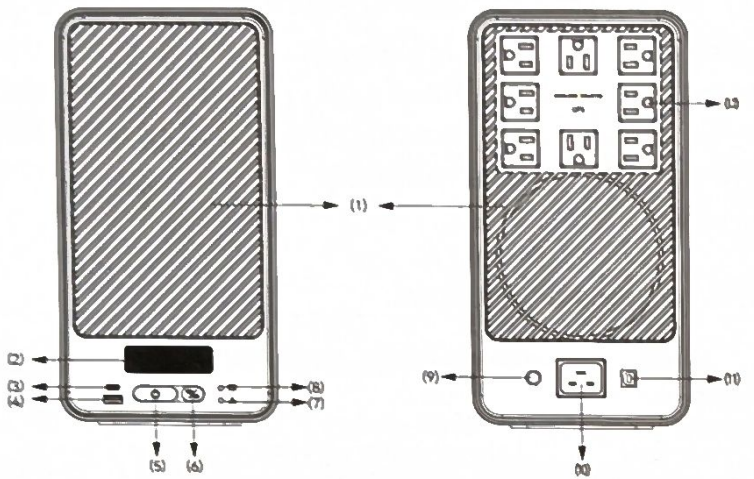

- (1)

Ventilation holes
- (2)

LCD display
- (3)

Type-c output interface
- (4)

USB output interface
- (5)

Switch
- (6)

Buzzer/LCD display switch
- (7)

Status indicator (Red)
- (8)

Status indicator (Green)
- (9)

Overload protector switch
- (10)

AC input socket
- (11)

Communication Interface
- (12)

AC output socket

2. Startup and Shutdown

2.1 Startup

Long press the switch for 2s. The buzzer will beep once, the LCD display will light up, and the data will be shown normally, indicating that the product is powered on.

2.2 Shutdown

Long press the switch for 3s. The buzzer will beep once, and the LCD display will turn off, indicating that the shutdown is complete.

3. LCD Display Description

3.1 Turning On/Off LCD Display


3.1.1 Mains mode

Once the product is connected to the mains power, you can turn it on and off by pressing the buzzer/display switch. The screen will automatically turn off after 90 seconds of inactivity. If there are no faults, the display will show the operational status and automatically turn off after 90 seconds. In the event of a fault, the display will show the fault code and automatically turn off after 90 seconds. To view the content of the display again, please press the buzzer/display switch (The device will automatically turn off after two hours of inactivity.Please restart it to use again).

3.1.2 Battery mode

If the product has abnormal mains power, the display will automatically light up. Press the buzzer/display switch to turn on/off LCD display. The display will automatically turn off after 90 seconds of inactivity. If a fault occurs, the display will show the fault code and automatically turn off after 90 seconds.

3.2 LCD Display Description

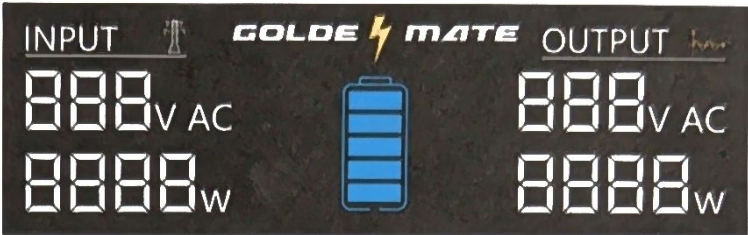

INPUT	Product status display An illuminated icon indicates that the product is in mains mode (charging status)
OUTPUT	Product status display An illuminated icon indicates that the product is in battery mode load access/power output (discharging) status
	Battery level (SOC) display:
	SOC≤5% No display
	5 < SOC < 9% Bar 1 blinks
	10≤SOC < 19% Bar 1 is lit
	20≤SOC < 39% Bars 1 and 2 are lit
	40≤SOC < 59% Bars 1, 2 and 3 are lit
	60≤SOC < 79% Bars 1, 2, 3 and 4 are lit
	Input/output voltage display: Input voltage is displayed on the left, while the output voltage is displayed on the right.
	① Input/output voltage display: Input power is displayed on the left,while the output power is displayed on the right.
	② Fault display, see 3.3 for a detailed description of the faults.

3.3 LCD Display Faults

SN	Fault Code*	Fault Description	Solution
1	U1*	Low voltage protection	Wait until the mains power is restored or restart the device
2	U2*	High voltage protection	Contact after-sales service for assistance
3	U3*	Short-circuit protection	Turn off the product, disconnect all devices connected to the product socket, and restart it: ① Reconnect one device at a time. If the fault reoccurs, disconnect the device that caused the failure. ② If the fault persists even when no devices are connected, contact the after-sales service for assistance.
4	U4*	Temperature protection	Turn off the product and restart it after 4-6 hours. If the fault persists, contact the after-sales service for assistance.
5	U5*	Overload protection	Turn off the product, disconnect all devices connected to the product socket, and restart it: ① Reconnect one device at a time. If the fault reoccurs, disconnect the device that caused the failure. ② If the fault persists even when no devices are connected, contact the after-sales service for assistance.

3.3 LCD Display Faults

SN	Fault Code*	Fault Description	Solution
6	U6*	Communication fault	Contact after-sales service for assistance
7	U8*	Fan fault	Contact after-sales service for assistance
8	U9*	High output voltage protection	Contact after-sales service for assistance

Note: * indicates numbers 0-9

4. Indicator Light Description

SN	Indicator	Buzzer	Output	Input	Description	Status
1	●Green●Red	N/A	N/A	N/A	No mains power, and the UPS is not turned on.	Shutdown
2	★Green●Red	N/A	N/A	Yes	The mains power is normal, and the UPS is not turned on.	Charging
3	○Green●Red	N/A	Yes	Yes	The mains power is normal, and the UPS operates properly.	Normal
4	●Green★Red	Beep per 5 seconds	Yes	Yes	UPS shows charging high/low temperature protection, and the UPS output is normal.	Abnormal charging, normal output
		Beep per 2 seconds	Yes	N/A	Input mains power is interrupted, and the product is powered by battery.	Abnormal mains power
5	○Green★Red	Beep per 5 seconds	Yes	N/A	Input mains power is interrupted, and the product is powered by battery.	Low voltage alarm
		Beep per 2 seconds	Yes	N/A	The power is low, and the product is about to shut down output.	
6	★Green★Red	Beep per 2 seconds	Yes	Yes	Input mains power is normal, but the UPS outputs an overload alarm. The load power needs to be reduced.	Overload alarm
7	★Green★Red	Beep per 2 seconds	Yes	N/A	Input mains power is normal, but the UPS outputs an overload alarm. The load power needs to be reduced.	Overload alarm
8	●Green○Red	Beep for 5 s	Yes/No	Yes	The communication is abnormal, NTC and the fan is disconnected.	No output
9	★Green○Red	Beep for 5 s	Yes/No	Yes/No	Inverter low voltage protection, temperature protection, and severe overload protection. The device will be restored under proper conditions.	No output
10	○Green○Red	Beep for 5 s	Yes/No	Yes/No	The UPS has faults including short circuit, charging and battery issues, as well as high output AC voltage. The device will be restored under proper conditions.	No output


Note: ★ (blinking) ○ (lit) ● (off)

Remarks: ① Buzzer sounds an alarm when mains power is normal and device is abnormal. The buzzer alarm can be turned off by pressing the buzzer/display switch.

② When the mains power is abnormal, the product switches to battery mode. Press the buzzer/display switch to turn off the buzzer alarm function. When the device is abnormal, the buzzer will sound an alarm.

III. Installation

1. Product Packaging List

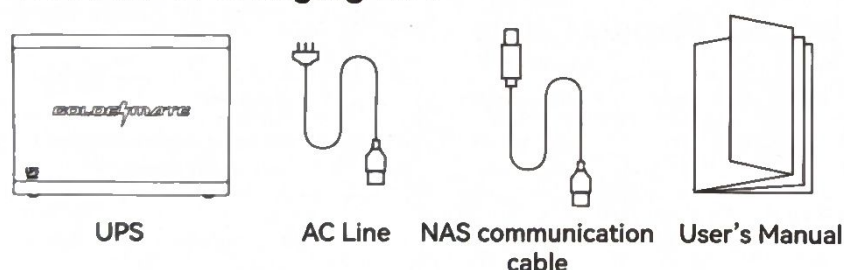

2. Unpacking Inspection

Upon receiving the product, carefully inspect the package for any abnormalities and avoid impacts during handling. Check the product shell and accessories for damage, missing items, or any other abnormalities. If you notice any damage or missing components, please contact our after-sales service for assistance.

3. Preparation Before Installation

Installation Environment: This product is an electrically charged device, so it should be installed in a well-ventilated and dry environment, free from direct sunlight and high temperatures. Avoid outdoor usage.

Installation Size Requirements: Since the product generates heat during operation, it is essential to allocate space for heat dissipation. The minimum reserved size on

both sides of the product should be ≥ 100 mm, and for the front and back, it should be ≥ 250 mm. Note that the front of the product contains the heat dissipation fan, so objects must not block this area.

4. UPS Installation

1) Carefully review the product specifications before installation. Overpower usage is prohibited.

2) Product Startup Process: Connect the power-consuming device - connect the mains power - turn on the product's switch. ① Use the power cord provided with the product to connect to the mains power. Ensure proper grounding by using 2-pole, 3-wire grounding cords to connect to the power-consuming device. ② Long press the switch for 2s. The buzzer will beep once, the LCD display will light up, and the data will be displayed normally, indicating that the startup is complete.

3) Product Shutdown Process: Turn off the product's switch - disconnect the mains power - disconnect the power-consuming device. ① Long press the switch for 3s. The buzzer will beep once, and the LCD display will turn off, indicating that the shutdown is complete.

IV. Technical Parameters

Model	UPS2000VA /1600W	UPS1500VA /1200W	UPS1500VA /1000W
Rated capacity	2000VA	1500VA	1500VA
Rated load power	1600W	1200W	1000W
Load type	Devices such as computers, networks, and monitors.		
Input voltage	90-140 (±5) V~		
Input frequency	50/60 (±3) Hz		
Overload protector	120V~/20A		
AC output	120×(1±10%)V~		
Type-C output	5V/2A, maximum 10W for single port, totaling 10W		
USB output			
Output frequency	60 (±3) Hz (frequency is the same as that of mains power)		
Socket type	NEMA 5-15P		
Output waveform	Pure sine wave		
Noise	≤45dB		
Heat dissipation	Fan		
Harmonic distortion	< 5%		
Conversion time	≤10ms		
Backup time	≤30min (800W @25°C)	≤30min (600W @25°C)	
Battery type	Lithium Iron phosphate battery		
Battery specification	51.2V9Ah	51.2V5.8Ah	
Charging time	≤5h	≤4h	
Cycle life	3000+		
Product size	W425*D300*H160mm		
Net weight	17.5Kg	15Kg	
Operating environment	0~40°C		
Storage conditions	-15~40°C		
Humidity	20%~90%RH, non-condensing		
Overload protection	Mains mode	① 100% < load ≤ 110%, UPS triggers an alarm and operates normally. ② 110% < load ≤130%, UPS triggers an alarm, enters into protection status and cuts off output after 60s of operation. ③ 130% < load < 150%, UPS triggers an alarm, enters into protection status and cuts off the output after 60s-500ms of operation according to the overload ratio. ④ Load ≥ 150%, UPS triggers an alarm and enters into protection status after 500ms of operation.	
	Battery mode	① 100% < load ≤ 110%, UPS triggers an alarm and operates normally. ② 110% < load ≤130%, UPS triggers an alarm, enters into protection status and shut down output after 60s of operation. ③ 130% < load < 150%, UPS triggers an alarm, enters into protection status and cuts off the output after 60s-500ms of operation according to the overload ratio. ④ Load ≥ 150%, UPS triggers an alarm and enters into protection status after 500ms of operation.	

Model		UPS2000VA /1600W	UPS1500VA /1200W	UPS1500VA /1000W
Short-circuit protection	Mains mode	Overcurrent circuit breaker disconnects and a short-circuit fault alarm is triggered, no output		
	Battery mode	A short-circuit fault alarm is triggered, no output		

*Note: ①The laboratory data provided above is based on standard test conditions. Actual data may vary from laboratory results due to variations in operating conditions and environments.

②Load power, accounting for 60-70% of the UPS-rated load power, is considered optimal.

③ To prolong the service life of the UPS, please ensure it is used in accordance with the specified technical parameters.

④The standard test conditions for the cycle life of the battery pack inside the product are as follows: 25°C temperature, 0.2C discharge rate, 80% depth of discharge (DOD), and a capacity retention rate of ≥70%.

⑤ Please note that the above information is subject to change without prior notice, and the actual product specifications should be considered the standard.
Warning: This product is a class C2 UPS. Its use in residential areas may require installation restrictions or additional measures to mitigate radio frequency interference.

■ V. Maintenance and Care

1) When the product's power is low, please recharge it within 12 hours to help prolong the battery pack's life. Failure to do so may result in prolonged power depletion, which could impact the battery pack's service life.

2) Shallow charging and discharging of the battery promote economical use of the product and enhance its cycle life. Overcharging and over-discharging may result in overheating, fire, functional failure, a reduced life span of the internal battery pack, or even pose a safety risk.

3) Proper product discharge can extend its service life. The product needs to be discharged once every three months while in battery mode.

4) To safeguard the product's service life, the battery mode will automatically shut down after an extended period of non-use, requiring the product to be restarted.

5) As usage time increases, battery life diminishes. Regularly replacing the battery ensures adequate backup time for the product.

6) If there is any dirt on the product interface, please turn off the power and clean it with a dry cloth before use.

7) If condensation forms on the product, wait until it is completely dry before turning it on to prevent the risk of electric shock.

■ VI. After-Sale Service

If the product malfunctions, try to resolve the issue by following the instructions provided in the manual. If the problem persists after troubleshooting, please contact our after-sales service personnel. Please provide the date of purchase, contact number, detailed address, and a description of the product failure when contacting the after-sales service personnel. We kindly request your

cooperation in answering our personnel's detailed inquiries, including information on site conditions, fault manifestations, occurrences of accidents (frequent or occasional), and whether any operating procedures were performed incorrectly. Providing this information will assist our personnel in identifying the cause of the issue and offer appropriate assistance or guidance to the user. If the problem cannot be solved, please do not hesitate to contact us for further assistance.

For material defects, process defects, and non-human damage to the product, we provide free maintenance and part replacement within the warranty period. The replaced parts remain the property of our company.

However, the following conditions are not eligible for free repair service during the warranty period:

- Unauthorized disassembly of the product.
- Damage to the surface that is not covered by the warranty.
- Failure to follow the manual by users.
- Failure or damage caused by accidental, man-made, environmental, and other factors (such as operating errors, collisions, improper voltage, moisture).
- Product packaging and accessories are not included in the warranty coverage.
- Force majeure events such as lightning, storms, floods, fires, and earthquakes.

Get 24/7 Assistance at



Use camera or QR scanner to scan

Visit: <https://goldenmate afterservice.vip>
Email: goldenmate@afterservice.vip
Call: +1 (877) 591 5875 (Toll-free)

Shandong Goldencell Power Technology Co., Ltd.