Распределители гидравлические Р120



Description

Назначение и область применения

For starting, controlling and stopping the working fluid between the generator of pressured flow, the consumers at the Tank.Предназначен для изменения направления потока, ограничения давления рабочей жидкости гидролиниях, разгрузки насоса в нейтральной позиции золотников.

Specifications

Основные показатели:

1. Valve monoblock

Конструктивное выполнение

2.Mounting

Крепление

3. Pressure connections

Присоединительние отверстия

4. Ambient temperature

Температура воздуха

5.Pressure medium

Рабочая жидкость

6. Viskosity

Кинематическая вязкость

7.Fluid temperature

8.Filtration

9. Max. operating pressure

Давление max. bar

10.Leakage

Внутренние потери (А, В – Т)

11.Nominal flow

Разход рабочей жидкости

12.Spool stroke Ход золотника 13.Actuating force моноблок 3 bolts M10

internal thread внутренние резби

-40C...+60C

mineral oil based hydraulic oil

12...800 mm²/s permissible range 20...100 mm²/s recommended range

- 15C...+80C

Oil contamination 10 to NAS1638

P = 250 barT = 50 bar

A, B = 300 bar


30 cm³/min at 120 bar

120 l/min (see "operating" diagram)

 ± 10 mm, L12 = ± 10 mm +6 mm

< 300 N in spool axis direction

Распределители гидравлические Р120

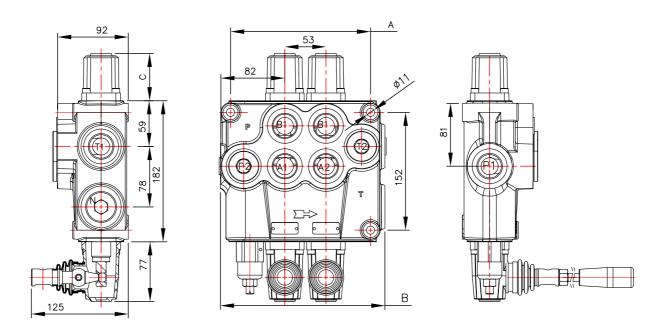


					la	ble 1
	A	В	P1	P2	T1	T2
P120	129	160	+	+	+	+
02P120	182	213	+	+	+	+
03P120	235	266	+	+	+	+
04P120	288	319	+	+	+	+


la	ble 2
spool control фиксации золотника	С
1; 2, 3, 4; 5; 6; 7; 8; 9; 10; 11;	64
12	74


02	P120) 1	\mathbf{A}	$\frac{1}{1}$	\mathbf{A}	1	G	KZ1	. H	E	C2	$\frac{1}{1}$	•••
number of spools (table 3)	hydraulic directional control valve P120	parallel distribution (table 4) (parallel)	spool type—distribution (table 5)	spool control (table 6)	second spool distribution (table 5)	second spool control (table 6)	ports threads (table 9)	lever options (table 10)	operation features (table 8)	electric microswitch (table 7)	cary over center (table 11)	conection ports in use (table 12)	there is something else

Распределители гидравлические Р120

02P120 1A1A1

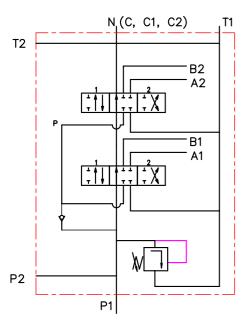

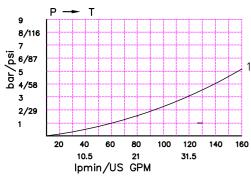

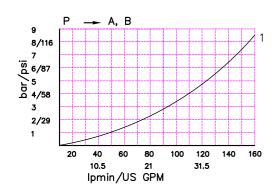

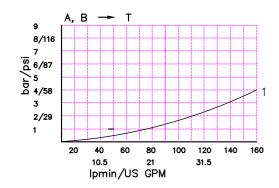


	Table 3
code	Number of spools
P120	1
02P120	2

	Table 5
code	spool type
Α	1 n b a 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
В	1:11:1:7
С	
D	\$1111;X
Ε	[;11]1;5[;X]
F	<u> </u>
G	1;1;7;
Н	
М	[+ 1] + + + X
N	
0	
Р	
Q	[;],;;;X
R	[;]];;]];X]
S	111111
Т	

Table 4

code	way of distribution
	распределение потока
1	parallel ; паралельное

Table

		Table 6
code	spool	control
1	1 0 2 ₩₩₩	1 0 2
2	1 0 2 V WM	1 0 2
3	1 0 ² →	1 0 2
4	0 2 ₩₩	0 2
5	0 ★	1 0
6	1 2 	1 2
7	1 2 *******	1 2
8	1 0 2	102
9	1 0	1 0
10	0 2	0 2
11	1 2	1 2

Table 7

code	с микро шалп	nep ; incorporated microswitch
E	1 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	mikroswitch type Omron-V 165 I C5

Table 8

code	gpyгое управление ; operation feature						
Р	D 4 1 2	пневматическое on-off pneumatic contol; 5-10 bar; ports NPTF 1/8-27					
Н	1 2	eugpaвлическое on-off hydraulic control ; pn = 5 - 20 bar ; ports G1/4					


Распределители гидравлические Р120


treads for conection

Table 9

outlets/ports/	metric	BSP	SAE	
P, A, B, T	M33x2	G 1"	SAE 16	
N	M36x1.5	_	_	_

Table 10

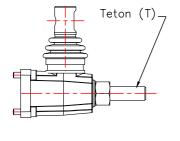

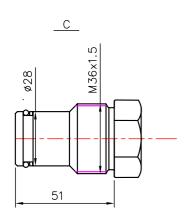

code	with thread M12	code	with zange ø12	code	with zange Ø12
KZ	M12 Ø75 128	ΚY	Ø12	KI	Ø12
KZ1	with lever L=200 mm	KY1	with lever L=200 mm		
KZO	rotated 180°	KY0	rotated 180°	KIO	rotated 180°
KZ01	with lever L=200 mm	KY01	with lever L=200 mm		

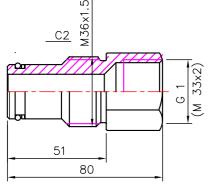


		Table 11
code	metric	
X	without port N	
_	with port N, closed	
С	with port N and plug C — closed center	
C1	port N — carry over for EO	
C2	port N — carry over, internal thread	

Table 12

code	ports for connection in uze
11	P1 ; T1
12	P1 ; T2
21	P2 ; T1
21	P2 ; T1