

## **WDC** System

## Installation Instructions

DC System - The following installation instructions are very important. Read them carefully, and be sure you understand them completely before you begin any work. Refer to Balco shop drawings for placement dimensions and anchor spacing.


## Parts:

A. Base Member B. Fastener C. Gasket D. Cover Plate

## Storage & Handling:


Upon receipt, this product should be stored horizontally, in a clean, dry place.

- **Step 1:** If required, fire barrier or water barrier should be installed at this time. Reference the appropriate instructions for information on how to install these products.
  - If fire barrier is to be installed with the expansion joint cover, anchor hole spacing should reflect fire barrier anchor spacing requirements.
- **Step 2:** Set base member clip in position for installation. The clip should be aligned, centered, and leveled a minimum of 3" (76mm) from both the bottom of the wall or top of the ceiling.
- **Step 3:** Using the anchors provided, attach the clip to the wall or ceiling.

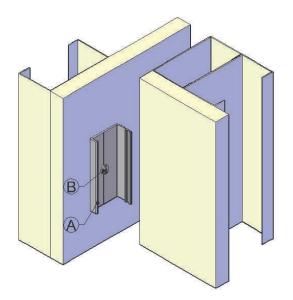





- **Step 4:** Create a vertical chalk line for the entire length of the joint on the corner wall at the edge of the installed base member.
- **Step 5:** Using the chalk line as a guide, install each subsequent base member per steps 2 and 3.

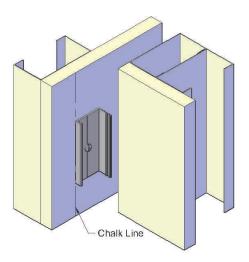

- **Step 6:** Align cover plate over base member. Using moderate hand pressure, partially engage cover plate's toothed tabs onto base member clip.
- **Step 7:** Using a wooden block and mallet, gently tap the cover plate fully onto base member.

  Once the cover and base member snap together, separation of parts will result in damage.

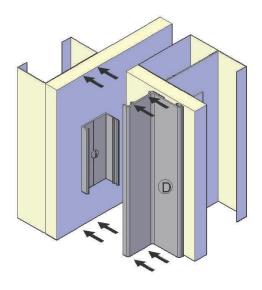

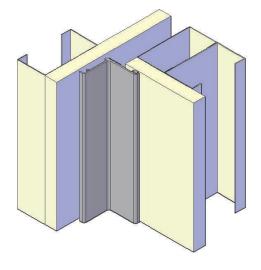

**Step 8:** Remove temporary protective film.