


# **GC Model Floor Cover**

## **Installation Instructions**

**C Floor Cover** - The following installation instructions are very important. Read them carefully, and be sure you understand them completely, before you begin any work. Refer to Balco shop drawings for placement dimensions and anchor spacing.

#### Parts:

A. Cover Plate B. Gasket C. Anchors

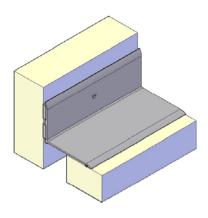

#### Step 1: Attach the Gasket

If the gasket was not attached to the cover plate at the factory, do so at this time. Trim the gasket section to match the length of the cover plate. Insert the gasket into one of the channels on the bottom of the cover plate.




#### **Step 2: Drill Wall Anchor Locations** (Required for Masonry / Concrete Installations Only)

If the cover plate is to be attached to a masonry or concrete wall, it will be necessary to pre-drill the anchor hole locations on the wall.

Place the expansion joint cover into its installed position against the wall. Ensure that the cover plate is level and properly aligned. Using the factory drilled cover plate as a template, mark and drill the anchor holes on the wall. Anchor holes should be drilled 1/4" deeper than the length of the anchor.

• *Gypsum / stud wall construction does not require pre-drilling.* 

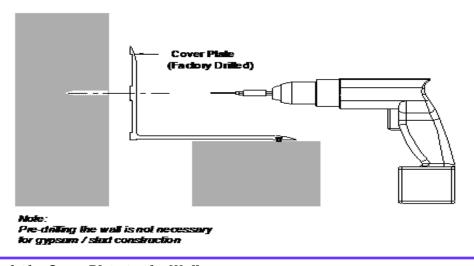

### Step 3: Attach the Cover Plate to the Wall

Using the factory provided flat head anchors, attach the cover plate assembly to the wall.

• Repeat Steps 1 thru 3 for each subsequent section of cover plate

