AV SERIES JOINT SYSTEMS

Balco, Inc. - Expansion Joint Cover Installation Instructions

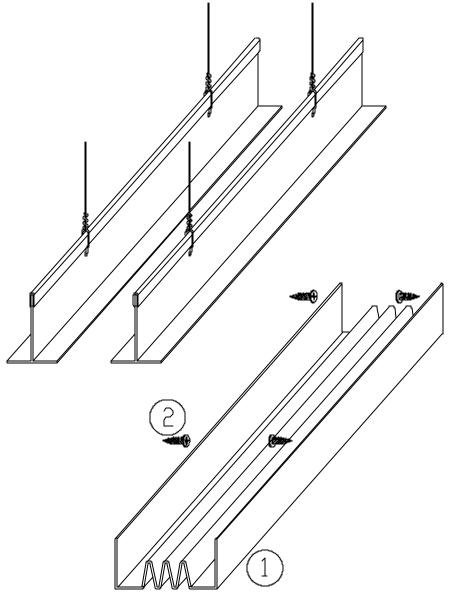


Figure 1

Parts:

- 1. Dual Durometer Seal
- 2. Screw


Tools Required:

The following tools and materials are recommended for use in the installation of the joint cover system. Balco, Inc. does not provide these tools and materials:

- A. Electric Drill
- B. Tape Measure
- C. Phillips and Slotted Screw Drivers

The following installation instructions are very important. Read them carefully, and be sure you understand them completely before you begin any work. These instructions are applicable to model AV-1. Installation is illustrated in Figure 1.

STEP 1. Install the suspended ceiling in accordance with the suspended ceiling manufacturer's written instructions.



STEP 3. Select the screws provided by the factory and attach one side of the seal to the tee on one side of the joint (Figure 3). Typical anchor spacing is 20" o.c. with anchors placed a nominal 3" from each end of the seal.

STEP 4. Attach the other side of the seal to the opposite tee, using the screws provided by the factory (Figure 4).

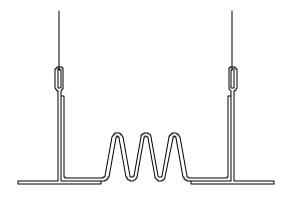


Figure 2

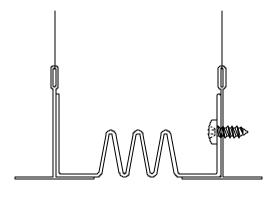


Figure 3

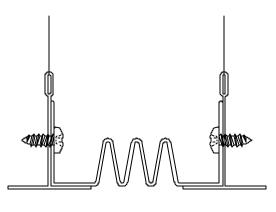


Figure 4