

Power Transmission Belts Engineering Guide

Habasit-Solutions in motion





Product liability, application considerations If the proper selection and application of Habasit products are <u>not</u> recommended by an authorized Habasit sales specialist, the selection and application of Habasit products, including the related area of product safety, are the responsibility of the customer. All indications / information are recommendations and believed to be reliable, but no representations, guarantees, or warranties of any kind are made as to their accuracy or suitability for particular applications. The data provided herein are based on laboratory work with small-scale test equipment, running at standard conditions, and do not necessarily match product performance in industrial use. New knowledge and experiences can lead to modifications and changes within a short time without prior notice. BECAUSE CONDITIONS OF USE ARE OUTSIDE OF HABASIT'S AND ITS AFFILIATED COMPANIES' CONTROL, WE CANNOT ASSUME ANY LIABILITY CONCERNING THE SUITABILITY AND PROCESS ABILITY OF THE PRODUCTS MENTIONED HEREIN. THIS ALSO APPLIES TO PROCESS RESULTS / OUTPUT / MANUFACTURING GOODS AS WELL AS

TO POSSIBLE DEFECTS, DAMAGES, CONSEQUENTIAL DAMAGES, AND FURTHER-REACHING CONSEQUENCES.

54 – 55

56

58

63

59 – 60

Contents

Introduction		Belt Storage and Handling
The history of flat belt power transmission	4	Storage conditions
The flat belt as a versatile machine element	6	
The flat belt compared to the V-belt drive	7	Symbols and units
Power transmission belts HabaDRIVE®		
The belt concept	8	Questionnaire: power transmission belts
Product key data	9	Questionnaire: tangential belt
Belt selection and calculation		The Habasit Solution
Gathering the drive data	10	
Selection of the optimal belt type	11	
Calculation by POWER-SeleCalc	12	
Technical belt data		
Belt length	13 – 15	
Tensile force for 1% elongation (k _{1%} value)	16	
Shaft load	17	
Nominal peripheral force	17	
Design guidelines		
General drive design	18	
Flat belt pulleys	19 – 22	
Bearings	23	
Tensioning device	24 – 25	
Special flat belt drives		
Tangential belt drive	26 – 33	
Spindle tape drive	34 - 36	
Live roller conveyor drive	37 – 40	
Multi pulley drive (power branching)	41	
Angular drive (mule drive)	42	
Half-cross drive	43 – 44	
Belt fabrication		
Flexproof joining system (finger joint)	45	
Thermofix joining system	46	
Belt Installation		
Safety regulations	47	
First-time installation	48 – 49	
Installation of strong belts; re-installation	50	
Belt maintenance and trouble-shooting		
Belt maintenance	51	
Trouble-shooting	52 – 53	

Introduction

The history of flat belt power transmission





Belts, ropes and chains have been used as traction devices for centuries. Babylonians and Assyrians used chains for the first time for water drawing machines. By 1430, endless rope haulage was used to drive grinding devices, and in the drawings of Leonardo da Vinci (1452 to 1519) link chains are shown.

During the course of industrialization, which started with the invention of the steam engine in the 18th century, the power transmission drive with flat belts made of chrome leather became the indispensable basis for industrial production. The power generated centrally by the steam engine was transmitted to individual production machines via long transmission shafts.

Leonhard Euler (mathematician, 1707–1783) authored the first theoretical essays on the traction mechanism. Based on these essays, the engineer Johann Albert Eytelwein (1764–1848) established his rope friction equation in 1808, an equation that is still indispensable for calculating frictionally engaged drives. At the same time, traction mechanisms continued to develop at a rapid pace.

Due to the introduction of the electric motor, its application as an individual drive, and the drawbacks of the leather belt (friction degradation; waning tension; vibration-stimulation, noise, and accident-prone mechanical joints), the power transmission belt was temporarily displaced.


The invention of polyamide in the Second World War presented an opportunity to Fernand Habegger (engineer and founder of Habasit AG Switzerland, 1921–1992) to create a flat belt with stable and predictable elastic characteristics which could be made endless by a glued joint. At that time, chrome leather was adhered to the polyamide traction layer as a friction cover.

Today's modern, fully synthetic, high-duty power transmission flat belts are equipped with a strong and resilient traction layer made of polyamide, polyester or aramide, and with wear-resistant, oil and grease resistant friction covers made of NBR-rubber (elastomer) that provide a high degree of consistent friction between belt and pulleys.

High efficiency synthetic flat belts are currently being used in all areas of power transmission technology due to their versatility, energy saving properties, and outstanding reliability.

The history of flat belt power transmission


Examples of power transmission flat belt applications:

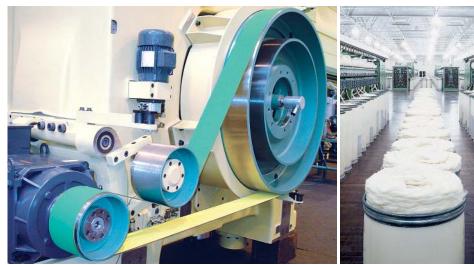

Flat belt driven 160 ton press




Tangential belt drives on spinning machines

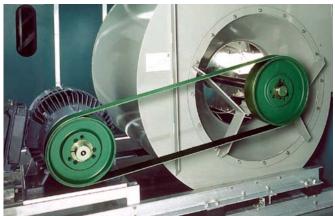

Flat belt driven industry fan



Flat belt driven live roller conveyor

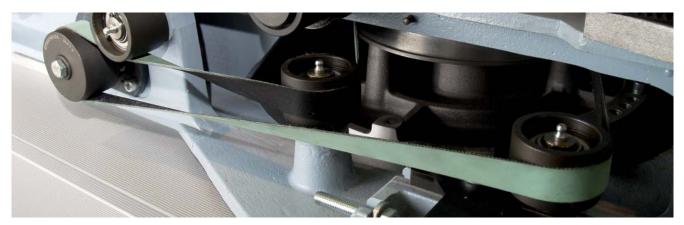



Twisted flat belt drive on a textile machine


The flat belt as a versatile machine element

The power transmission flat belt can be used in many forms of power transmission. Basically it is known as a two pulley drive (open drive), consisting of a driving pulley, a driven pulley and the belt.

However, the flat belt can be used in a great number of design variations. Here some typical examples:

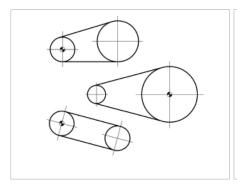


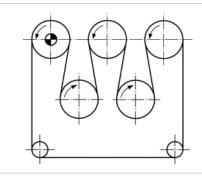

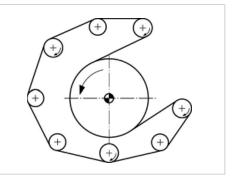


Two pulley drive (open drive)

Multi pulley drive (power branching)

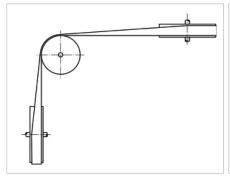





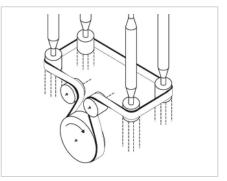

Angular drive

Spindle tape drive

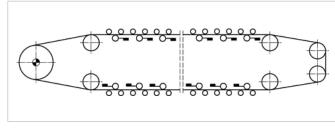



Tangential belt drive

Live roller conveyor drive

Details are available in the chapter on "Special flat belt drives".



The flat belt compared to the V-belt drive

Based on the fundamental technical differences, the flat belt drive offers considerable benefits compared to the V-belt drive.

The V-belt drive



Frictional engagement between the lateral wedge surfaces require a large cross-section and high stiffness of V-belts

→ High energy loss due to cyclic bending


The flat belt drive



7


Frictional engagement on the outer pulley surface require only a small cross-section and make flat belts very flexible

→ Negligible energy loss due to cyclic bending

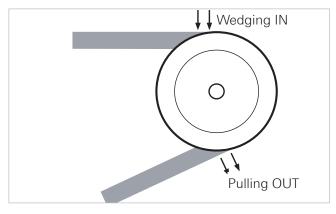

V-belts are wedging in grooves and pulling out from grooves

→ Energy loss and high wear

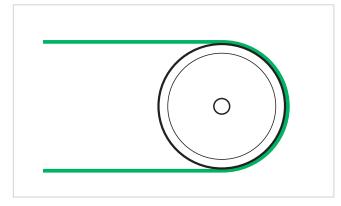

No grooves required, consequently no wedging in and pulling out from grooves

→ No energy loss and negligible wear

Consequential benefits of the flat belt drive:

- Higher efficiency, hence considerable energy savings
- Longer service life of belts and pulleys
- Cleaner operation, longer service life of air filters
- Longer service life means less down time and higher productivity
- Constant tension, no re-tension required, maintenance-free
- Smoother operation, lower noise generation

Power transmission belts HabaDRIVE®

The belt concept

Habasit has developed the HabaDRIVE® range of power transmission belts to allow you to choose the most suitable belt for your specific application.

The concept is based on the three traction layer materials used:

	Polyester power transmission	n belts	Polyamide power transmission	Aramide power transmission belts	
	The versatile b	elt	The hard-work	The sophisticated belt	
	Outstanding price- First choice of mac and end users wor	chine manufacturers	Well known for its reliability and long service life Robust and highly resilient, copes with intermittent overload and high temperatures (up to 100 °C)		Best choice for long belts Short take-up and highest accuracy for numbers of revolutions (rpm) and belt speed
	TC-	TCF-xxEL	S-	A-	TF-
	Low energy consumptionHighly flexibleSimple to joinReliable performance	 Low energy consumption Grooves enable high grip Highly flexible Simple to join 	ResilientShock resistant	ResilientShock resistantGrooves enable high grip	Low energy consumptionHighly flexibleSimple to joinHigh E-modulus
Application as/for					
Tangential drive	•	_	•	_	•
Multiple pulley drive	•	•	•	•	•
Live roller drive Double-sided power transmission	•	_	•	_	•
Design and materials	e.g.: TC-55ER	e.g.: TCF-20EL	e.g.: S-250H	e.g.: A-2	e.g.: TF-50
Friction cover (Material)	NBR-Rubber	NBR-Rubber	NBR-Rubber	NBR-Rubber	NBR-Rubber 1)
Traction layer (Material)	Polyester		Polyamide		Aramide
Reverse cover (Material)	NBR-Rubber	Hamid	NBR-Rubber	NBR-Rubber (protection cover)	NBR-Rubber 1)
Operating temperature admissible (continuous)	−20 °C / 70 °C −4 °F / 158 °F		−20 °C /100 °C −4 °F / 212 °F		-20 °C / 65 °C -4 °F / 149 °F
Fabrication/ joining system	Flexproof (adhesive-free)		Ther	Flexproof (adhesive-free)	

¹⁾ except TF-15H (Hamid)

Power transmission belts HabaDRIVE® **Product key data**

The table below lists the key data of the most commonly used HabaDRIVE® belts.

For detailed and up-to-date product data, contact www.habasit.com

	Belt group	Belt code	Double-sided power transmission, tangential drives	Thickness [mm]	Pulley diameter minimum with counter flection [mm]	Tensile force for 1% elongation per unit of width [N/mm] (k ₁ % after running in)	Nominal peripheral force per unit of width [N/mm]
Polyester	TC-	TC-10EF	•	1.8	25	5	10
power transmission		TC-20EF	•	2.0	25	10	21
belts		TC-20/25EF	•	2.5	50	11	23
		TC-35ER	•	2.5	50	18	38
		TC-35/30ER	•	3.0	50	18	38
		TC-35/35ER	•	3.5	70	18	38
		TC-55ER	•	3.0	70	25	53
	TCF-	TCF-20EL	0	2.6	80	10	21
		TCF-35EL	0	3.0	100	18	38
		TCF-55EL	0	3.5	150	25	53
		TCF-20H	•	1.5	25	10	20
		TCF-50H	•	2.0	60	24	48
Polyamide	S-	S-10/15	•	1.5	40	4.4	12
power transmission		S-18/20	•	2.0	60	8	22
belts		S-18/30	•	3.0	60	8	22
		S-33/40	•	4.0	125	13	37
		S-33/50	•	5.0	125	13	37
		S-140H	•	1.7	40	4.8	13
		S-141H	•	2.3	40	4.8	13
		S-250H	•	2.3	100	11	29
		S-250HR	•	2.6	100	11	29
		S-251H	•	3.0	100	11	29
		S-321H	•	3.2	125	13	35
		S-390H	•	3.2	160	14	38
		S-391H	•	4.0	160	14	38
	A-	A-2	0	2.7	60	7.5	22
		A-3	0	3.4	125	12	36
		A-4	0	5.0	300	21	63
		A-5	0	6.8	450	30	92
Aramide power transmission	TF-	TF-10	•	1.7	25	10	10
		TF-15	•	2.0	30	15	15
belts		TF-15H	•	1.5	30	15	15
		TF-22	•	2.4	60	22	22
		TF-33	•	3.0	100	33	33
		TF-50	•	3.9	125	50	50
		TF-75T TF-75TE	0	4.4	200	75	75

ApplicableO Not applicable

All data are approximate values under standard climatic conditions: 23 °C/73 °F, 50% relative humidity (DIN 50005/ISO 554), and are based on the Habasit master joining method.

Belt selection and calculation

Drive data

In order to guarantee problem-free running and to benefit from the features of a power transmission belt, the following three factors must be defined:

- Belt type
- Belt width
- Initial elongation

If one of the three factors changes, the belt must be re-calculated.

The professional specification of power transmission belts comprises the following steps:

- 1. Gathering the drive data
- 2. Selection of the optimal belt type
- 3. Calculation of the required belt dimensions



In order to select the optimal belt type and to calculate the required belt dimensions it is crucial to have exact information on the application, the drive data and the operating conditions.

For the calculation of a common two-pulley power transmission belt the following data are required:

 P_{M} = motor power or power to be transmitted [kW] n_{A} = number of revolutions of driving pulley [1/min]

 n_2 = number of revolutions of driven pulley [1/min]

d₁ = diameter of driving pulley [mm]
 d₂ = diameter of driven pulley [mm]

c = center distance [mm]


Please use the **Questionnaires** (see Appendix). These should be copied, completed and forwarded to the person responsible for belt selection and calculation.


Selection of the optimal belt type

The optimal belt type can be determined by reference to the **Belt selection chart** on the following page.


If the Habasit POWER-SeleCalc program is available, use the easy to handle Belt Selector in order to select the optimal belt type.

For further support please contact your Habasit partner.

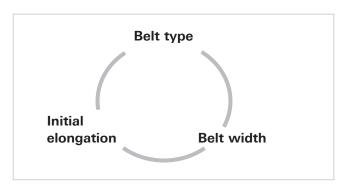

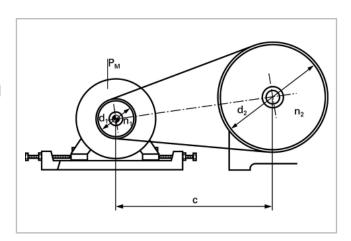


Belt selection and calculation Selection of the optimal belt type

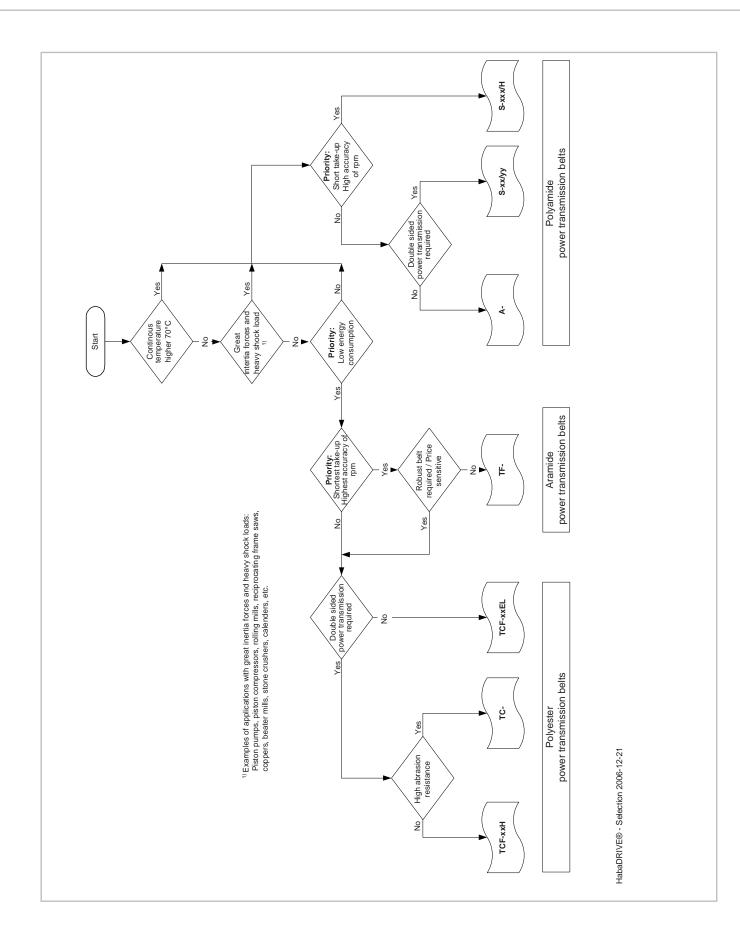

Belt selection and calculation Calculation by POWER-SeleCalc

The Habasit POWER-SeleCalc program enables the user to perform a belt selection in terms of machine and environmental influences, and to calculate the technical drive data such as belt width, initial elongation, static and dynamic shaft load, effective belt length, etc. of two pulley drives, drives with tension pulley, and tangential belt drives, in a quick and easy way.

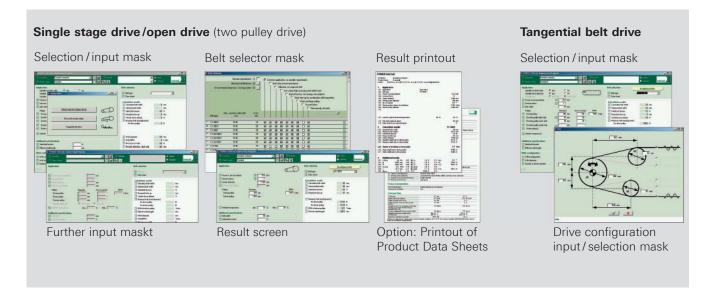

The Habasit POWER-SeleCalc program can be ordered free of charge via our website **www.habasit.com**, by e-mail **info@habasit.com**, or by contacting your Habasit partner.

Belt length

In belting technology, there are a few special expressions and technical data which need a brief explanation.

Belt length

The length of power transmission flat belts can be expressed in three ways:


- Geometric belt length (Ig)
- Effective belt length (l_{sff})
- Shortened belt length (Is)

For common two pulley drives, the difference between geometric and effective belt length is negligible. However, in specific applications, e.g. short centre distance and/or relatively thick belts, limited take-up etc., greater calculation accuracy is necessary.

Please note that the theoretical considerations below are automatically taken into consideration when using the POWER-SeleCalc calculation program.

Geometric belt length (Ig)

The geometric belt length means the inner circumference of an <u>un-tensioned</u> belt drive on the assumption that the belt is infinitely thin. The belt thickness and the position of the neutral layer are not considered.

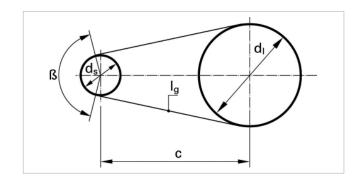

Exact formula for the calculation of the geometric belt length of a two pulley drive:

$$I_g = 2c \cdot sin\left(\frac{\beta}{2}\right) + \frac{\pi}{2}\left[d_s + d_l + \frac{\left(d_l - d_s\right)\left(180 - \beta\right)}{180}\right] [mm]$$

c = center distance [mm]

d_s = diameter of small pulley [mm]


d = diameter of large pulley [mm]

 β = arc of contact on small pulley [°]

Belt length

Effective belt length (I_{eff})

The effective belt length is the length of the neutral layer of an **un-tensioned** belt. It is identical with the fabrication length.

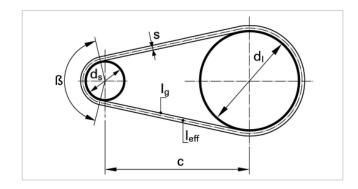

Exact formula for calculation of the effective belt length of a two pulley drive:

$$I_{eff} = 2c \cdot sin\left(\frac{\beta}{2}\right) + \frac{\pi}{2}\left[d_s + d_l + 4s + \frac{(d_l - d_s)(180 - \beta)}{180}\right] \text{ [mm]}$$

c = center distance [mm]


d_s = diameter of small pulley [mm]

d = diameter of large pulley [mm]

s = position of the neutral layer measured from running side [mm]

 β = arc of contact on small pulley [°]

In machines with **defined take-up displacement**, where the belt is elongated to a fixed end position, usually the center distance for the <u>tensioned</u> belt (c.) is known.

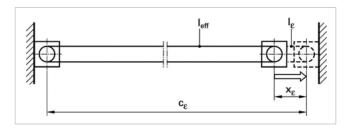

The effective length (fabrication length) of the un-tensioned belt has to be calculated accordingly:

$$I_{eff} = 2(c_{\varepsilon} - x_{\varepsilon}) \cdot \sin\left(\frac{\beta}{2}\right) + \frac{\pi}{2} \left[d_s + d_l + 4s + \frac{(d_l - d_s)(180 - \beta)}{180}\right] \quad [mm]$$

c_s = center distance of tensioned belt [mm]

x_s = take-up displacement [mm]

Formula for the calculation of the take-up displacement (x_s) :

$$x_{\epsilon} = \frac{I_{\text{eff}} \cdot \epsilon_{\text{o}}}{2 \cdot 100}$$


$$I_{\text{eff}} = \text{effective length of the un-tensioned belt [mm]}$$

$$\epsilon_{\text{o}} = \text{initial elongation [\%]}$$

Belt length

Shortened belt length (I_s)

In applications without any tensioning device at all, the belt must be fabricated shorter by the amount equal to the required initial elongation.

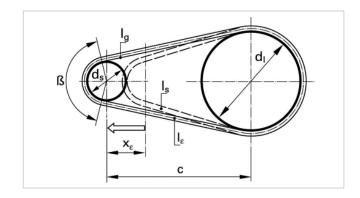

The basic formula for the calculation of the shortened belt length (I_s), that is the fabrication length, is:

$$I_s = \frac{I_{\epsilon}}{1 + \frac{\epsilon_o}{100}} = \frac{100 \cdot I_{\epsilon}}{100 + \epsilon_o}$$
 [mm]

l_s = length of the tensioned belt [mm]

 ε_{0} = initial elongation [%]

Usually the geometric belt length (I_g), this means the inner circumference of the tensioned belt, is known. The position of the neutral layer (s) has therefore to be considered in the formula for the calculation of the shortened belt length:

$$I_s = \frac{100 \cdot \left[I_g + (2s \cdot \pi)\right]}{100 + \varepsilon_o}$$
 [mm]

Note: If the drive is equipped with a tensioning device, but the available take-up displacement is not sufficient to obtain the effectively calculated take-up displacement (x_{ϵ}) , the belt may be **partially shortened**.

Tensile force for 1% elongation (k_{1%} value)

The k_{1%} value indicates the tensile force per unit of belt width that is required to elongate it by 1% [N/mm]


Tensile force for 1% elongation after running-in $(k_{1\%a.r.i.})$

The correlation of force and elongation of synthetic material is influenced by the elapsed time after stretching, temperature and humidity. While the influence of temperature and humidity is quite complex (and will not be further discussed here), the influence of time on force/elongation behavior after stretching synthetic material cannot be neglected.

In the following it is described what happens when a synthetic material, like a power transmission belt, is elongated:

To achieve elongation a certain tensile force (F) is required. At the end of the elongation the tensile force immediately starts to decrease, first considerably, later moderately, until the force remains constant. The explanation for this is a microscopic displacement of molecular chains against each other. This viscoelastic phenomenon is called "relaxation".

Habasit considers the relaxation of power transmission belts by measuring the $k_{1\%}$ value after the relaxation phase or running-in time period.

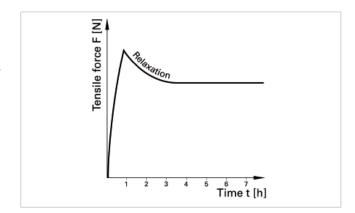

This is why the value is called $k_{1\%}$ after running-in:

 $k_{10/4 \text{ ar}} = \text{tensile force for 1\% elongation per unit of width after running-in [N/mm]}$

The $k_{1\% \text{ a.r.i.}}$ is the decisive value for calculating the required belt width and the resulting shaft load after belt relaxation.


Shaft load - Nominal peripheral force

Shaft load

The described relaxation phenomena directly influence the shaft load.

If a power transmission belt is tensioned to the required initial elongation, the resulting shaft load will be at maximum ($F_{\rm Wpeak}$) immediately after elongation.

Where the belt is tensioned to a **constant elongation**, the shaft load decreases over the course of time. While the shaft load reduction is relatively large at first (the main part of the belt relaxation takes place within the first 2-3 hours after tensioning), it gradually tapers off until the shaft load remains constant (F_{wari}).

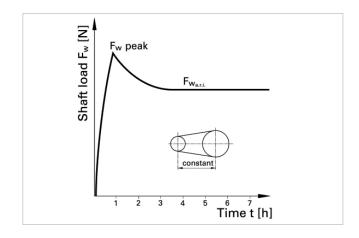


The highest shaft load (F_{Wpeak}), appearing immediately after elongation, is about 40% to 50% higher than the shaft load after relaxation or after running-in ($F_{Wa.r.i.}$), depending on belt type and elongation conditions.

This fact must be considered when specifying shafts and bearings (see the chapter on "Design guidelines, bearings"), in the engineering of the drive frame, as well as during belt installation (see the chapter on "Belt installation").

Habasit's shaft load indications refer to the situation after relaxation, after running-in respectively.

We distinguish between the static shaft load (at standstill, F_{ws}) and the dynamic shaft load (in operaion F_{wd}), where centrifugal forces are considered.

Note: Where the belt is tensioned by a **constant force**, mechanical force (hydraulic or pneumatic cylinder or spring) or by force of gravity, the shaft load remains constant, but the belt changes its length. This means it elongates after tensioning due to relaxation, until the length remains constant.

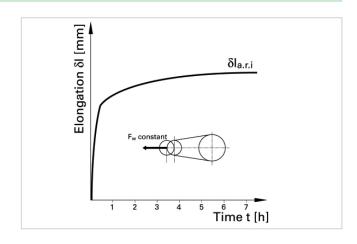

Nominal peripheral force

The nominal peripheral force (F'_{UN}) indicates the force which can be transferred from the circumference of the drive pulley to the belt in Newton per unit of belt width [N/mm].

The F'_{UN} is the product of the $k_{1\%}$ after running-in ($k_{1\%a.r.i.}$) and the admissible elongation (ϵ_{adm}) of the belt, considering the coefficient of friction (μ) between belt and steel pulley.

The admissible elongation is determined by extensive tests for each belt type.


Note: The nominal peripheral force indicates the effective strength of a power transmission flat belt.

General drive design

Flat belt drives transmit power by friction. This fact means that the belt needs to be pressed onto the periphery of the pulley with a certain force. This force creates a shaft load which has to be borne by the shafts and bearings. Finally, the installation has to take up all forces without appreciable distortion. This leads to the following conclusions:

- The drive structure must be rigid and distortionresistant, i.e. machine frame, shaft bearings and motor mounting must be sized in accordance with the maximum developed tension forces and related shaft loads.
- All shaft and roller axes coming into contact with the belt must be perpendicular to the belt running axis.
- The installation must be grounded (electrically connected with the earth potential) in order to prevent an electrostatic charge. Exercise caution with synthetic-supported bearings or mobile installations on rubber wheels!



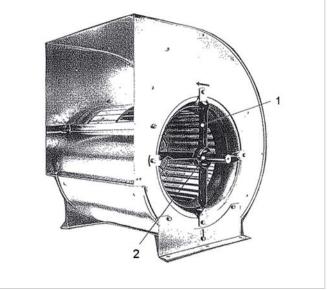

a) Example of an appropriate, distortion-resistant bearing support

- b) Example of an inappropriate design
- 1 Weak and non-distortion-resistant design of the bearing support
- 2 Bearings supported by rubber rings (mechanically weak and cause electrostatic charge)

Flat belt pulleys

Pulley material

For peripheral speeds of $v \le 35$ m/s, it is preferable to choose **cast iron** pulleys. For v > 35 m/s, use steel pulleys or cast iron pulleys of higher strength. The above data refer to solid pulleys and center disc pulleys.

Injection-molded pulleys of **duroplastic** material are becoming common for weight and cost reasons. In general it is not recommended to use duroplastic pulleys for driving or driven pulleys due to the low heat conductivity of synthetic material which can result in inadmissible temperatures of the pulleys and belt.

Aluminum pulleys and rollers have to be **anodized**. However, premature wear and "blackening" of the pulleys has been observed.

Pulley dimensions

Pulley diameter and width depends on the requirements and geometric data of the application.

Pulley width

The width of the pulleys should be at least 1.05 to 1.1 times belt width b_a.

Pulley diameter

The required transmission ratio for the application must be observed.

The minimum pulley diameter according to the flat belt product data sheet must be respected.

The maximum diameter is usually limited by the size of the installation, often by the belt safety guard.

General rule: The larger the pulley diameters, the higher the belt speed and, consequentially, the lower the shaft load.

Basically, pulleys may have any dimensions. Whenever possible, however, pulleys with a standard diameter according to ISO 22 should be used.

Pulley crown

To prevent the flat belts from running off, at least one of the pulleys has to be crowned, preferably the larger pulley, or the pulley with the largest arc of contact.

It is recommended that the shape of the profile should be a regular, symmetrical curve. Do not use conical or cylindrical-conical shaped pulleys, and avoid sharp edges under all circumstances.



Commercial pulleys are usually crowned according to ISO 22. If Habasit flat belts are used, the height of the crown can be reduced because of their superior lateral rigidity and subsequent excellent tracking properties. Recommended crown heights see table on the following page.

Flat belt pulleys

Recommended crown height:

Pulley diameter acc. to ISO 22	Recommended crown height (h) [mm]					Crown height acc. to ISO 22 Not recommended [mm]		
		Pulley width b acc. to ISO 22 [mm]				Pulley width [mm]		
[mm]	20, 25, 32, 40, 50	63, 71, 80, 90, 100	112, 125, 140, 160	180, 200, 244, 250	280, 315, 355, 400	b ≤ 250	b ≥ 280	
40								
50								
63								
71		0.0				0.0	0.0	
80	0.3	0.3	0.0			0.3	0.3	
90			0.3					
100								
112				0.4				
125			0.4	0.4		0.4	0.4	
140			0.4		0.5	0.4	0.4	
160		0.4			0.5	0.5	0.5	
180				0.5		0.5	0.5	
200	0.4					0.6		
224	-		0.5		-	0.6	0.6	
250	-							
280		0.5		0.6	0.7	0.8	8.0	
315				-				
355	0.5							
400			0.6		0.8	1.0	1.0	
450				0.7				
500		0.6						
560					0.9			
630	0.6		0.7	0.7	0.8		1.2	1.2
710								
800		0.7			1.0			
900			0.8	0.9		1.2	1.5	
1000								
1120	0.7				1.1			
1250			_			1.5	2.0	
1400	-	0.8	0.9	1.0				
1600					1.2			
1800	0.8					1.8	2.5	
2000	3.0	0.8	1.0	1.1	1.3			

For recommendations regarding pulley diameters > 2000 mm, please contact your Habasit partner.

Crown heights greater than indicated in the table above may result in a loss of guiding effect, especially with laterally stiff belts.


Flat belt pulleys

Correlation of crown (h) and manufacturing radius (R)

$$R = \frac{h}{2} + \frac{b^2}{8 h}$$
 [mm]

$$h = \frac{b}{2} tg \left(\frac{arc sin \left(\frac{b}{2R} \right)}{2} \right)$$
 [mm]

The higher the arc of contact, the better the tracking effect of crowned pulleys.

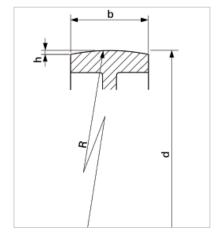

Pulley running surface

Clean and smooth running surfaces increase the efficiency and service life of power transmission belts.

The running surface of driving pulleys must not be too smooth, due to the risk of stick-slip and noise creation, and not too rough (no knurled surfaces!) as this can cause excessive belt wear and premature belt failure.

Habasit's recommendation for the roughness of the running surface:

$R_a = 6.3$ to 3.2 µm (attainable by normal tooling on a lathe)

R_a = arithmetical mean deviation of the profile according to ISO 4287

For small pulley and roller diameters (approx. 200 mm) a smoother surface is possible, but not necessary, e.g. $R_a = 1.6 \mu m$ (only attainable on a precision lathe with high accuracy).

Avoid smoother surface roughness than $R_a = 3.2 \mu m$ on large and wide driving and driven pulleys due to the risk of stick-slip.

The indication "R_z" (ten point height) is deleted as an ISO parameter, as well as the indication "N", the roughness grade according to ISO 1302.

Pulley balance quality

For peripheral speeds up to v = 30 m/s and diameter d = 355 mm, pulleys are usually balanced in one plane, quality grade G 1.6, according to ISO 1940 (VDI 2060).

For higher peripheral speeds of v > 30 m/s and diameter d > 355 mm, pulleys are best dynamically balanced in two planes.


Flat belt pulleys

Flanged pulleys

Avoid flanged pulleys and flanged rollers because there is a risk of belt damage if the belt runs onto the flanges.

In exceptional cases, e.g. where long tangential belts have to be kept in the right position during installation, flanged pressure rollers may be acceptable. However, the belt should not touch the flanges during normal operation.

The width of the running surface should be 20% to 30% wider than the belt width (b_o). The flange height (h_i) should be about the same as the belt thickness and should be undercut to minimize the contact area with the belt.

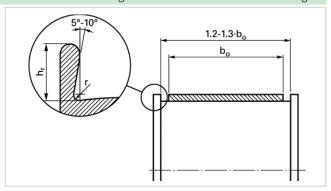

Bearings

Bearing selection and specification

Selection and specification of bearings according to the manufacturers' guidelines.

Bearing load

It is a prerequisite for the determination of the bearing load to know the **shaft load** created by the tensioned belt (see the chapter on "Technical belt data, Shaft load").

When using the POWER-SeleCalc calculation program, both the static shaft load (F_{ws}) and the dynamic shaft load (F_{wd}), are determined while calculating the belt.

Please consider when specifying the bearings that the highest shaft load (F_{wpeak}), appearing for a short time immediately after elongation, is about 40% to 50% higher than the indicated shaft load F_{ws} or F_{wd} .

Note: In rare cases, e.g. if a very strong belt is unusually fast elongated, the shaft load appearing for a short time immediately after the first elongation can be up to 100% higher than the indicated shaft load in the POWER-SeleCalc calculation program.

If the basis for the calculation of the bearing load, the shaft load (F_w) , is known, the actual bearing load can be calculated as follows:

• One-side bearing arrangement

Load on bearing
$$A = F_W \cdot \frac{c_1 - c_2}{c_2}$$
 [N]


Load on bearing B =
$$F_W \cdot \frac{C_1}{C_2}$$
 [N]


Two-side bearing arrangement

Load on bearing
$$A = F_W \cdot \frac{c_2 - c_1}{c_2}$$
 [N]

Load on bearing B =
$$F_W \cdot \frac{C_1}{C_2}$$
 [N]

It goes without saying that the resulting bearing load must not exceed the admissible bearing load indicated in the bearing data sheet.

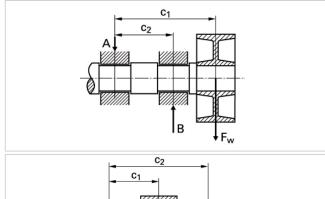

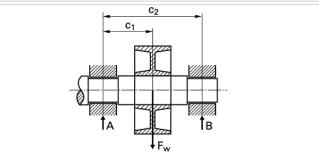

If the calculated maximal bearing load that appears is close to the limit or exceeds the admissible load of the bearings used, the following measures can be taken:

- If possible increase pulley diameters in order to reduce the shaft load
- Choose a belt tension system using mechanical force (hydraulic or pneumatic cylinder or spring) or force of gravity (constant shaft load).
- Tension the belt in two steps when installing (see the chapter on "Belt installation, two step tensioning").

Note: Contrary to the wide-spread opinion, the shaft load and the resulting bearing load of power transmission flat belts are not higher, but about the same as in other non-positive driving elements such as V-belts and poly-V-belts, provided that they are installed properly.


Tensioning device

Correct and sufficient initial elongation is a pre-requisite for trouble-free operation of power transmission flat belts. The calculated initial elongation (ϵ) must be observed!

One has to distinguish between drive systems with variable centre distance, systems with defined take-up, systems with tensioning pulley, and systems with no tensioning device.

Systems with variable centre distance

The most common system for two pulley drives. Usually the motor is mounted on an adjustable base. The belt is tensioned by moving the base. After tensioning, the base is fixed with screws.

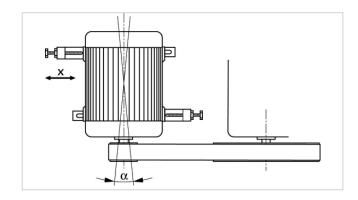


Sufficient tensioning length in the direction of x must be provided corresponding to installation and belt length tolerance due to the influences of temperature and humidity on the belt length (namely the polyamide traction layer) etc. Further-more, the shaft has to be adjusted square to the belt running axis by adjusting the α angle.

Recommended take-up of the tensioning device:

$$X_r \cong 3 \cdot X_{\epsilon\epsilon}$$

- ① Position of the pulley with un-tensioned belt
- ② Position of the pulley after tensioning to initial elongation ε_{\circ}
- x_e Effective required take-up displacement [mm]
- x_r Recommended take-up of the tensioning device [mm]

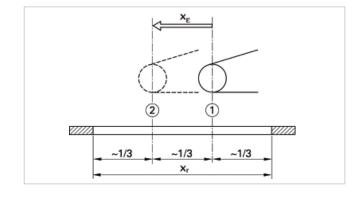

Systems with defined take-up

Due to the well-defined take-up displacement (the belt is elongated to a fixed end position), improper adjustment of the required initial elongation during installation can be avoided.


l_{eff} = effective length (fabrication length) of the un-tensioned belt [mm]

= length of tensioned belt [mm]

c_s = center distance of tensioned belt [mm]

x = take-up displacement [mm]

Machines with defined take-up displacement appear to be an intelligent and user-friendly solution. However, the system has some drawbacks:

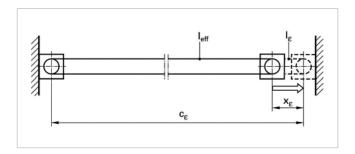

Tensioning device

1. The effective belt length (fabrication length, I_{eff}) must be produced with a high level of accuracy. Small differences in length may cause considerable deviations in belt tension. This is especially true with a short belt length and/or belts with a high modulus of elasticity (high k_{1%} value).

Observing the exact belt fabrication length is highly important with this system! Recommended fabrication length tolerance: **0/-** yy mm.

Deviations in belt length cannot be compensated for on such a machine design. Re-tensioning is impossible. Problems including slip and premature belt wear result if the belt is too long.

- 2. Influences on the belt dimension due to temperature or humidity changes (polyamide belts) cannot be compensated for and may lead to an increase or decrease in the shaft load.
- 3. Tensioning can be done by a hand-driven spindle, which is quite a slow process that allows the belt to relax. Other methods, such as a knee-lever or pneumatic or hydraulic cylinder, tension the belt very fast, causing high belt stress and high shaft load before the belt relaxes, leading to excessive bearing and shaft load.

Abrupt tensioning, e.g. provided by hydraulic or pneumatic cylinders, may damage aramide belts (TF-range).

4 This kind of tensioning device is often designed for one particular belt type. Changing later to another belt type can lead to problems.

Systems with tensioning pulley

In this system, the center distance between the driving and the driven pulley is fixed. A tensioning pulley, preferably placed on the slack side (less tensioning forces required), pushes the belt and thus provides the required initial elongation. The required pushing force can be provided by a hydraulic or pneumatic cylinder, spring load, or by a gravity system.

The Habasit POWER-SeleCalc calculation program automatically determines the shaft load of all three pulleys and the required take-up.

Effective bell langit: son

Systems without tensioning device

Old drive designs sometimes have no tensioning device at all. In this case the belt has to be forced onto the pulleys by hand.

In systems without tensioning device the required initial elongation (ε_{o}) is determined by reducing the length to the shortened belt length (l_{o}), which is the fabrication length.

It is important to pay attention when installing the belt. Twisting and excessive lateral forces to the belt, etc. must be avoided.

Aramide belts (TF-range) are not recommended for use in such applications due to the risk of damaging the traction layer during installation.

Tangential belt drive

Overview

In addition to the classical two pulley drive, there are many different drive applications where the flat power transmission belt is the ideal solution.

- The following drive systems are presented in this chapter:
- Tangential belt drive
- Spindle tape drive
- Live roller drive
- Multi pulley drive (power branching)
- Mule drive
- Half-cross drive

Introduction to the tangential belt drive

The tangential belt drive is mainly used in the tex tile industry for driving spindles on ring spinning, open-end spinning, twisting and texturizing machines.

In principle, this is a tangential drive where the power is not transmitted to a single driven pulley but to an array of spindles or rotors. The spindles (rotors) are arranged in a linear manner with the belt pressed against them by pressure rollers to drive them tangentially.


This is why it is referred to as a "tangential belt drive".


Tangential belt drives may have various arrangments, depending on the machine manufacturer, type and size of machines, etc. The most important systems are described in the following, without claim to completeness. The advantages and weaknesses described are general statements, which can be compensated for by special machine designs or special belt types, depending on the situation.


Tangential belt drive

Single belt/single drive system

The tangential belt is driven on one end of the machine by a drive pulley and on the other end diverted by one or two rollers to return to the drive. The belt is normally driven on its inner side; on the outer side it drives hundreds of spindles or rotors.

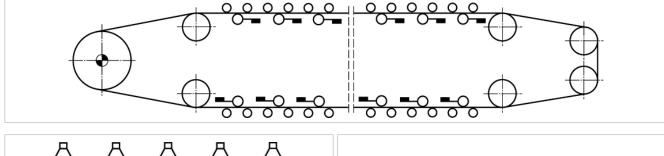





Ring spinning

Open-end spinning

Advantages of the system

- Simple drive principle
- Large pulleys, few flections, no counter flection
 → long belt service life
- Easy belt installation

Weaknesses of the system


- Strong belts required, thus
 - → high shaft and bearing load
 - → heavy machine design
 - → long take-up displacement 1)
- Significant deviation of spindle rpm from first to last spindle ¹⁾
- Demanding belt tracking
- Efficiency not optimal
- If belt fails all spindles (rotors) are out of production

¹⁾ Can be compensated by using TF- belts with aramide traction layers

Tangential belt drive

Single belt/dual drive system

The tangential belt is driven by two motors placed at both ends of the machine. This reduces the power to be transmitted per motor and belt to 50% compared with the "one-belt-one-drive" system.

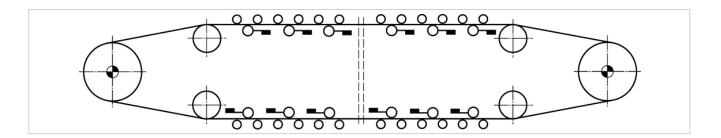

Advantages of the system

- Lower strength belts required compared with the
 - → single belt / single drive system, thus
 - → smaller shaft and bearing load
 - → lighter machine design
- Automatic speed control and adjustment of variable speed motors is less demanding compared with "multi drive" systems
- Large pulleys, few flections, no counter flexion
 → long belt service life
- Easy belt installation

Weaknesses of the system


- Deviation of spindle rpm from first to last spindle conderable ¹⁾
- Demanding belt tracking
- Greater efficiency compared with the "single belt / single drive", but still not optimal
- If belt fails, all spindles (rotors) are out of production

¹⁾ Can be compensated by using TF- belts with aramide traction layers

Tangential belt drive

Single belt/multi drive system

With the multi motor drive, the tangential belt is driven by several motors arranged in regular intervals around the machine. As a consequence, lower strength tangential belts can be used. Machines with such a group drive have been produced to 60 meters in length, containing as many as 1500 spindles.




The number of revolutions of the individual motors must be perfectly synchronized and the diameter of the driving pulleys have to be in a narrow tolerance, otherwise the belt assumes the stresses of equalizing the speed, resulting in premature belt wear and reduced belt service life.

Advantages of the system	Weaknesses of the system
 Lower strength belts required compared with the single belt / single drive system, thus → smaller shaft and bearing load → lighter machine design High efficiency, low energy consumption Minimal difference in spindle rpm 	 Automatic speed control and adjustment of variable speed motors is → technically demanding → expensive → sensitive Premature belt wear, reduced service life and irregular yarn quality result if motors are not perfectly synchronized If belt fails, all spindles (rotors) are out of production Reduced service life due too small pulleys, a high number of reverse bending cycles and because only one side of the belt is used

Tangential belt drive

Dual belt drive system

Two separately-driven tangential belts, one located on each side of the machine, each drives half of all the spindles, thus reducing the power to be transmitted per belt to 50%. This permits the use of lower strength belts and lower belt tension.

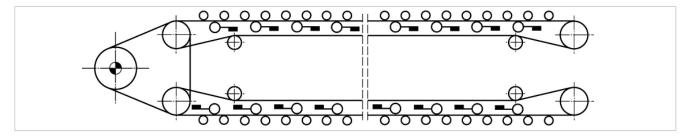

Advantages of the system

- Lower strength belts required compared with the single belt / single drive system, thus
 - → smaller shaft and bearing load
 - → lighter machine design
- Relatively large pulleys, few flections and counter flexions → long belt service life
- If one belt fails, production can still run at 50% until repair is made

Weaknesses of the system


- Different initial elongation and running conditions for the two belts
- Difference in spindle rpm between left and right side (due to creep of the main drive)
- Demanding belt tracking
- Demanding belt specification
- Additional time required to replace all belts

¹⁾ Can be reduced by using TF- belts with aramide traction layers

Tangential belt drive

Section (segmented) drive system

With the section drive (also called segmented or group drive) a single motor drives a central shaft, which is oriented along the length of the machine. Driving pulleys are fixed on the shaft and drive multiple tangential belts. Each tangential belt drives a small group of spindles, e.g. 24 spindles on each side.

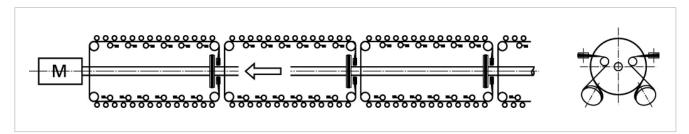

Advantages of the system	Weaknesses of the system
Lower strength belts required	Extensive drive system
 Small difference in spindle rpm between left and right side of the machine High efficiency, low energy consumption 	 Small pulley diameters, high numbers of reverse bending cycles and belt twists → reducing belt service life
Time-saving belt installation of endless belts	Accurate belt length required due to defined take-up
If one belt fails, only limited loss to production until repair is made	

Tang Special flat belt drives Tangential belt drive ential belt drive

Technical requirements on tangential belts

The demands on tangential belts are many and may have different priority, depending on the type of application, machine type, belt speed, operating conditions, maintenance capabilities, etc.

Energy saving

Modern, flexible belts with a high modulus of elasticity, such as polyester fabric (TC-range) and aramide fabric (TF-range), can produce a high degree of efficiency and as a consequence, realize considerable savings in energy costs.

· Long service life, low down-time

This highly stressed machine element can still deliver a long service life provided that the belt is selected, installed and maintained according to these guidelines.

Easy, fast and reliable joining method

If belts have to be joined on the machine, an easy joining method – producing a uniform, reliable splice – is important in order to optimize up-time. The joint (splice) must not lead to belt vibrations.

Suitable and constant force/elongation-ratio

An optimal force/elongation-ratio (E-modulus, k1%-value), which remains constant throughout the belt's service life ensures highly consistent and superior yarn quality, low belt maintenance, and long belt life.

High and constant coefficient of friction

Tangential belts must transmit the necessary peripheral force without slipping under all operating conditions. This requires a high coefficient of friction of the cover that will remain constant during the entire service life. The normal influence of humidity, batching oil, fibers and other debris must not lead to slipping problems.

Vibration-free running

For reasons of noise control and yarn quality, as well as with regard to achieving a high service life of the tangential belt, spindle bearings and other machine parts, the belt should provide quiet, vibration-free operation, particularly at the highest running speed. Uniform belt thickness and a homogeneous joining area are, therefore, important belt features.

• Minimum run-up time

After splicing of the thread, the spindle (rotor) brake is released and the spindle (rotor) is again accelerated to its normal operating speed. The run-up time has to be within a time frame of few seconds. This is attainable with a high E-modulus (k1%-value) and a high and consistent friction tangential belt.

Perfect tracking, no maintenance

To ensure optimum, maintenance-free belt performance and service life, tangential belts must not run off the pulleys and/or whirls during operation. Therefore, proper component alignment and belt tension must be ensured

Short take-up

The considerable length of today's textile machines should not be additionally increased by the need for a long take-up mechanism. A high E-modulus (k1%-value) of the tangential belt is, therefore, desirable.

· High accuracy of spindle revolutions

Consistent yarn quality is a function of spindle speed accuracy. A high E-modulus (k1%-value) produces less creep in the belt drive, which means a smaller speed difference between the first and the last spindle, thereby improving yarn quality.

Resistant to chemicals

Belts must be resistant to typical lubricating chemicals (oil, fat, batching oil, avivage) to ensure consistent performance and optimum service.

6026BRO.PTB-en0612HQR

Tangential belt drive

Recommended product range

For new machines with a high focus on low energy consumption:

• TC-range

For highly demanding applications regarding shortest take-up, lowest energy consumption and highest accuracy of rpm:

• TF-range

For older machines, flanged pulleys and very warm environments:

• S-range

Belt calculation

If the machine data is known (complete the questionnaire in the appendix), the required belt data can be calculated exactly by means of the POWER-SeleCalc program.

Note: The calculation of tangential belts is quite demanding, even with the POWER-SeleCalc program, and specific know-how is required. In case of doubt we recommend to contact your Habasit partner to perform or check your calculation.

Design recommendations

The general statements in the chapter "Design guidelines" should be observed. Use crowned pulleys and rollers, and avoid flanged pulleys! It is always good to contact your Habasit partner for detailed support.


Installation and maintenance

The general statements in these chapters (pages 47 - 53) should be observed.

Spindle tape drive

Introduction

The spindle drive is an alternative to the tangential belt. It is used in the textile industry for driving spindles on ring spinning and twisting machines. The spindle tape touches the whirls with an arc of contact of at least 90°.

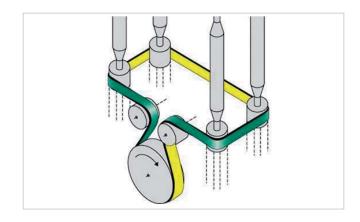

Technical requirements on spindle tapes

High quality spindle tapes must have specific properties such as:

Energy saving

Modern, flexible spindle tapes have a high degree of efficiency. As a consequence, considerable energy cost savings can be realized.

· Easy, fast and reliable joining method

Considering that hundreds of spindle tapes per machine have to be made endless, an easy (preferably adhesive-free) and reliable joining method is required.

Highest spindle revolution (rpm)

Spindle tapes for modern spinning machines must be designed for spindle speeds up to 20,000 rpm and higher.

High accuracy of spindle revolution

A high modulus of elasticity produces less creep, which means that a smaller speed difference results between the first and the last spindle, which in turn improves yarn quality.

· No fiber / fluff accumulation

Spindle tapes must have sharp, clean, smooth edges, and must not accumulate static charges, so that no fibers or debris is attracted and sticks to the tape surface, thus reducing friction.

· Long service life, low down-time

A long service life of this highly stressed machine element can be expected.

• Low speed loss of running spindles when neighbor spindles are stopped

When a spindle is braked, it is expected that the adjacent spindles continue to run with negligible loss of speed (objective: uniform yarn quality).

High temperature resistance

At thread breakage, the spindle will be stopped by a mechanical break. The spindle tape, however, continues to run on the stopped whirl. The resulting temperatures of up to 60 °C must be overcome by the spindle tape without any damage.

• Minimum run-up time

After automatic or manual splicing of the thread, the spindle brake is released and the spindle is again accelerated to its nominal number of revolutions. The run-up time must be within a time frame of a few seconds.

Special flat belt drives Spindle tape drive

Available spindle tapes products

W-8 The best energy-saving spindle tape in the world (adhesive-free joint)

W-16 Stronger version of W-8 (adhesive-free joint)

TS-5 The most popular spindle tape in the world (polyamide type); excellent heat resistance, very

robust, long lasting

TS-55 Stronger alternative to TS-5

TS-10 Suitable when lubricants are present; not applicable for applications requiring the braking

(stopping) of spindles.

HS-5/HS-55 Economical alternatives to TS-5 and TS-55 (polyamide type)

Belt selection and calculation aids

Belt selection is according to the requirements of the machine and customer preferences. Contact your Habasit partner to provide calculations for special requests.

Design recommendations

The general statements in the chapter "Design guidelines" should be observed.

Installation and maintenance

The general statements in these chapters and the following additional statement must be observed.

All spindle tapes have two different friction covers. In order to ensure trouble-free, efficient performance of the tapes, it is essential to follow the following rules during installation:


- High coefficient of friction on driving pulley
- Low coefficient of friction on spindle whirl

Special flat belt drives Spindle tape drive


Correlation of material color and coefficent of friction:

Spindle tape type	High coefficient of friction on driving pulley side	Low coefficient of friction on whirl side
W-8, W-16	Black	Green
TS-5, TS-55, TS-10	Green	Yellow
HS-5, HS-55	Green	Beige

Correct installation of W-8 and W-16:

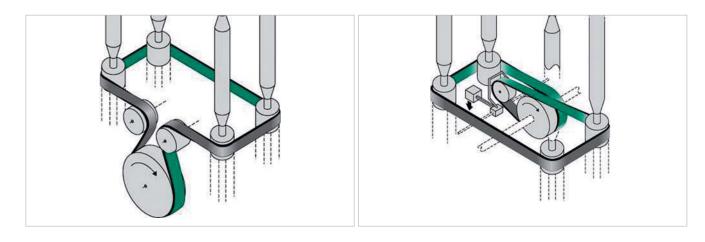


Correct installation of TS-5 (HS-5), TS-55 (HS-55) and TS-10:

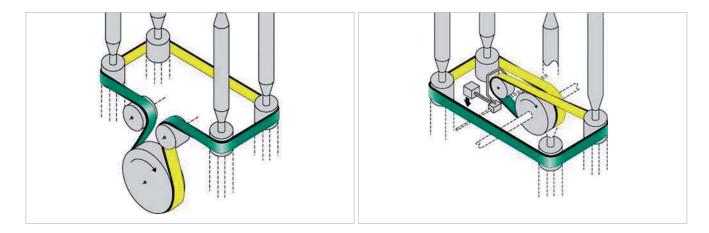

Live roller conveyor drive


Introduction


Live roller conveyors (LRC) play an important role in modern materials handling engineering. Piece goods in a broad range of sizes can be carried over shorter or longer distances, in a straight line as well as through curves, with relatively low energy consumption. Transport usually takes place horizontally, although slight inclines are also possible.

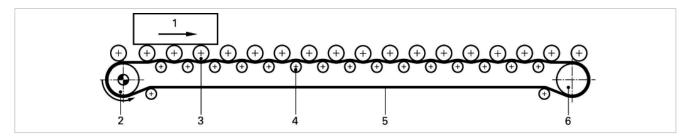

- 1 Transported piece good
- 2 Driving pulley
- 3 Carrying rollers
- 4 Pressure rollers
- 5 Driving belt
- 6 Return pulley


The goods are transported by a roller conveyor. The rollers are driven by a strong and therefore relatively narrow flat belt. The power transmission between belt and rollers is accomplished by the use of pressure rollers. The transported goods move in the opposite direction to that of the drive belt.

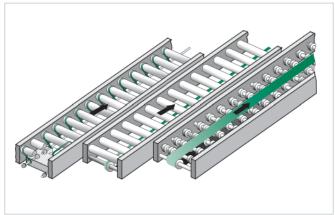

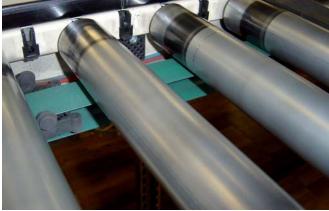

Live roller conveyor drive

Flat belt driven LRC are particularly well suited for goods accumulation and subsequent singulation processes. For the selection of the flat belt it is important to know exactly which LRC system will be used.

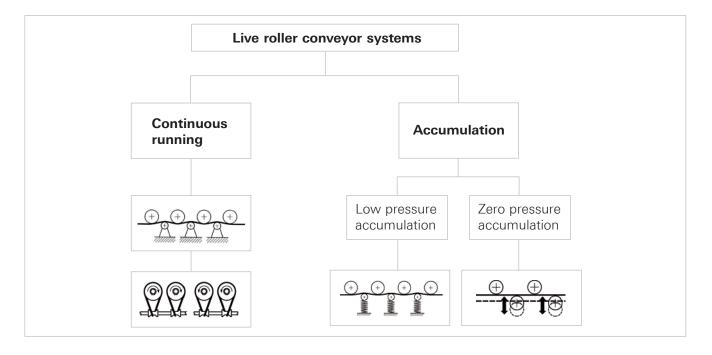

Continuous running system

In a continuous running system, the carrying rollers are driven continually. There is no accumulation of goods and thus no stopping of the rollers. Pressure rollers can be fitted therefore in a fixed position. Flat belts with friction covers (NBR) on both sides are used as driving element. Rollers in continuous running systems may also be driven by Polycord round belts – a solution that is particularly suited for curves.


Accumulation system

Where products need to be accumulated on the LRC for subsequent controlled retrieval, a distinction is made between systems where the continuous running belt remains in contact with the rollers while they are blocked by the accumulated goods (low pressure accumulation), and systems where the belt is separated from the rollers (zero pressure accumulation).

Special flat belt drives Live roller conveyor drive

• Low pressure accumulation

On the relatively simple low pressure accumulation system, the belt is pressed against the rollers by a spring-loaded mechanism. If the carried goods are accumulated, e.g. by means of a mechanical stop or gate, the rollers in question stop while the belt continues to run. The surface touching the carrying rollers must be formed so that it can slip with minimum resistance on the stationary rollers, but at the same time have sufficient friction to continue driving the other carrying rollers reliably. On the driving pulley side, the belt must have a high coefficient of friction (preferably NBR rubber cover).

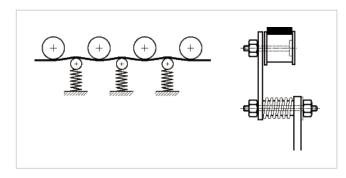


• Zero pressure accumulation

On the more sophisticated zero pressure accumulation system, the pressure rollers are separated from the carrying rollers by mechanical devices during the accumulation process.

The goods being carried will stop moving once the rollers are disconnected from the drive. However, if they are to be conveyed further, the pressure rollers are simply returned to their operating position, pressing the drive belt back onto the rollers.

In this fashion, different sections of the roller conveyor can be engaged and disengaged from the drive completely independently of each other. The pressure roller lifting device itself can be mechanically, pneumatically or electromechanically operated, while the control sensors are mechanical, electrical, pneumatic or optical.

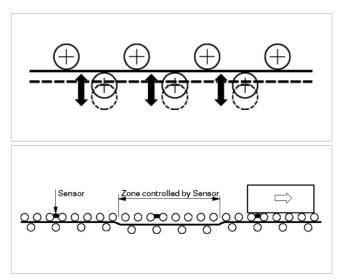

Since in the zero pressure accumulation system there is absolutely no contact between the driving belt and the carrying rollers during accumulation, drive belts with friction covers on both sides (NBR rubber) can be used. This results in increased transport reliability and belt service, and reduced power consumption compared with the low pressure system.

Live roller conveyor drive

Technical requirements on live roller driving belts

Due to their relatively low belt speeds, the demands regarding running properties are relatively low. However, the belts still have to be robust, because they are often exposed to strong mechanical loads, e.g. due to start-stop operation, relative movement on stationary rollers, lateral contact on flanged pulleys, etc.

Belt selection

Habasit can provide the optimal belt type for every LRC system:

LRC system	Required belt design	Belt recommendations
Continuous running system	Carrying roller side: Adhesive surface *	Power transmission belts: TC-range TCF-20H, TCF-50H
anda dada dada	<u>~~~~</u>	TF-range S-range
Zero pressure accumulation	Driving pulley side: Adhesive surface *	Other possibilities (examples): MAM-5E CM-18/30F
Low pressure accumulation	Carrying roller side: Non-adhesive surface	Power transmission belts: TF-75T, TF-75TE
	0.0.0.0.	Other possibilities (examples): MAM-5P
	Driving pulley side: Adhesive surface *	FAB-xxE EMB-12EMCH, EMB-20EMCH ENU-20EXBD EMB-27EHBT

^{*} NBR rubber by preference

Further belt types are available for special requirements, such as use in cold environments, etc. As an alternative to flat belts, LRC are often equipped with round belts (Polycord*, Habicord). For further information please contact your Habasit partner.

Calculation aids

For driving belt calculations for special requests please contact your Habasit partner.

Design recommendations

The general statements in the chapter on "Design guidelines" should be observed.

Belt installation and maintenance

The general statements in these chapters should be observed.


Alternative: HabasitLINK® modular belt conveyor


As an alternative to the belt driven live roller conveyor system, the HabasitLINK® modular belt conveyor can be considered for new installations. For further information see www.habasit.com or contact your Habasit partner.

Multi pulley drive (power branching)

Introduction

One drive pulley powers several pulleys via one belt, whereby at least two driven pulleys transmit power to energy-consuming machine parts. Power branching often includes the reverse rotation of driven pulleys (double side power transmission).

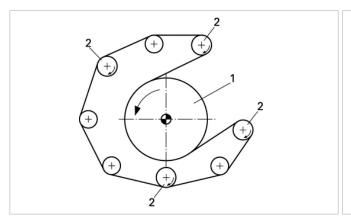

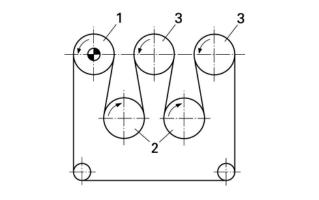

- 1 Driving pulley
- 2 Driven pulleys, change of rotating direction
- 3 Driven pulleys, same rotating direction as driving pulley

Belt selection

Selection of the optimal belt type has to be made according to the requirements of the application, customer preferences and cost considerations.

Single sided power transmission:

A and TCF-xxEL-range
 Also possible TC-, TF- and S-range

Double sided power transmission:

• TC-, TF- and S-range

See also Belt Selection Chart on page 11 or contact your Habasit partner.

Belt calculation

Please note that multi pulley drives with power branching cannot be calculated by the POWER-SeleCalc program.

We recommend that you send the drive data to your Habasit partner for exact calculation.

Design recommendations

The general statements in the chapter "Design guidelines" should be observed.

Belt installation and maintenance


The general statements in these chapters should be observed.

The largest circumference circles of all crowned pulleys must be precisely aligned in the same plane to ensure a proper belt tracking response.

Angular drive (mule drive)

Introduction

In a angular drive the driving and the driven pulley can be arranged in rectangular position.

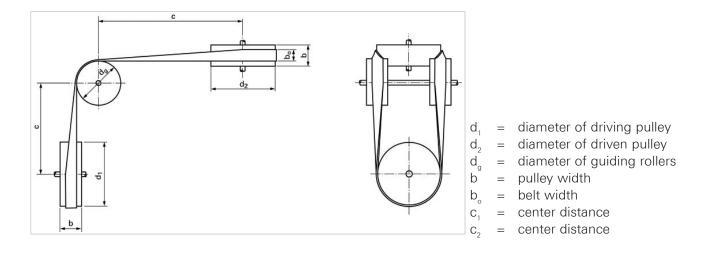

Recommended product range

TC- or TCF-xxEL range
 Also possible A- and S-range

Non-recommended product range

Do **not** use TF-belts (aramide is sensitive regarding twisting and buckling).

Belt calculation

If the machine data are known, the required belt data can be calculated by the POWER-SeleCalc program.

Design recommendations

The general statements in the chapter "Design guidelines" should be observed. The following additional recommendations for angular drives are based on experience:

- The greater the center distance (c1, c2), the better. It should be at least 10 times the belt width
- The width of the driving and driven pulley must be 1.5 to 2 times the belt width
- Crown both the driving and the driven pulley
- The guiding roller width must be at least 2 times the belt width
- The guiding rollers must be cylindrically


Belt installation and maintenance

The general statements in these chapters should be observed.

Half-cross drive

Introduction

The half-cross drive serves to transmit power between two shafts, the axes of which cross at an angle of 1° to 90°.

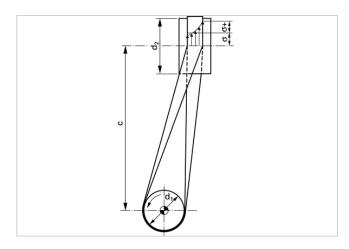

 d_1 = diameter of driving pulley d_2 = diameter of driven pulley

c = center distance

Preconditions

The belt must run parallel onto the pulleys (perpendicular to the axis). Running in reverse direction is not possible.

Recommended product range

TC-range

Also possible S-range

Not recommended product range

Do **not** use TF-belts

(aramide is sensitive regarding twisting and buckling).

Belt calculation

If the machine data are known, the required belt data can be calculated by the POWER-SeleCalc program.

Note: One belt edge experiences additional tensile stress (σ +, see figure) through distortion. Belts in half-cross drives must therefore be stressed only up to 80% of their performance. This can be taken into consideration by increasing the indicated belt width by approx. 20%.

Half-cross drive

Design recommendations


The general statements in the chapter "Design guidelines" should be observed. The following additional recommendations for half-cross drives are based on experience:

- The ratio of the small to the large pulley must not exceed 0.4
- It is an advantage to make the distance between the axes as big as possible and to choose a narrow belt
- The greater the center distance (c) the better. It should be at least 10 times the belt width
- The pulley width must be at least twice the belt width
- Both pulleys must be designed cylindrically
- At least one pulley has to be designed in a way that it can be pivoted in plane parallel to its own axis and perpendicular to the other pulley axis.
- The pulleys must be displaced by the amounts:

$$y \cong 0.5 \cdot b_0$$

$$z \cong (0.1-0.2) \cdot b_0$$

 The displacements must be made in such a way that the belt at the driving end is less laterally buckled than at the slack end.

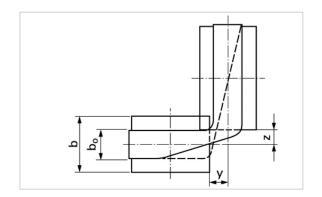

Belt installation and maintenance


The general statements in these chapters should be observed.

Fabrication

Flexproof joining system

Flexproof joining system (finger joint)

Flexproof is a fusion joint used **without** the addition of adhesive. It ensures simple joining and quick installation.



Advantages	Limitations
 Longitudinal flexibility, no stiffening of the joint No thickness difference over the joint low vibration running Good appearance; quality is easily assessed by visual inspections 	• Temperature resistance, not for high operating temperatures (limit 60° to 80 °C)

Process data

See "Joining data sheets" on www.habasit.com

Recommended joining tools (examples)



Fabrication

Thermofix joining system

Thermofix joining system

Thermofix is an adhesive bonded joint. A variety of procedures and adhesives are employed, which are dependent upon belt type.




Advantages	Limitations
Admissible operating temperature up to 100 °C	 Belt is slightly stiffer at the joint Quality of joint skills depends on fabricator

Process data

See "Joining data sheets" on www.habasit.com

Recommended joining tools (examples)

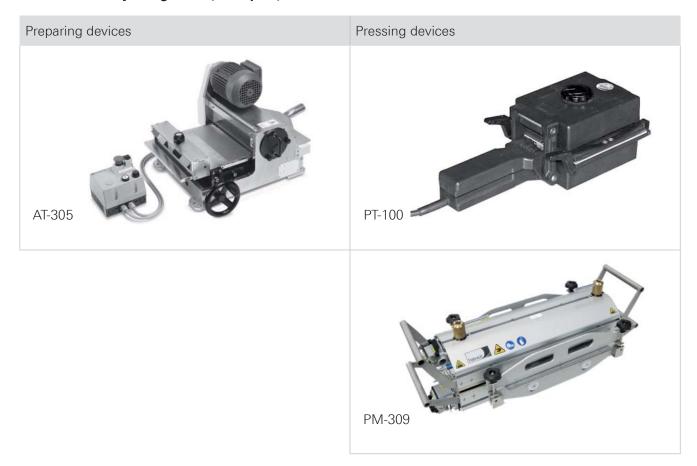

Belt installation - Safety regulations

Belt installation

In order to guarantee problem-free running and to benefit from the features of the flat belt drive, the power transmission belts must be selected and installed correctly. Safety regulations and installation hints must be followed thoroughly.

Safety regulations

If touched, running belts can catch parts of the body and objects e.g. clothing, tools, etc. and cause serious bodily injury and machine damage.

Switch off the machine using the main switch and ensure that it cannot be switched on again before installation, adjustment or maintenance work is carried out.

Power transmission belts should only be installed on the equipment for which they have been selected and calculated according to Habasit documentation.

Only qualified personnel who are authorized to perform the required installation and equipment maintenance may perform this work. They must possess the requisite knowledge and skills to effectively perform such work in accordance with the necessary provisions and accident-prevention regulations.








Belt installation

First-time installation


The following recommendations apply to the first installation of endless belts.


Proceed as follows:

- 1. Make sure that the tensioning device is in the innermost position.
- 2. Check that the shafts are parallel and the pulleys aligned perpendicular to the belt running axis.

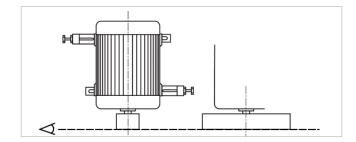

- 3. The running surfaces of the pulleys must be clean and free from grease, soil and dust.
- 4. Before installing, trace small measuring marks at a distance of e.g. 1000 mm (recommendation) on the un-tensioned belt. Use a ball-point pen and mark as accurately as possible! Do not place the measuring distance over the joining area.

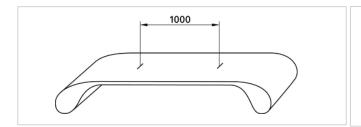

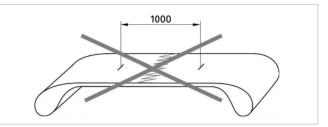


For short belts or if the control distance on the machine is shorter, choose a shorter measuring mark distance, e.g. 500 mm.


The longer the distance between the measuring marks, the higher the tensioning accuracy.

5. Install the belt carefully. Lay it first on the small pulley, then on the large pulley. Do not force the belt over the pulley edges. Do not use unsuitable tools such as screwdrivers, hammers, etc.

Special care has to be taken when installing belts with an aramide traction layer (TF-belts). These belts are sensitive to twisting and buckling.

6. Tension flat belt by enlarging the center distance until the distance between the measuring marks has increased by the value of the required (calculated) **initial elongation** (ε_a)

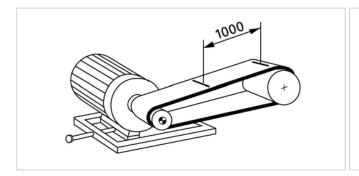

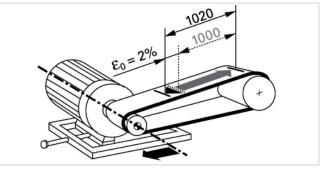

Belt installation

First-time installation

Example:

Required initial elongation $\varepsilon_0 = 2.0\%$

Measuring mark distance of un-tensioned belt: 1000 mm Measuring mark distance of tensioned belt: 1020 mm

If the initial measuring mark distance of an un-tensioned belt is not 1000 mm as recommended, adapt the tensioning accordingly. For examples see the table below:

Initial measuring mark distance (un-tensioned belt) [mm]	Measuring mark distance of tensioned belt [mm]				
		Calculated initial elongation ε _α [%]			
	0.5 1.0 1.5 2.0 2.5				
200	201	202	203	204	205
500	502.5	505	507.5	510	512.5
750	753.8	757.5	761.3	765	768.8
1000 (recommended)	1005	1010	1015	1020	1025
1500	1507.5	1515	1522.5	1530	1537.5
2000	2010	2020	2030	2040	2050

Never tension a power transmission belt by guesswork; always observe the calculated initial elongation ε_{o} !

If the correct initial elongation is not known, calculate it with the POWER-SeleCalc program or call Habasit application support.

In exceptional cases, if no indication is available at all, observe the approximate values:

		Initi	al tension [%]
Traction layer	Belt range	min.	Average range
Polyamide (PA)	S, A	0.5	1.5 – 2.5
Polyerster (PET)	TC, TCF	0.3	1.0 – 2.0
Aramide	TF	0.2	0.5 – 0.8

- 7. Rotate the belt once or twice by hand. The flat belt must not drift or run off even when the direction of rotation is changed.
- 8. Check the distance of the measuring marks again. If necessary, tension the belt to the required initial elongation.
- 9. Fix the screws of the tensioning device.
- 10. Secure the original protective casing before starting the motor.
- 11. Make sure that the belt data (type, dimensions, quoted initial elongation, date of installation and maintenance instructions are stored near the machine, e.g. in a self-adhesive envelope stuck on the machine).

Installation of aramide belts

Power transmission belts with an aramide traction layer (TF-range) must be installed with special care.

Do not twist belts with an aramide traction layer and do not tension the belts with sudden or excessive force!

The high modulus of elasticity of aramide fibres in the TF-belts leads to two special features:

- The required take-up displacement is extremely short
- Even a small increase in the initial elongation may lead to a considerable increase in the tensile force and shaft load. Extensive shaft deflection or early breakdown of bearings may be the result..

Belt installation

Installation of strong belts and re-installation

Installation of strong belts (two-step tensioning)

In applications where a relatively strong belt is being installed on an inappropriately **weak drive design** we recommend tensioning in two steps:

1st step: Tension the belt to 60% to 70% of

the required initial elongation ($\epsilon_{\mbox{\tiny 1st step}}$) only.

Let it relax for 3 to 6 hours

2nd step: Re-tension the belt to the required initial


elongation ($\varepsilon_{2nd step} = \varepsilon_{o}$)

Conclusion:


Using the two-step tensioning method avoids the maximum peak value of the shaft load $(F_{W peak})$ appearing when the belt is tensioned in one step to the required initial elongation (ε_a) .


The shaft load immediately after the first step and after the second step elongation remains below the admissible load (F_{wadm}).


The shaft load after relaxation $(F_{Wa.r.i.})$ is not influenced in a negative way by the two-step tensioning method.

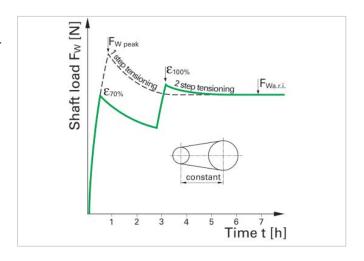

Re-installation of used belts

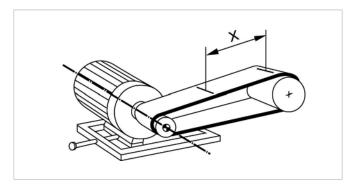



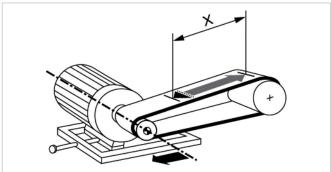

When re-installing the same used belt, tension it until the initial distance between the measuring marks comes up.

Follow the directions for first-time installation, fig. 7 to 10

Belt maintenance

Provided there has been correct dimensioning and professional installation, Habasit's power transmission belts do not usually need to be maintained or re-tensioned.

However, regular checks are recommended in order to guarantee problem-free performance of the drive.

Cleaning

The running surfaces of pulleys must be clean and free from grease and accumulated dust. Dirty belts can be cleaned easily with lukewarm water and soap.

Check

Look out for changes in the friction cover and joint. Replace the belt if changes are considerable or in the event of damage. Check pulleys for excessive wear.

Re-tensioning

If the power transmission flat belt no longer transmits the capacity it was calculated for, clean the pulleys and belt and if necessary re-tension it carefully.

Prerequisites for trouble free operation

- Power transmission flat belts are very reliable and long lasting if the following prerequisites are met:
- The belt should be specified and calculated according to its application
- The belt type, belt dimensions (width and length) and calculated initial elongation are known
- The belt joint is made carefully in line with Habasit's joining data sheets
- The belt is carefully installed in accordance with Habasit guidelines, and initial elongation is exactly applied
- The actual operating conditions correspond to the initial specifications
- There is no mechanical damage to the belts

Trouble shooting

The most common problems with power transmission flat belts, their possible causes and recommended action to solve the problems are listed below.

If the problem still remains, please contact your Habasit representative.

Problem	Possible causes	Remedies
Poor tracking: Belt runs to one side Belt runs from one to the other pulley side and backwards	 Pulleys or rollers out of alignment Pulleys or rollers covered with dirt Improper pulley or roller crown (usually crowned too high) or no crown at all Pulleys or rollers covered with dirt 	 → Check that all shafts are parallel and that the pulleys are exactly aligned perpendicular to the belt running axis → Clean pulley surfaces → Retooling of the pulley shape according to Habasit recommendations → Clean pulley surfaces
Belt edges wear out	 Belt is running over pulley edges, caused by poor tracking Belt is touching flanges or machine parts, even if it runs straight on 	 → See "Poor tracking" → Avoid allowing belt edges to come into contact with flanges or other machine parts → Avoid flanged pulleys → Increase pulley width or chose a stronger but smaller belt (new belt calculation necessary)
Belt running surface wears out	 Slip between driving or driven pulley(s) and belt Knurled or too rough pulley surface 	 → See "Belt slip" → Reduce roughness according to Habasit recommendations (R_a = 6.3 to 3.2 µm)
Belt failure immediately after motor start up	Bad joint qualityHeavy, unconsidered shock load or overload	 → Use a new belt with appropriate joint quality → Check drive data, as well as belt design and calculation
Belt service life does not fulfill customer expectations	 High bending frequency over small pulley diameter Power to be transmitted [kW] higher or operating conditions more demanding than indicated Extraordinary influence of temperature and humidity Belt tension too high or too low Unrealistic customer expectations 	 → Increase pulley diameter or choose a more flexible belt → Check drive data, as well as belt specification and calculation → Check drive data, as well as belt specification and calculation → Observe calculated initial elongation (ε₀) → Inform customer about realistic belt service life

Problem	Possible causes	Remedies
Layer separation on polyamide belts or cracks in the PA-layer	Compression of the PA-layer due to a combination of small pulley diameter, thick traction layer and too low initial elongation	 → Observe the calculated initial elongation! Re-tension the belt if necessary → Use a belt type with fabric traction layer, e.g. TC- or TF-type
Belt slip	 Initial elongation too low Power to be transmitted [kW] higher or operating conditions more demanding than indicated Dirty, greasy, oily or wet pulley or belt surfaces Important: Slip on power transmission belt drives must not be eliminated by increasing the friction or the surface roughness of the driving pulley: Premature belt wear would be the consequence! 	 → Observe the calculated initial elongation! Re-tension the belt carefully if necessary → Check drive data, re-calculate the belt → Clean pulley and belt surfaces → Never use lagged driving pulleys → Avoid knurled surfaces
Excessive noise/rattling	Stick-slip effect, mainly appearing with wide belts on big (> 2000 mm), very smooth, polished pulleys with a large arc of contact	 → Use a belt with a higher modulus of elasticity (k_{1%}-value) → Use a belt with a lower coefficient of friction, e.g. leather coated belts → Reduce coefficient of friction with talcum powder or with a waterspirit mixture (2 dl spirit to 10 l water) → Reduce friction by roughening the pulley surface to R_a = 6.3 to 3.2 μm
Joining area "kicks out" periodically on running belt	 Joint partially damaged Joint slightly aslant, not absolutely parallel 	 → Change belt → No danger for belt or drive, as long the belt does not run over pulley edges. → No action necessary
Belt shows a wiggly line	Belt not cut absolutely straight ("banana")	 → No danger for belt or drive, as long the belt does not run over pulley edges. → No action necessary

Belt storage conditions and handling

Unfavorable storage conditions or improper handling result in changes in the physical characteristics of synthetic power transmission belts. The main effects of improper storage conditions are on the coefficient of friction and the service life of the products.

Proper storage conditions in brief:

- Protect belts from sunlight/UV-radiation/dust and dirt
- Store spare belts in a cool (recommended 15 °C to 25 °C) and dry place
- Store the belts if possible in their original packaging

Storage location

The storeroom should be cool, dry, dust-free and moderately ventilated. Belts and tapes maybe stored outside only if they are covered to provide protection from the weather.

Temperature

Belts should not be stored at temperatures below -10 °C (14 °F) or above +25 °C (77 °F), except for very short periods of time.

When exposed to lower temperatures during storage or transport, products may stiffen. Before putting them into operation or further processing, these products should be conditioned at room temperature over a period of at least 48 hours. This is best carried out while the items are still in their packaging, to prevent the formation of condensation on the product itself.

Heating

In heated storerooms, belts must be shielded from the heat source. There must be a distance of more than 1 meter between a radiant heat source and an unshielded product. A greater distance from the heat source is necessary in rooms with forced-air heating systems.

Humidity

Storage in damp conditions should be avoided. Relative humidity of between 40% and 65% is recommended.

Lighting

Products should be protected from light, in particular from the direct rays of the sun and from strong artificial light with a high ultraviolet component. Light from incandescent lighting sources is preferable.

Ozone

Belts should not be stored close to ozone-produing equipment such as UV lamps, AC arc welding machines, laser printers, etc.

Chemicals

Solvents, fuels, lubricants, chemicals, acids, alkalis, and disinfectants should not be kept together with belts in the same storeroom.

Handling

Care is to be taken that products, when stored, are not subject to stress, i.e. with no excess tension, pressure or other deformation, since stress can promote permanent distortion and crack formation.

Contact between belts of different compositions or colors should be avoided.

With long-term storage, ensure that recently received products are stored separately from products already in stock (first in, first out!).

Belt storage conditions and handling

Packaging

Belts must be protected by suitable packaging against soiling. Products containing polyamide should always be wrapped airtight, to avoid undesirable absorption of humidity or drying out.

Covering materials should contain no additives that are harmful to the products, e.g. plasticizers, benzene, oil or similar agents. Suitable packaging, for example, is anti-static black film or polyetylene or polyamide bags. Habasit belts should be stored preferably in their original packaging.

Should moisture, nevertheless, accumulate inside due to damage to the packaging materials, the packaging must be removed to prevent mold formation.

Symbols and units

Symbol	Metric unit	Imperial unit	Explanation
а	mm	in.	Belt thickness
b	mm	in.	Pulley width
b _o	mm	in.	Belt width
С	mm	in.	Center distance of un-tensioned belt (corresponds to I _{eff})
C _E	mm	in.	Center distance of tensioned belt (corresponds to I _s)
d	mm	in.	Diameter of large pulley
ds	mm	in.	Diameter of small pulley
d ₁	mm	in.	Diameter of driving pulley
d ₂	mm	in.	Diameter of driven pulley
E	N/mm²	ksi	Modulus of elasticity
F' _{UN}	N/mm	lbs./in.	Nominal peripheral force per unit of width
F _{Wadm}	N	lbs.	Admissible shaft load
F _{ws}	N	lbs.	Static shaft load (after relaxation)
F _{wd}	N	lbs.	Dynamic shaft load (after relaxation)
h	mm	in.	Pulley crown hight
h _r	mm	in.	Pulley flange hight
k _{1%a.r.i.}	N/mm	lbs./in.	Tensile force for 1% elongation per unit of width after running-in
l _g	mm	in.	Geometric belt length (belt thickness not considered)
l _{eff}	mm	in.	Effective length of un-tensioned belt (length of the neutral layer, fabrication length)
l _s	mm	in.	Shortened belt length for fixed center distance or no take-up (length of the neutral layer, fabrication length)
I _ε	mm	in.	Length of tensioned belt (elongated to ε _o)
n ₁	1/min	rpm	Number of revolutions of driving pulley
n ₂	1/min	rpm	Number of revolutions of driven pulley
P	kW	HP	Power to be transmitted
P _M	kW	HP	Motor power
R	mm	in.	Pulley crown manufacturing radius
s	mm	in.	Position of the neutral layer measured from the running side
V	m/s	fpm	Belt speed
х	mm	in.	Available take-up displacement of tensioning device
X _r	mm	in.	Recommended take-up of tensioning device
X _ε	mm	in.	Effective take-up displacement, required to elongate the belt to $\epsilon_{\scriptscriptstyle 0}$)
β	0	0	Arc of contact
εο	%	%	Initial elongation (initial tension)
ε_{adm}	%	%	Admissible elongation
μ	_	_	Coefficient of friction

Questionnaire

Habasit always strives to support you in your selection.

Please find the following questionnaires to facilitate this process.

- Power transmission belts on page 58
- Tangential belts on pages 59 and 60

Make a copy, fill it in and send it to your local Habasit representative for further information; you'll fi nd us on www.habasit.com

With several affiliated companies and many representatives and service partners, the Habasit distribution network is highly responsive to your individual needs.




Selection parameters	Common application, no specific requirements			
General requirements	Both sides power transmission Utilisation as tangential belt Low creep, high accuracy and uniform number of revolution High efficiency, low energy consumption Short take-up (in combination with long belts) Wide and large pulleys Crossed drive Permanently antistatic			
Mechanical influences	 Heavy shock loads Small pulleys, high bending cycle frequency High belt speed, low vibration required Transverse bending and / or twist Rough belt handling (during installation etc.) 			
Environmental influences	 Very wet, dirty and / or dusty conditions Considerable oil and / or grease influence Changing climat (humidity, temperature) Operating temperature > 60 °C/140 °F (continuous) 			
Joining system	Skived and glued joint (Thermofix)Adhesive free joint (Flexproof)Seamless			
Calculation parameters				
Power to be transmitted Service factor Center distance	kW or PS 1) mm or effective belt length mm			
Pulleys Driving pulley Driven pulley Tension pulley	Diameter Width Arc of contact Number of revolution mm mm rpm 2) mm mm mm o rpm rpm rpm rpm			
Ambient temperature Minimum Maximum	°C °C			
Alternative parameters				
Start up: Operating conditions: Environmental influences:	Smooth starting Medium starting Abrupt starting Uniform operation Medium inertia forces Heavy shock loads Very wet Oil or grease Dusty conditions			
2) Drive with tension pulley	Tension pulley on slack side Tension pulley on tight side			
Measurements	Tension pulley outside Tension pulley inside			
X2	x_2 x_1 y_2 y_1 y_2			


Questionnaire: Tangential belts


Selection parameters		Common applicati	ion, no	specific requirements	
General requirements		High efficiency, lo	w ener combin ulleys	y and uniform number of rev rgy consumption nation with long belts)	olution
Mechanical influences		 Heavy shock loads Small pulleys, high bending cycle frequency High belt speed, low vibration required Transverse bending and / or twist Rough belt handling (during installation etc.) 			
Environmental influences		 Very wet, dirty and / or dusty conditions Considerable oil and / or grease influence Changing climat (humidity, temperature) Operating temperature > 60 °C/140 °F (continuous) 			
Joining system		Skived and glued joint (Thermofix) Adhesive free joint (Flexproof) Seamless			
Calculation parameters					
Configuration	(Spindles on both s	sides)	Spindles on one side	
Variable drive direction		Yes No		Spindles on tight side	Spindles on slack side
Power to be transmitted Service factor Belt width Effective belt length	1) [kW c	or	PS	
Pulleys Driving pulley d ₁ Diverting pulley tight side d _t Diverting pulley slack side d _s Diverting pulley guide side d _m Guide pulley(s) d _u	2) 2) 2) 2) 2)	Diameter mm mm mm mm mm mm mm mm		Arc of contact	Number of revolution rpm
Ambient temperature Minimum Maximum		°C			

Please fill-in the reverse side as well.

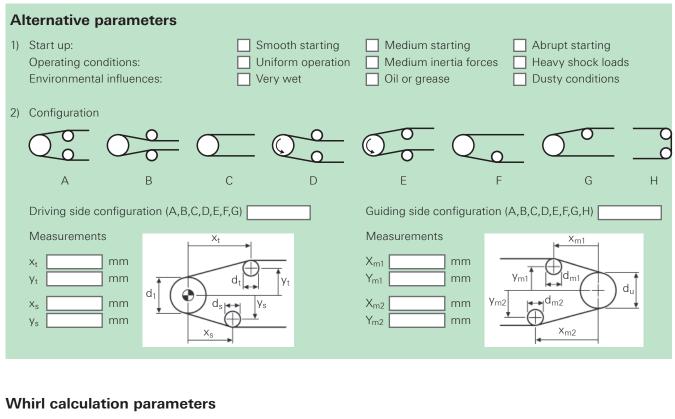

Whirl configuration	One pressure roller per 2 spindle	es One pressure roller per spindle	No pressure rollers
		$\frac{000000}{0000}$	0000
Spindle pitch Whirl diameter Number of spindles	mm or number of re	volutions rpm	

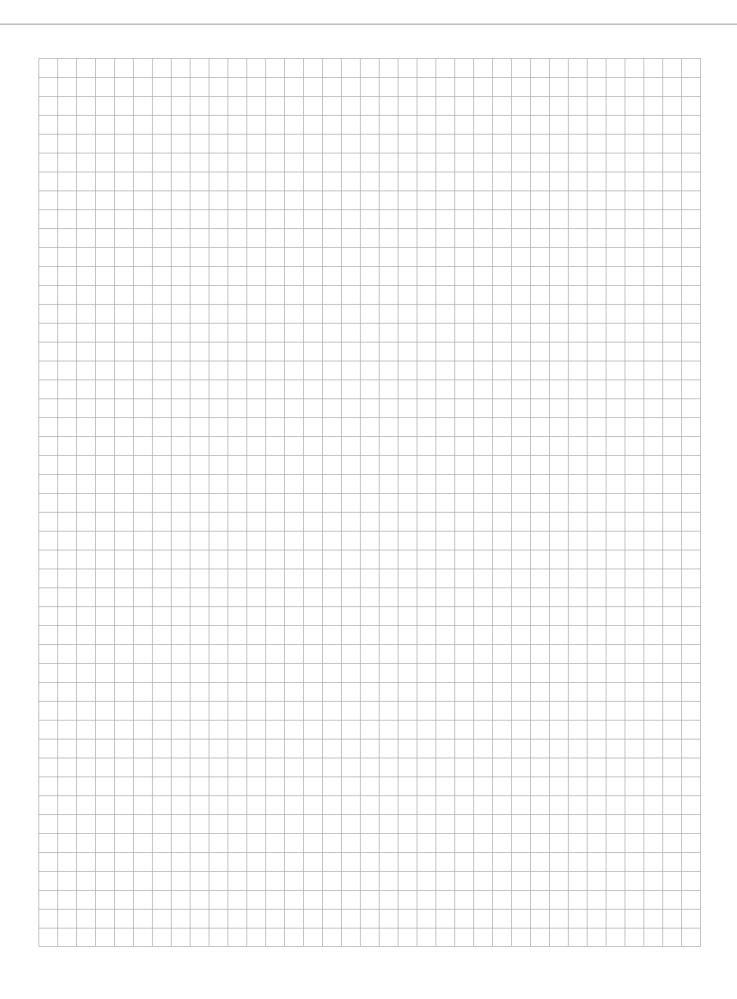

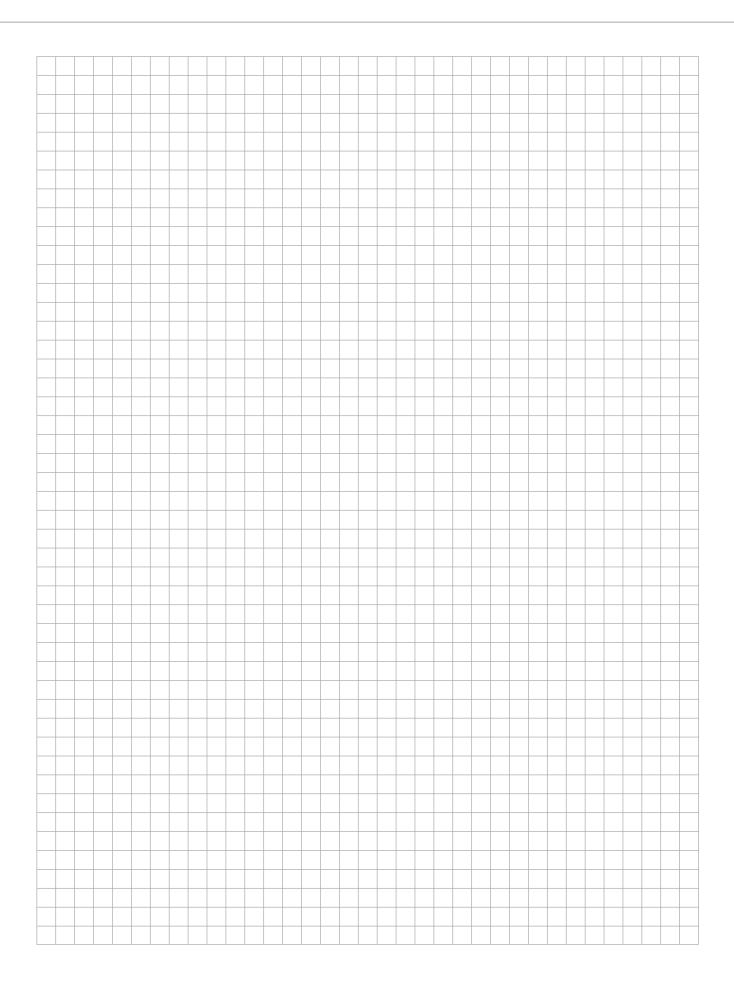

The Habasit solution



Customers first

At Habasit we understand that our success depends on your success. This is why we offer solutions, not just products; partnership, not just sales.

Since our foundation in 1946, Habasit has brought this understanding of customer needs to life every day and for every application. That's why we're the No. 1 in belting today. Worldwide.

Learn more on www.habasit.com

Committed to innovation

Habasit is strongly committed to the continuous development of innovative, value-added solutions. Over 3% of our staff are dedicated exclusively to R&D, and our annual investment in this area exceeds 8% of turnover.

Certified for quality

We deliver the highest quality standards not only in our products and solutions, but also in our employees' daily work processes. Habasit AG is certified according to ISO 9001:2000.



Worldwide leading product range

Habasit offers the largest selection of belting, conveying, processing and complementary products in the industry. Our response to any request is nothing less than a specific, tailor-made solution.



Fabric based conveyor and processing belts HabaFLOW®



Plastic modular belts HabasitLINK®/KVP®



Positive drive conveyor and processing belts

Habasit Cleandrive™



Power transmission belts






Timing belts HabaSYNC®



Chains (slat and conveyor chains)
HabaCHAIN®



Machine tapes



Round belts



Seamless belts



Profiles, Guides, Wear strips HabiPLAST®



Fabrication tools (joining tools)



Gearmotors Electric motors Motion control

Austria

Habasit GmbH, Wien Phone: +43 1 690 66 www.habasit.at

Belgium

Habasit Belgium N.V., Zaventem Phone: +32 27 250 430 www.habasit.be

Canada

Habasit Canada Ltd., Oakville Phone: +1 905 827 41 31 www.habasit.ca

China

Habasit East Asia Ltd., Hong Kong Phone: +85 221 450 150 www.habasit.com.hk

Habasit (Shanghai) Co., Ltd. Shanghai

Phone: +8621 5488 1228 Phone: +8621 5488 1218 www.habasit.com.hk

France

Habasit France S.A.S., Mulhouse Phone: +33 389 338 903 www.habasit.fr

Germany

Habasit GmbH Eppertshausen Phone: +49 6071 969 0 www.habasit.de

India

Habasit-lakoka Pvt. Ltd., Coimbatore Phone: +91 422 262 78 79 www.habasitiakoka.com

Italy

Habasit Italiana SpA Customer Care: Phone: 199 199 333

For int. calls: +39 0438 911 444 www.habasit.it

Japar

Habasit Nippon Co. Ltd., Yokohama Phone: +81 454 760 371 www.habasit.co.jp

Netherlands

Habasit Netherlands BV, Nijkerk Phone: +31 332 472 030 www.habasit.nl

New Zealand

Habasit Australasia Ltd., Hornby Phone: +64 3348 5600 www.habasit.co.nz

Norway

Habasit Norge A/S, Oslo Phone: +47 815 58 458 www.habasit.no

Poland

Habasit Polska Sp. zo.o., Dàbrowa Górnicza, Phone: +48 32639 02 40 www.habasit.pl

Russia

OOO Habasit Ltd., St. Petersburg Phone: +7 812 600 40 80 www.habasit.ru

Singapore

Habasit Far East Pte. Ltd.,Singapore Phone: +65 686 255 66 www.habasit.com.sg

Spain

Habasit Hispanica S.A., Barberà del Vallès Phone: +34 937 191 912 www.habasit.es

Sweden

Habasit AB, Hindas Phone: +46 30 122 600 www.habasit.se

Switzerland

Habasit GmbH, Reinach Phone: +41 61 577 51 00 www.habasit.ch

Taiwan

Habasit Rossi (Taiwan) Ltd. Taipei Hsien Phone: +886 2 2267 0538 www.habasit.com.tw

Turkev

Habasit Kayis San. Ve Tic. Ltd. Sti. Yenibosna - Bahcelievler - Istanbul Phone: +90 212 654 94 04 www.habasit.com.tr

Ukraine

Habasit Ukraina, Vinnica Phone: +38 0432 58 47 35 www.habasit.ua

United Kingdom and Ireland

Habasit Rossi (UK) Ltd., Silsden Phone: +44 844 835 9555 www.habasitrossi.co.uk

USA

Habasit America Conveyor belts, power transmission belts, gearmotors Suwanee, Georgia Phone: +1 800 458 6431 www.habasitamerica.com

Habasit America Seamless belts, timing belts Middletown, Connecticut Phone: +1 860 632 2211 www.seamlessbelts.com www.habasync.com

Rossi is one of Europe's largest manufacturers of gear reducers, gearmotors, inverters, standard and brakemotors, and is a member of the Habasit Group.

Rossi S.p.A. Via Emilia Ovest 915/A 41123 Modena – Italy Phone: +39 059 33 02 88 www.rossi-group.com info@rossi-group.com

Headquarters

Habasit AG Römerstrasse 1 CH-4153 Reinach, Switzerland Phone +41 61 715 15 15 Fax +41 61 715 15 55 E-mail info@habasit.com www.habasit.com

Registered trademarks Copyright Habasit AG Subject to alterations Printed in Switzerland Publication data: 6026BRO.PTB-en0612HQR