

L I N E   ·   C R E A T E

# Solid Wood Heated Footrest

---

User Manual

BRAND

L i n e c r e a t e

# Contents

## Solid Wood Heated Footrest



01

### Product Positioning

Why this is a "solid wood heated footrest" and not a traditional "solid wood foot warmer"

— 01-02

02

### Control Panel Operation

How to adjust temperature, set the timer, and switch between °F and °C

— 03-10

03

### Edge Temperature Design

Why the edges have no temperature — safety design and working principle

— 11-13

04

### How to Use the Thermal Blanket

Core accessory, correct use, safety tests, power cord, and cleaning

— 14-18

05

### Usage Tips & Scenarios

Varnish finish, wearing socks, drying small items, and pet warm nest

— 19-21

06

### Plush Foot Pad

Purpose and care, why it exists, heat impact, and cleaning

— 22-23

07

### Warranty Policy

3-year whole-unit warranty, claim process, replacement, and abuse prevention

— 24-26

# Product Positioning

Why this is a "solid wood heated footrest" and not a traditional "solid wood foot warmer"

### ② Please first understand one key fact

This product has a **fixed height that cannot be made lower**. This is not a design flaw — it is required by the way it heats.

### ≈ How does it heat?

- 1 The internal heating panel first heats the air inside the unit (it does not directly bake your feet).
- 2 When you cover it with the included thermal blanket, the hot air is trapped and slowly creates a warm, non-drying **"cocoon"**.
- 3 Benefits: warm but not dry, no fan, quiet, energy-saving — like putting your feet in a gentle, heated room.

### ↕ Why can't the height be reduced?

Heating the internal air requires **enough space for air circulation and heat circulation**. If it were too flat, the air-heating effect would be poor, or hot air would blow directly onto your feet (dry and uncomfortable).

This height is the minimum feasible height we found after repeated testing — any lower and we could not achieve the **"warm but not dry"** effect.

### ∞ Why don't we call it a "foot warmer"?

Because most people think of a "foot warmer" as a very flat device that directly radiates heat. If you buy our product with that expectation, seeing its height would be strange and disappointing. Therefore, we clearly position it as a **Solid Wood Heated Footrest**.

# Product Positioning

### ≡ What this product really is

- **First of all**, it is a wide, sturdy, and comfortable solid wood footrest on which you can naturally rest your feet while working or relaxing.
- **Secondly**, it has a **heating function** that works best when used with the included blanket.

### 💡 How does this positioning help you?

- **If you want a very flat, space-saving foot warmer** → this product may not be for you.
- **If you don't mind a footrest having some height, and you prefer a gentle, non-drying, quiet warmth for your feet** → this product is exactly for you.

### 📌 A note before we start

We put this positioning at the very beginning, not to excuse a flaw, but to help you buy a product that truly fits your needs. **Clear expectations are the best instruction manual.**

### About the Blanket & Plush Pad

The included thermal blanket is essential for proper heating. Without it, heat escapes quickly and the panel stays cool even at max temperature. With it, warmth builds up properly.

The plush pad is for comfort only, but it blocks about 44% of heat conduction, significantly slowing warm-up time.

For fastest heating and maximum warmth, skip the plush pad — place feet directly on the solid wood panel and cover with the blanket.

The plush pad is best used when you prioritize softness over speed.

For more details, see:

Blanket: Chapter 4 — How to Use the Thermal Blanket (Pages 14 – 18)

Plush Pad: Chapter 6 — Plush Foot Pad – Purpose and Care (Pages 22 – 23)


# Control Panel Operation

How to adjust temperature, set the timer, and switch between °F and °C

## ☞ Your control panel buttons

Your control panel has the following buttons and a digital display. Each button works as follows:

## ☰ Button reference

| Button                                                                                                                          | Function                                                                                 |
|---------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| <p><b>power</b></p>                            | Power on / standby (press once: screen lights up and shows OFF; press again to turn off) |
| <p><b>switch</b></p>                          | Start heating (when the unit is on and in standby, press this button to begin heating)   |
| <p><b>+</b><br/>(plus)</p>                   | Increase target temperature (each press raises the target by 1 degree)                   |
| <p><b>-</b><br/>(minus)</p>                  | Decrease target temperature (each press lowers the target by 1 degree)                   |
| <p><b>Time Adjust (with clock icon)</b></p>  | Short press: set timer (1–9 hours); Long press: switch between °F and °C                 |
| <p><b>Display</b></p>                        | Shows temperature numbers (does not show °F or °C suffix)                                |


## 📘 Quick note

The screen shows only numbers, not the unit. To check the current unit, see Page [9](#) below.

# Control Panel Operation

### 1. Power-on and heating (two-step operation)

- Step 1:** Press the **power** button. The screen lights up and shows **OFF** — the unit is powered on but not heating.

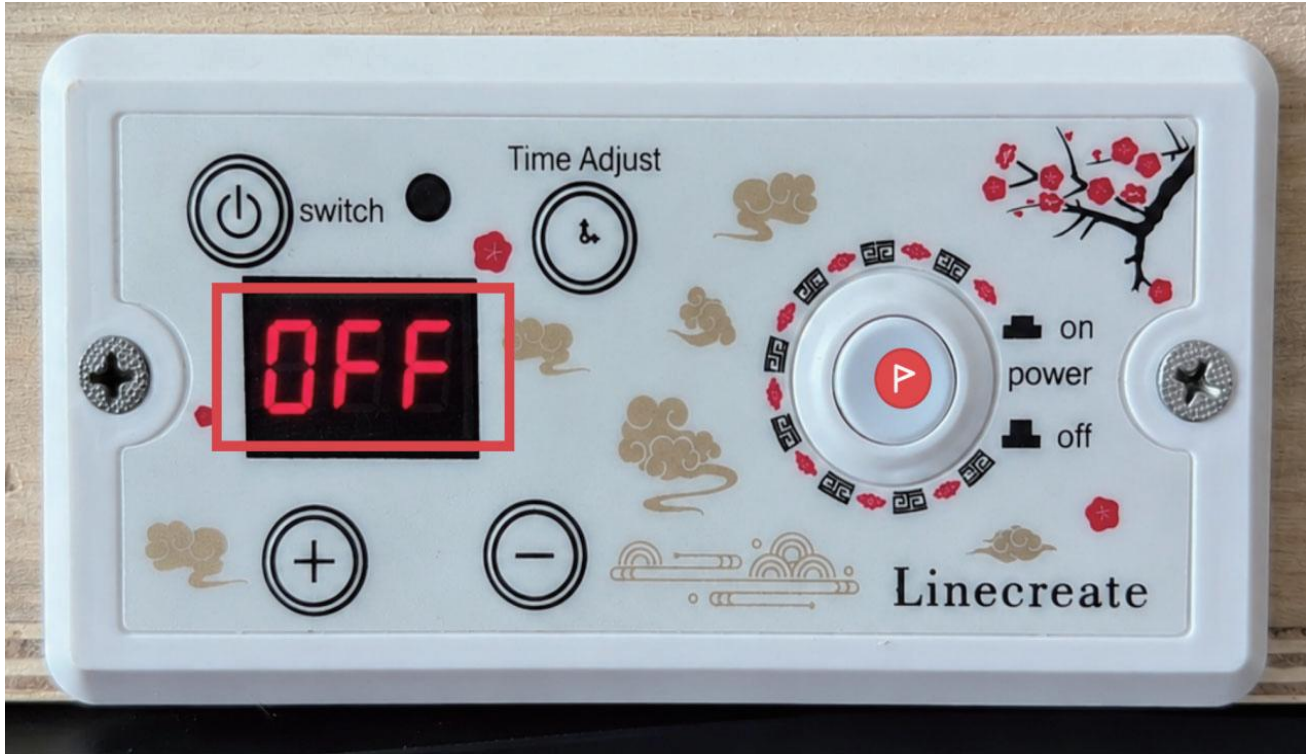

- Step 2:** Press the **switch** button. The unit starts heating and the screen shows the current actual temperature.



Two-step power-on is a safety design to prevent accidental activation by children or pets.

## Control Panel Operation

### 2. Adjusting the temperature

- Press +: each press increases the target temperature by 1 degree.
- Press -: each press decreases the target temperature by 1 degree.
- °F range: 70 – 160 (°F)
- °C range: 20 – 70 (°C)

#### Default temperature on first use:

- In °F mode, default heating target is **110°F**.
- In °C mode, default heating target is **45°C**.

This default is used **only the first time you use the product**. From the second use onward, the unit remembers the last temperature you set (See page 7 "Smart memory").

### ⇌ Temperature adjustment example (in °F)

Assume the current target temperature is **110°F** and you want to raise it to **160°F**. The screen shows the **actual temperature** detected by the unit (it may still be rising, e.g., showing 105, 108, etc.).

#### Steps:

- 1 Press + repeatedly. Each press increases the target by 1°F. The screen numbers change from the actual temperature to the target you are setting (e.g., 110 → 111 → 112 ...)



## Control Panel Operation

### ⇒ Temperature adjustment (continued)



- 2 When the screen shows **160**, stop pressing. The displayed 160 will **blink a few times**, indicating that your new setting is being recorded.
- 3 After blinking stops, the screen automatically returns to showing the **current actual temperature** (e.g., 115). This means your setting has been saved — the new target temperature is **160°F**.
- 4 The unit will now heat until the actual temperature reaches **160°F**, then stop heating and maintain constant temperature.

To lower the temperature: press – repeatedly, each press lowers the target by 1°F until you see the desired number (e.g., 100). Release, the number blinks, then the screen returns to the actual temperature, and the unit automatically cools down to the new target.

Whether raising or lowering, once the screen blinks and returns to the actual temperature, the setting is successful. The unit will work toward the new target.



## Control Panel Operation

### 🔊 3. Smart memory — do I have to re-set the temperature every time?

**No.** The unit remembers the last temperature you set before turning it off.

Example: You last used **160°F** before shutting down. Next time you use it, simply press **power** to turn it on, then **switch** to start heating. The unit automatically reads the previous 160°F and heats to that temperature. You do not need to press +/- again.

The memory works for all temperatures, including the maximum **160°F / 70°C**.

### 🕒 4. Setting the auto-off timer (1–9 hours)

- **Short press** the **Time Adjust** button. Each short press changes the screen number in a loop: 1 → 2 → 3 ... → 9 → 1 → ...
- Keep short-pressing until the screen shows your desired number of hours (e.g., 8).
- Stop pressing. The number will blink a few times, then the screen automatically returns to showing the current actual temperature. The timer is now set.


**Example:** To set an 8-hour timer, short-press Time Adjust seven times (from 1 to 8), then stop.

## Control Panel Operation

### ⌚ Timer & default protection

#### Default timer protection:

- If you never press Time Adjust (i.e., you do not set a timer), the unit will automatically shut down after **8 hours** of continuous operation. This prevents unattended long-term operation and saves energy.

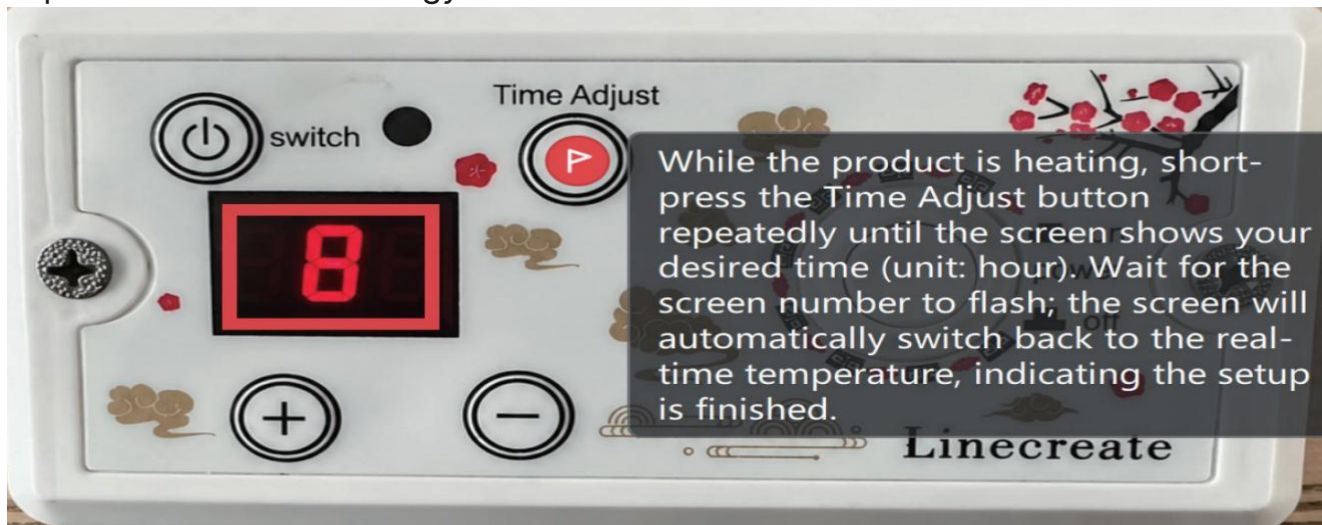


### ⇌ 5. Switching between °F and °C

The unit ships with **°Fahrenheit** as the default unit.


#### How to switch units (F ↔ C):

- 1 Press **power** to turn on the screen and show **OFF** (standby mode). **Do not press switch.**

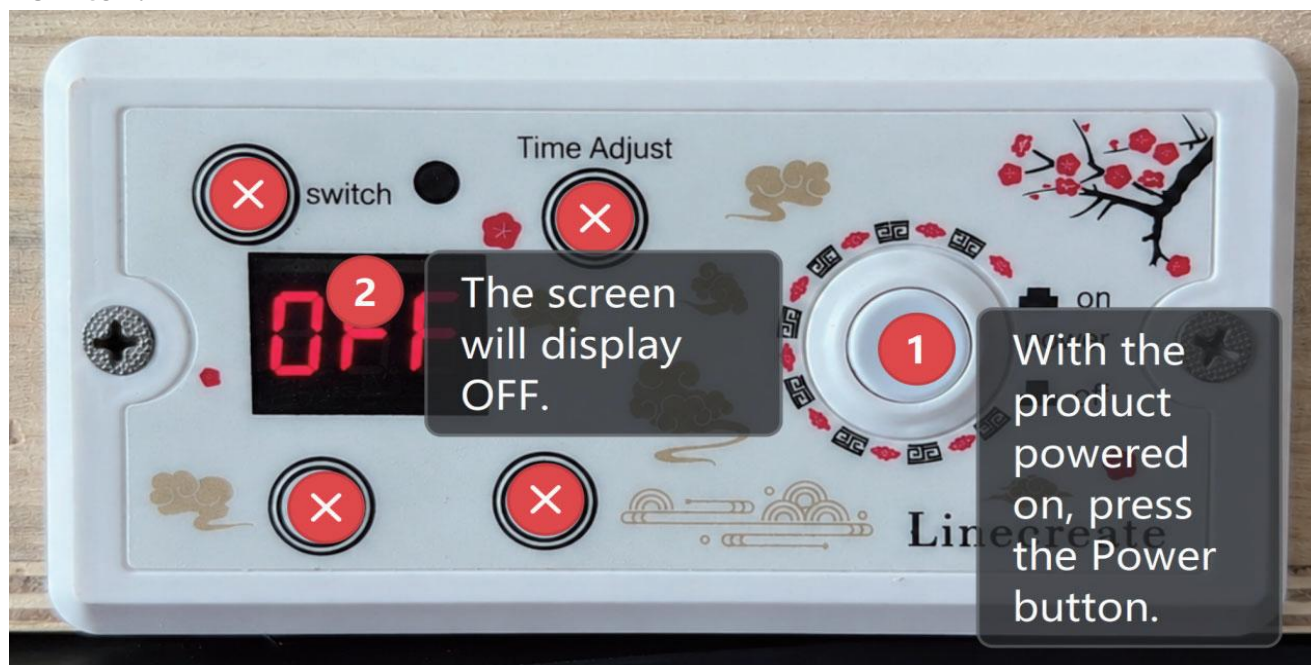

## Control Panel Operation

### ⇒ Switching units (continued)

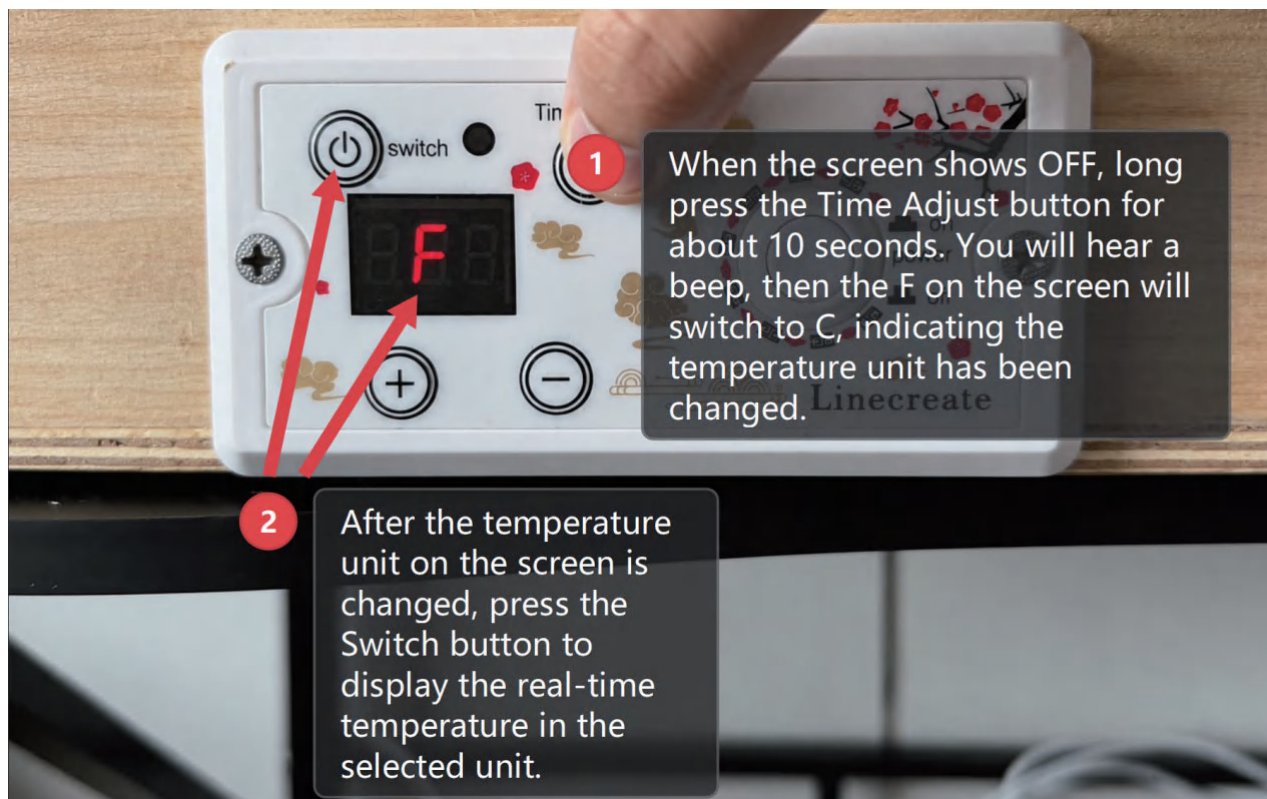

#### 2 Long press the **Time Adjust** button:

After about **5 seconds**, the screen briefly shows the current unit: F or C.

Keep holding until about **10 seconds** — you will hear a "**beep**" and the unit will switch (F→C or C→F).

#### 3 Release the button, then press **switch** to start heating. The temperature numbers on the screen will now use the new unit.

#### How to check the current unit (without switching):

If you only want to see whether the unit is °F or °C, without changing it:

- Turn on the screen with **power** (screen shows OFF, standby). Do not press switch.
- Long press **Time Adjust** for about **5 seconds** — the screen will briefly show **F** or **C**. Release immediately (do not hold until the beep). The unit will not change.

## Control Panel Operation

### ≈ 6. How constant temperature (thermostat) works

- When the unit reaches your set target temperature, it **automatically stops heating**, but the screen still shows the current actual temperature (the number slowly drops).
- An internal sensor continuously monitors the temperature. If the actual temperature falls about **9°F (approx. 5°C)** below the set target, the unit **automatically resumes heating** until it reaches the target again. This cycle maintains a constant temperature.
- The screen always shows the real-time temperature — there is no "standby" or "stopped" indication.

**Important:** Always use the included **thermal blanket** to cover your feet and the footrest. This prevents rapid heat loss, gives the best constant-temperature performance, and saves energy. Without the blanket, heat escapes quickly and the unit may run continuously without reaching the set temperature.

### Overheat Protection Alert

#### What to do if you see 'H1'

If the screen displays "H1" and you hear a continuous beeping sound, the unit has detected that the internal temperature has exceeded its safety threshold. This is not a failure - it is a built-in safety feature. The unit is designed to automatically shut off heating to prevent overheating, protecting both you and the product.

#### What to do:

- ① Turn off the unit and unplug it.
- ② Wait 10-15 minutes for it to cool down completely.
- ③ Plug it back in and resume normal use.

This safety mechanism is always active. Even in the unlikely event of excessive heat buildup, the unit will shut itself down before any issue occurs.

If H1 appears again after following the steps above, it may indicate a sensor issue. Please contact us through Amazon's "**Contact Seller**" messaging system with your order number. We will review your case and, if a sensor issue is confirmed, arrange a **free replacement** under our **3-year warranty**.

**We're here to help.**

### ⚠ Medical Reminder

If you have diabetes, neuropathy, poor circulation, or reduced sensation in your feet, we recommend consulting your physician before using this product. Children should be supervised by an adult when using it.



# Why the edges have no temperature

## Safety design and working principle

☑ This is not a defect — it is intentionally designed this way

Many users notice when first turning on the product that the **outermost edges (especially left and right) are barely warm or feel cold**. This is normal, not a malfunction.

⌘ First, understand how the product works

This product does not directly bake the soles of your feet. Its heating method is:

- 1 The internal heating panel first heats the **air inside the unit**.
- 2 Heat that would travel downward is **reflected upward** by an aluminum plate, reducing heat loss.
- 3 Heat that would rise upward is trapped by the **thermal blanket**, preventing it from escaping into the room.
- 4 Thus, a warm "cocoon" forms under the blanket; the internal air circulates and gradually warms the entire solid wood panel — including the edges.

In short: **First heat the air, then the air heats the panel**. This provides warm, non-dry, quiet, fan-free heat, but it takes some time for the internal air to become fully warm.

❓ Why are the edges especially cool?

For safety, the heating panel is **smaller than the solid wood panel**. On each side (left, right, front, back) we leave about **2 inches (approx. 5 cm)** of safety margin — an area without heating elements.

# Why the edges have no temperature

### ① Why the safety margin exists

**Why?** To prevent the heating panel's heat from being directly conducted to the outer frame, which could overheat the solid wood edge, potentially damaging the frame or creating a safety hazard.

**Will the edges ever become warm?** Yes, but they need time.

- **Right after power-on**, only the central area is warm; the edges are cool.
- **After covering with the thermal blanket**, heat is trapped and the internal air gradually warms up. When the internal air is fully heated, it fills the entire space under the panel, and heat spreads evenly through the solid wood — the edges then slowly become warm.
- **This takes a while** — please be patient. The time needed varies with room temperature.

### 00 In normal use, you probably won't even notice the edges are cool

This product is sized for **single person use**. In normal use, your feet rest naturally in the **central area** of the footrest — the part where the heating elements are. The edges are outside your foot contact area; you won't feel them with your soles unless you deliberately move your feet outward or touch the edges with your hands. For normal warming, the edges do not affect your experience.



# Why the edges have no temperature

### 🔗 How to help the edges warm up faster

- **Always use the included thermal blanket** (without it, heat escapes quickly and the edges may stay cool).
- **Set a suitable temperature**: start with 110°F (45°C) and adjust to your comfort.
- **Be patient** — avoid lifting the blanket frequently to check.

The solid wood panel warms up during operation. Please avoid placing heat-sensitive items such as plastics, electronics, or paper directly on the heating surface to prevent accidental damage.

### ✓ Summary

- Cool edges are **not a defect** — they are an intentional safety design.
- The product works by **heating the internal air** — it takes time for the heat to become uniform.
- For a single user, feet placed in the middle **barely feel the cooler edges**.
- If after following the above (use blanket, set 110°F, wait patiently) the entire panel remains completely cold for a long time, please contact our after-sales support.

# How to use the thermal blanket

Core accessory, correct use, safety tests, power cord, cleaning

### ☉ The blanket is not a free gift — it is a core component

#### Why your feet (and not just the soles) need it

This footrest delivers heat primarily from below — your soles warm up against the solid wood panel, but your insteps remain exposed to cool air. Without a cover, the result is often **warm soles but cold feet on top**.

That's exactly why we include this **thermal blanket** with every unit. When you cover your feet properly with the blanket, the heat stays trapped underneath. Instead of just warming your soles, the warm air fills the entire space around your feet — **insteps, ankles, and even your lower legs are wrapped in gentle, even warmth**. Your whole feet feel warm, not just the bottoms.

Once the blanket is on, it's like a **personal foot sauna**: the heat circulates gently, wrapping every part of your feet in consistent, soothing warmth. No fan-blown dry air, no harsh heat that makes you pull away — just **that deep, comfortable warmth that starts at your soles, rises to your ankles, and even reaches between your toes**. It's the kind of cozy warmth that makes you want to keep your feet right where they are.

**Simply put: without the blanket, heat stays on the soles. With the blanket, heat wraps your entire feet — warm, not dry, like a gentle foot sauna.**

# How to use the thermal blanket

### ☞ How to use the blanket correctly

- 1 Place your feet **directly on the solid wood panel** (you can be barefoot or wear socks).
- 2 **Cover your feet** with the thermal blanket, making sure it completely covers your feet and the top area of the footrest.
- 3 Let the blanket edges hang down naturally, creating a relatively enclosed "warm cocoon".

In this way, hot air circulates under the blanket, and your feet feel like they are **in a gentle sauna** — warm, not dry, no blowing air — very comfortable.

### 🛡 About safety — we have done extreme tests

Some users worry: Isn't it a safety hazard to put a blanket on top of a heating device?

Our design addresses this concern:

**Core material: mica ore — the same material used in electric vehicle battery packs**

This is the **most expensive and most important component** of the product. The heating panel's insulation is made of **mica ore — the same material used in EV battery pack thermal barriers**.

Why we chose this material?

- **Exceptional heat resistance:** Mica ore can withstand temperatures far exceeding this product's maximum operating temperature (160°F / 70°C), providing a substantial safety margin.
- **Superior insulation:** Mica is a naturally excellent electrical insulator, effectively isolating current and heat, preventing leakage or abnormal heat conduction.

# How to use the thermal blanket

### 🔒 Mica safety & other safety features

- **Inherently flame-resistant:** Mica ore is an inorganic mineral — it does not readily support combustion. Even under prolonged heating, it maintains its structural integrity and does not release toxic fumes.
- **No aging:** Unlike plastic insulators, mica ore does not become brittle or degrade under long-term high temperatures. Its performance remains stable throughout the product's lifespan.

In short, we brought **EV-grade safety insulation** into this footrest.

### Other safety design features:

- The internal heating panel is **fully enclosed**, isolated from the outside.
- There is a **solid wood frame** between the heating panel and the blanket — no direct contact.
- The blanket never touches any electrical wires or the heating element.

### 🔥 Extreme test validation

We conducted an even stricter test: in a lab environment, we wrapped the unit completely with a dry cotton cloth soaked in alcohol (a material far more flammable than a blanket), set the temperature to maximum (160°F / 70°C), and ran it continuously for **168 hours (7 days)**. During the test, the unit worked normally and the cloth showed no signs of fire, melting, or abnormal overheating.

This was a laboratory extreme test. For daily use, please follow the instructions in this manual.

# How to use the thermal blanket

### 🔌 Power cord: we didn't skimp here either

A common complaint on many heating devices (especially foot warmers) is that **the plug gets hot, burns, or even melts**. The root cause is usually a power cord that is too thin or uses low-grade insulation.

On this footrest, we went far beyond the norm:

- **Much thicker than typical cords**: The outer diameter is over 50% thicker than most high-wattage heating appliances, and it uses a **3-core (live, neutral, ground)** design.
- **UL & cUL certified**: Passed rigorous US and Canadian safety tests — **UL File No. E513293** — with high heat resistance and reliable flame performance.
- **Generous length**: Approximately **7 feet (2.1 meters)** — you can reach your desk outlet without an extension cord.

### 🔌 Power cord (continued)

- **Designed to prevent plug burnout**: Thick conductors + high-quality plug terminals reduce electrical resistance — even after hours of maximum-temperature use, we observed no significant overheating.

**We don't want you to ever experience a hot or burnt plug.** This power cord is part of our "give the best we can" philosophy — we put money into the parts you can't see, too.



# How to use the thermal blanket

### 🕒 How to wash the blanket

The blanket is **machine washable**. Use a normal cycle, then **air dry** before reuse. Do not use bleach.

### ⚠ FIRE HAZARD WARNING

Please keep the blanket and plush pad away from open flames, candles, fireplaces, and any other ignition sources at all times. This solid wood heated footrest generates heat — not fire. However, like any fabric product, the blanket and pad are made of combustible materials and will ignite if exposed to direct flame. This is a natural property of all non-fire-retardant textiles, not a product defect or quality issue.

That ' s why we take compliance and safety seriously. We ' ve had both the blanket and plush pad tested at a CPSC-accredited lab under GCC (General Certificate of Conformity) requirements for textile flammability — 16 CFR Part 1610. All test reports and GCC documentation are properly retained and filed, fully compliant with U.S. market entry requirements.

We chose not to treat these fabrics with chemical flame retardants just to force a passing grade — because that would make them stiffer, less breathable, and far less comfortable against your skin. We believe a clear safety reminder is a better way to keep you safe while preserving the soft, cozy feel your feet deserve.

At the end of the day, this footrest gives you warmth — not a fire hazard. We care about your safety, and we want you to use it with complete peace of mind.

### Usage Tips & Additional Scenarios

Wearing socks, drying small items, pet warm nest

#### ☆ Our recommended way to use it

After extensive testing, we found the setup that delivers the **fastest, most even heat** is:

**Thick cotton socks + solid wood panel (no plush pad) + thermal blanket + your preferred temperature = Warmth from soles to insteps, with fast, even heat that wraps your entire feet**

This setup provides the most direct heat transfer. Your socks get gently warmed too, holding the heat around your feet — comfortable, not drying. It works well for most daily use.

Of course, this is just what we recommend. Feel free to adjust anything — with or without socks, with or without the plush pad, higher or lower temperature — whatever feels best for you. The product works great either way.

#### 🔔 When your feet are really cold — here's a tip

If your feet are freezing or the room is particularly cool, you can set the temperature directly to maximum **160°F / 70°C** right after power-on. This allows the unit to heat up quickly, shortening the time needed to warm the internal air and quickly chasing away the chill from your soles.

Once you feel the warmth building up (usually within a few minutes), simply lower the temperature to whatever feels comfortable.

#### 🔔 Quick-heat tip (continued)

This is an optional quick-heat tip — feel free to use it when you need a fast warm-up, or skip it and use the product as you normally would.

# Usage Tips & Additional Scenarios

### About wearing socks

We recommend wearing socks when using this product, especially thicker cotton ones. Since the unit can also serve as a small drying station, your socks will be gently warmed — and when you wear them, that warmth wraps around your feet, making the whole experience extra cozy and long-lasting.

That said, you can absolutely use it barefoot — it is perfectly safe. The only difference is that bare feet tend to feel the heat more directly, which some people find less soft and gentle compared to wearing socks. Use it whichever way feels best for you — comfort is what matters most.

### Drying small items

Beyond foot warming, the powerful heating capability and open flat surface also allow this product to serve as a small drying station.

Place small cotton items such as socks or gloves flat on the heating panel, and adjust the temperature to a suitable level based on the material. No blanket needed. Do not stack items thickly. Not recommended for thick coats, down jackets, leather, plastics, or any heat-sensitive materials that may be damaged by heat. Supervision is recommended while in use.

### Pet warm nest

Place the plush pad on the heating panel, set temperature to low-medium (recommended starting at 110°F / 45°C), test the panel temperature by hand to ensure it is not too hot, then let your pet use it. We recommend covering with the thermal blanket to maintain steady warmth, with supervision at all times. Do not allow pets to chew on the power cord.

The clear varnish on this product has passed the U.S. CPSC 16 CFR Part 1303 lead content test for surface coatings - the federal safety standard for household furniture finishes. It contains no lead, no benzene, no formaldehyde, no mercury, no arsenic, and no harmful heavy metals - so even if your pet occasionally chews on the wood surface, they will not be exposed to toxic substances from the finish.

Bite marks or surface scratches from pets are physical cosmetic damage and do not affect the unit's heating function. If a functional issue occurs later - even if the wood frame shows signs of pet chewing - our warranty still applies, because we warranty function, not cosmetics.

For a full explanation of the varnish finish, see page 21.

# Usage Tips & Additional Scenarios

### Why is there a clear varnish finish?

This product is made from natural solid wood. Wood is a porous material with tiny pores and grain on its surface. Without any treatment, it can absorb moisture over time, leading to warping or cracking, and everyday stains would be difficult to clean.

That's why we apply a layer of clear varnish to the solid wood surface. It is transparent — it does not hide the natural grain and color of the wood. What you see is the wood's natural beauty.

### What the varnish does

**The varnish serves several purposes:**

- It seals the wood's surface pores, preventing moisture from seeping in and reducing the risk of warping or cracking over time.
- It makes the surface resistant to stains and easy to clean — spills and smudges wipe off with a soft cloth.
- It forms a protective layer that helps retain warmth, adding a little extra insulation.
- It contains no formaldehyde and, once fully cured, remains stable under heat — it will not melt or become sticky, even at elevated temperatures.

### How it performs under heat

Under normal operating temperatures (up to **160°F / 70°C**), the varnish remains completely stable and will not cause any issues.

In the unlikely event of extreme heat (far beyond normal use), the varnish may crack and flake off like a brittle shell — it will not melt and stick to your skin. This is a characteristic of varnish as a thermosetting coating: it becomes brittle and peels away, rather than turning into a sticky liquid.

If this ever happens, simply let the unit cool down and wipe away the flakes. Of course, such extreme heat will not occur during normal use — we just want you to know that even in an unlikely extreme situation, it would not cause harm.

# Plush foot pad – purpose and care

Why it exists, usage advice, heat impact, cleaning

## 🕒 Why does it exist?

Many users of our first-generation product told us that the solid wood panel felt **too hard and uncomfortable** under their feet.

We listened to every customer. To make the foot-resting experience softer and more comfortable, we added this **plush foot pad**.

## ☆ Main purpose: improve resting comfort

When you use the product simply **as a regular footrest** (heating off or you don't care about heating speed), placing this plush pad on top makes the surface feel very soft and warm — like stepping on a cloud.

## 🔧 What to keep in mind when using it with the heater on

The plush pad has thickness and filling to provide enough support and softness. **Any material with thickness will block heat conduction.**

Our tests show the pad blocks about **44% of the heat**. This is not a product defect — it's physics: to get support and softness, some heat transmission must be sacrificed.

- If you **prioritise heating speed and efficiency**, we recommend **not using** the plush pad. Place your feet directly on the solid wood panel (with or without socks) and use the blanket.
- If you **prioritise softness underfoot** and don't mind slower heating, you may use the pad.

# Plush foot pad – purpose and care

### 🔔 Using the pad (continued)

If you do use the pad, we recommend setting the temperature to maximum (160°F / 70°C) and covering with the thermal blanket. Please note: **The solid wood panel under the pad will become significantly hotter than usual.** This is normal because the pad traps heat on the panel surface.

We have run long-duration tests (over **72 hours continuously**) and the product worked stably without any safety issues.

### 🧼 Cleaning and care

- The plush pad can be **hand-washed or machine washed on a gentle cycle** using cool or warm water and mild detergent.
- **Air dry** after washing — do not expose to direct sunlight or machine dry.
- Avoid prolonged soaking and do not use bleach.

### ⚠ FIRE HAZARD WARNING

Please keep the blanket and plush pad away from open flames, candles, fireplaces, and any other ignition sources at all times. This solid wood heated footrest generates heat — not fire. However, like any fabric product, the blanket and pad are made of combustible materials and will ignite if exposed to direct flame. This is a natural property of all non-fire-retardant textiles, not a product defect or quality issue.

That 's why we take compliance and safety seriously. We ' ve had both the blanket and plush pad tested at a CPSC-accredited lab under GCC (General Certificate of Conformity) requirements for textile flammability — 16 CFR Part 1610. All test reports and GCC documentation are properly retained and filed, fully compliant with U.S. market entry requirements.

We chose not to treat these fabrics with chemical flame retardants just to force a passing grade — because that would make them stiffer, less breathable, and far less comfortable against your skin. We believe a clear safety reminder is a better way to keep you safe while preserving the soft, cozy feel your feet deserve.

At the end of the day, this footrest gives you warmth — not a fire hazard. We care about your safety, and we want you to use it with complete peace of mind.



## Warranty policy

3-year whole-unit warranty, claim process, replacement, abuse prevention

### 🔗 3-year whole-unit warranty — longer than the industry standard

To give you complete peace of mind, we offer a **3-year whole-unit warranty** — longer than most heating devices. As long as the failure is not caused by human damage, we will take responsibility.

### ☰ Warranty coverage by time period

| Period                                                                                                       | Coverage                                                                                                                        |
|--------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
|  Within 30 days of delivery | Refer to Amazon's return policy for the return or exchange process.                                                             |
|  30 days – 3 years         | Free replacement for quality defects. We ship a new unit via Amazon expedited shipping; you do not need to return the old unit. |

### ⓘ How to reach us

Amazon's **·Contact Seller·** button in your order history is only available within 30 days of delivery. After that, please reach us through our storefront:

- |                                                                                           |                                                                                                            |
|-------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| <b>1 Visit a Product Page</b><br>Go to any Linecreate product listing on Amazon.          | <b>2 Click the Brand Name</b><br>Find <b>·Linecreate·</b> under the <b>·Sold by·</b> section and click it. |
| <b>3 Enter Our Storefront</b><br>This takes you directly to our official Storefront page. | <b>4 Ask a Question</b><br>Click <b>·Ask a question·</b> to send us a message anytime.                     |

 We reply within **24 hours**

### ⓘ What is NOT covered?

- Human-caused damage (dropping, water damage, disassembly, modification, etc.)
- Power cord cut by a pet, crushed by a chair, or other physical damage

## Warranty policy

### ✉ How to request warranty service

If you believe the product is **defective** (e.g., does not heat, does not turn on), please contact us through Amazon and provide the following information. This helps us quickly verify your claim and process your **replacement without unnecessary delays**.

#### 1 Photos showing the problem (3 clear photos, do not edit or filter)

Please include:

- One photo of the power cord and plug condition
- One photo of the full unit showing the overall condition
- One photo of the control panel display

These photos help us confirm that the unit has been used under normal conditions and shows no signs of human-caused damage, such as forced disassembly or physical abuse.

#### 2 Your **Amazon order number**

This can be found in your order history. It helps us verify your purchase date and confirm that your unit is still within the **3-year warranty period**.

#### 3 Your shipping address

Please provide the full address where you would like the replacement unit to be delivered. We ship from the nearest Amazon warehouse using expedited shipping, so please double-check that your address is correct.

After we review your photos and confirm the failure, we will **process your replacement**. If you have any questions about this process, feel free to reach out through Amazon's messaging system. We reply within **24 hours**.

### ✓ Replacement process — you do not need to return the old unit

To save you the trouble of shipping back the defective unit, we **pre-pack and store complete new units in Amazon warehouses**. Once your warranty claim is approved:

- We will ship from the nearest Amazon warehouse using **Amazon expedited shipping**.
- You will receive a **brand-new complete set** (including a new blanket and plush pad).

# Warranty policy

### ✓ Replacement (continued)

— You pay nothing, and you do not need to return the old unit.

### 🛡 Abuse prevention - two simple confirmation steps

We trust that the vast majority of users are honest and reasonable. However, as a brand serving global buyers, we inevitably encounter a few who try to abuse the warranty policy. Therefore, after we approve your replacement, we will ask you to complete both of the following steps to confirm the old unit will not be reused:

- 1** We'll simply ask you to **cut the power cord** - right at the ribbed rubber section where the cord meets the plug, not in the middle. Cutting as close to the plug as possible removes the plug entirely and makes it very difficult to repair.
- 2** Then just **take a clear photo** showing the cut area and the remaining plug, and send it to us. This helps us confirm the old unit has been properly decommissioned.

Both steps help us confirm the old unit has been fully decommissioned. This prevents it from being resold or repaired, and helps us continue offering free replacements to genuine customers.

*Thank you for your understanding. This is not distrust - it is how we keep the 3-year warranty sustainable and beneficial for every honest customer.*

### ✉ How to reach us

Please contact us through Amazon's "**Contact Seller**" messaging system. If you are within 30 days of delivery, find this option in your order history under the relevant order. If more than 30 days have passed, go to any Linecreate product page, click the brand name under "**Sold by**" to enter our Storefront, and click "**Ask a question.**"

**We reply within 24 hours.**

## Our Heartfelt Message

### ♡ A Note from Us

Thank you for taking the time to read through this manual. We know it's long, and we know your **time is valuable**.

We wrote it this way because the manual for our second-generation product was too brief - it left many users staring at the control panel with no idea which button to press, how to adjust the temperature, or how to set the timer. We listened to every piece of feedback, and for the third generation, we decided to address every question before it was even asked.

That's why we included a table of contents. You don't have to read it all - just jump to the section you need. Chapter 2 if you want to know how to adjust the temperature. Chapter 7 if you're looking for warranty details. Read what you need, skip what you don't. And if you read the whole thing, **we truly appreciate it**.

We hope this manual helps you get the most out of your product. Your time is precious - so we made sure **every word counts**.

And finally, we want you to know: we're just a small team, a few young people who recently graduated. We don't have the resources of a big company, but we do have one thing - **the determination to make a product we're truly proud of**. That's why every manual, every reply, and every detail matters to us.

And finally, from the bottom of our hearts - **thank you**.

Out of so many choices, you picked us. That trust means more to us than we can put into words - and **we will not take it lightly**.

Your choice gives our small team a reason to keep moving forward. We take every piece of feedback seriously, and we will always keep improving - both our products and our service.

We hope that when you use our product, you feel something more than just warmth on your feet. We hope you feel that **someone actually cares** - not because you bought from us, but because your experience genuinely matters to us. Every detail in this product, and every word in this manual, is our way of honoring your trust in us.

We hope that when you use it, you feel more than just warmth on your feet - you feel **the quiet confidence of having made the right choice**.

Once again - **thank you**. Truly.

## Your Voice Matters

### ☺ We'd like to invite you to do one thing

If you have any thoughts while using this product – whether you're happy with it, not quite satisfied, or feel something could be better – we genuinely hope you'll share them.

Your honest feedback helps other customers decide if this product is right for them, and it helps us make this product better.

You can leave your experience through Amazon's "**Customer Reviews**" feature. We'd love to hear from you.

A N O T E   B E F O R E   Y O U   G O

---

Warmth, crafted from solid wood  
and quiet air — for the moments  
when your feet deserve a little  
kindness.

---

— L I N E C R E A T E —





# Linecreate

Solid Wood Heated Footrest

---

CRAFTED FOR WARMTH · 2025

◆ THANK YOU FOR CHOOSING LINECREATE ◆