

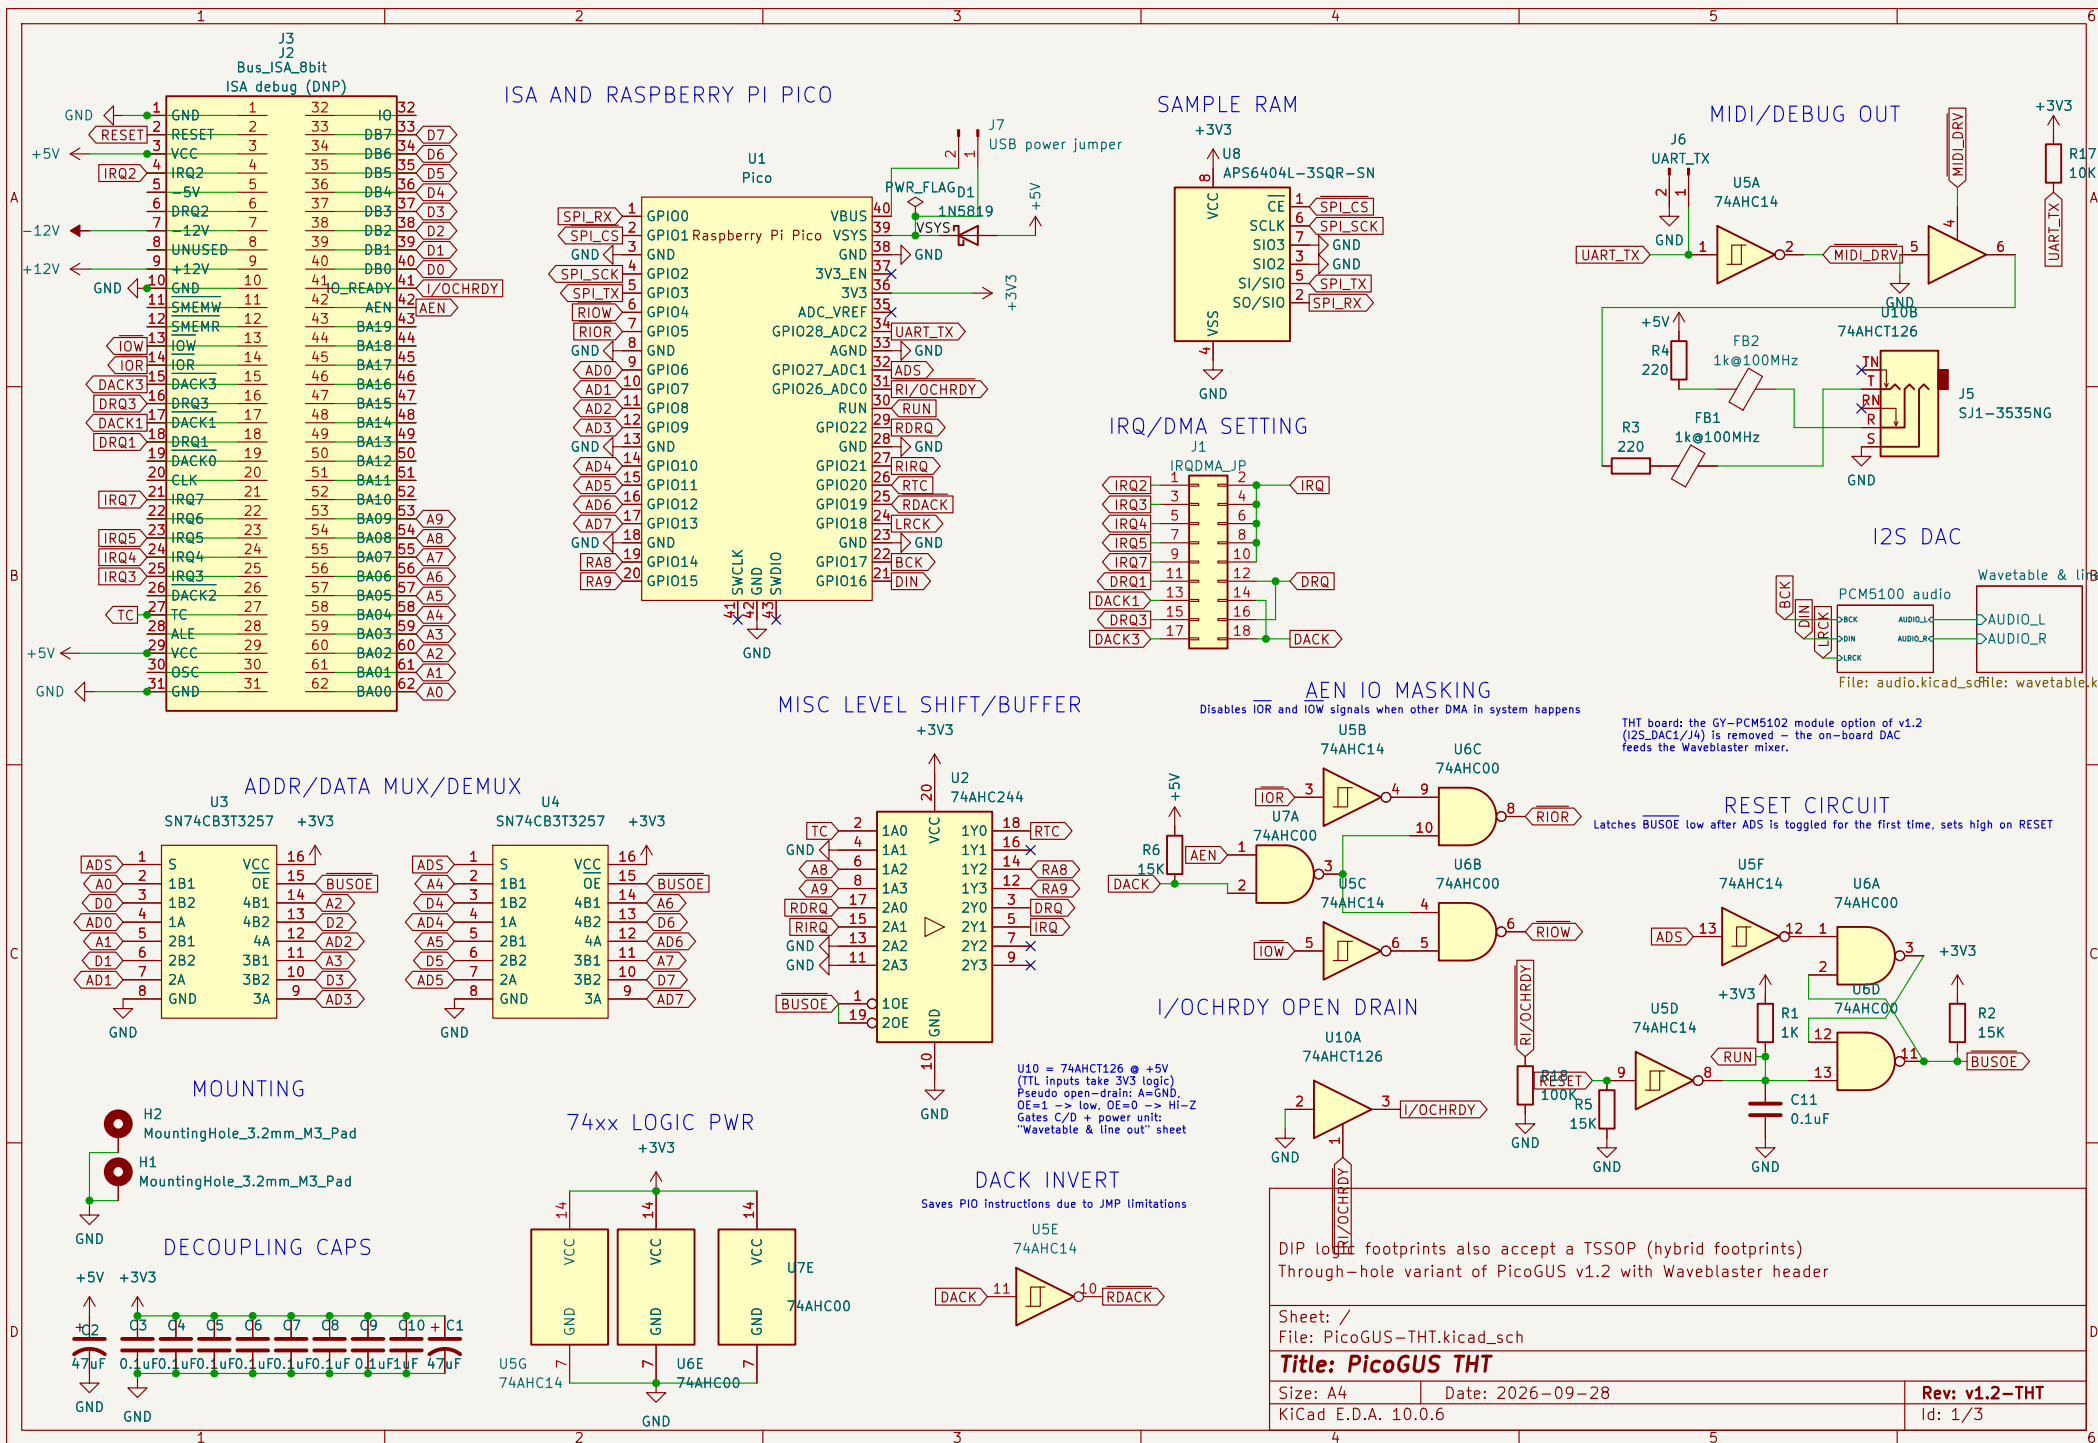
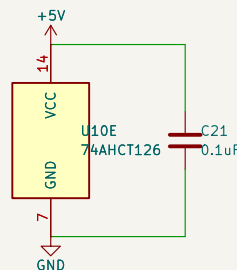






Id: 2/3


Both outputs are pseudo open-drain (A=GND, OE drives) with pull-ups to +3V3, so the daughterboard never sees 5 V on /RESET or MIDI (some DBs have 3.3 V inputs).
/RESET: low while ISA RESET is high. MIDI: same data as the MIDI-out jack (MPU-401 UART).



RV1 (dual 10k log) sets the WT level: pins 3/6 = CW end (signal), 1/4 = C CW end (GND). U11 sums PCM and WT at unity gain (inverting, 10k/10k) - no level loss, and the WT knob does not change the PCM level. C22/C23 block DC from the DB, R14/R15 keep them discharged when no DB is fitted. Output: 100R, DC-coupled like v1.2.

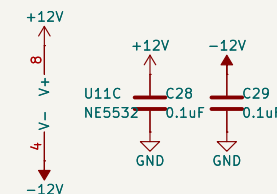

U7 SPARE GATES (74AHC00)

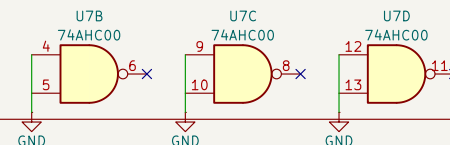

Id: 3/3